



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	4
2.1 Transmission layout	4
3 Calculating overall ratio "i"	6
3.1 Calculating overall ratio "i"	6
4 General repair instructions	6
4.1 General repair instructions	6
30 - Clutch	9
1 Servicing clutch control	9
1.1 Servicing clutch control	9
1.2 Assembly overview - Pedal cluster	11
1.3 Removing and installing clutch pedal	13
1.4 Assembly overview - Hydraulics and clutch release	14
1.5 Removing and installing over-centre spring	19
1.6 Bleeding clutch system	21
2 Servicing clutch	23
2.1 Servicing clutch	23
34 - Controls, Housing	29
1 Servicing gear selector mechanism	29
1.1 Servicing gear selector mechanism	29
1.2 Installation position of gear selector mechanism (gear stick must be depressed to select reverse gear)	30
1.3 Removing and installing gear stick housing	34
1.4 Removing and installing selector rods and gate rod	37
1.5 Removing and installing gear stick	45
1.6 Removing and installing cover for gear stick housing	50
1.7 Removing and installing selector mechanism	51
1.8 Adjusting gear selector mechanism	53
1.9 Installation position of gear selector mechanism (the gear stick is not depressed to select reverse gear)	56
1.10 Removing and installing gear stick housing	58
1.11 Removing and installing selector rods and gate rod	60
1.12 Removing and installing gear stick	64
1.13 Removing and installing selector mechanism	68
1.14 Adjusting gear selector mechanism	70
2 Removing and installing gearbox	73
2.1 Removing and installing gearbox	73
2.2 Differences between Transporter with long and short front end from January 1996	73
2.3 Removing and installing gearbox (Transporter with short front end)	76
2.4 Removing and installing gearbox (Transporter with long front end)	88
3 Checking gearbox oil	102
3.1 Checking gearbox oil	102
4 Dismantling and assembling gearbox	103
4.1 Dismantling and assembling gearbox	103
4.2 Assembly overview	103
4.3 Removing and installing gearbox housing and selector mechanism	108
4.4 Dismantling and assembling input shaft, output shaft (pinion shaft), differential and selector rods	110



4.5	Assembly sequence	114
5	Servicing gearbox housing	121
5.1	Servicing gearbox housing	121
5.2	Servicing gearbox housing for vehicles with engines up to 103 kW	121
5.3	Servicing gearbox housing for vehicles of 111 kW and above	128
6	Servicing clutch housing	134
6.1	Servicing clutch housing	134
6.2	Servicing clutch housing for vehicles with engines up to 103 kW	134
6.3	Servicing clutch housing for vehicles with engines of 111 kW and above	141
7	Dismantling and assembling selector mechanism on gearbox side	148
7.1	Dismantling and assembling selector mechanism on gearbox side	148
35 - Gears, Shafts		151
1	Dismantling and assembling input shaft	151
1.1	Dismantling and assembling input shaft	151
2	Adjusting input shaft	163
2.1	Adjusting input shaft	163
2.2	Performing measurement check	165
3	Dismantling and assembling output shaft	166
3.1	Dismantling and assembling output shaft	166
4	Adjusting output shaft	192
4.1	Adjusting output shaft	192
4.2	Determining shim S1	193
4.3	Determining shim S2	194
5	Removing and installing reverse gear wheel	197
5.1	Removing and installing reverse gear wheel	197
39 - Final drive, Differential rear		200
1	Removing and installing seal for intermediate shaft or flange shaft	200
1.1	Removing and installing seal for intermediate shaft or flange shaft	200
2	Dismantling and assembling differential for vehicles with engines up to 103 kW	205
2.1	Dismantling and assembling differential for vehicles with engines up to 103 kW	205
3	Dismantling and assembling differential for vehicles with engines of 111 kW and above	222
3.1	Dismantling and assembling differential for vehicles with engines of 111 kW and above	222
4	Adjustment overview	238
4.1	Adjustment overview	238
5	Adjusting differential	239
5.1	Adjusting differential	239
5.2	Adjusting differential for vehicles with engines up to 103 kW	239
5.3	Adjusting differential on vehicles with engines of 111 kW and above	243