



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Rear final drive identification	7
2.1 Rear final drive identification	7
2.2 Code letters, assembly allocation, ratios, capacities	8
3 Transmission layout	12
3.1 Transmission layout	12
4 Calculating overall ratio "i"	14
4.1 Calculating overall ratio "i"	14
5 Notes on performance test, brake test and towing	14
5.1 Notes on performance test, brake test and towing	14
6 General repair instructions	14
6.1 General repair instructions	14
30 - Clutch	17
1 Servicing clutch control	17
1.1 Servicing clutch control	17
1.2 Assembly overview - Pedal cluster - Hydraulic clutch control	19
1.3 Removing and installing clutch pedal - Hydraulic clutch control	22
1.4 Assembly overview - Hydraulic system	23
1.5 Removing and installing slave cylinder for vehicles with short front end	26
1.6 Removing and installing slave cylinder for vehicles with long front end	30
1.7 Bleeding clutch system	33
1.8 Assembly overview - Pedal cluster - Mechanical clutch control	34
1.9 Removing and installing over-centre spring	37
1.10 Removing and installing clutch pedal - Mechanical clutch control	38
1.11 Assembly overview - Mechanics	39
1.12 Removing and installing clutch cable	43
2 Servicing clutch release mechanism	46
2.1 Servicing clutch release mechanism	46
3 Servicing clutch	49
3.1 Servicing clutch	49
34 - Controls, Housing	56
1 Servicing gear selector mechanism	56
1.1 Servicing gear selector mechanism	56
1.2 Installation position of gear selector mechanism	56
1.3 Removing and installing gear stick housing	58
1.4 Removing and installing gear stick	61
1.5 Removing and installing selector and gate rods	64
1.6 Removing and installing selector mechanism	73
1.7 Adjusting gear selector mechanism	76
2 Removing and installing operating elements for differential lock and freewheel	78
2.1 Removing and installing operating elements for differential lock and freewheel	78
2.2 Removing and installing valve for operating differential lock and warning light	78
2.3 Removing and installing actuator for differential lock	79
2.4 Adjusting differential lock	80
2.5 Removing and installing actuator for freewheel lock	80
3 Differential and freewheel pipes and hoses routing diagram	82
3.1 Differential and freewheel pipes and hoses routing diagram	82



3.2	Routing diagram for vehicles with petrol engine	83
3.3	Routing diagram for vehicles with diesel engine	95
4	Removing and installing gearbox	104
4.1	Removing and installing gearbox	104
4.2	Differences between Transporter with long and short front end from 01.96	105
4.3	Removing and installing gearbox for vehicles with short front end	106
4.4	Removing and installing gearbox on vehicles with long front end	129
5	Removing and installing bevel box	146
5.1	Removing and installing bevel box	146
6	Checking oil in manual gearbox with bevel box	153
6.1	Checking oil in manual gearbox with bevel box	153
7	Dismantling and assembling gearbox	155
7.1	Dismantling and assembling gearbox	155
7.2	Assembly overview	155
7.3	Removing and installing cover for gearbox housing and 5th gear	156
7.4	Removing and installing gearbox housing and selector mechanism	159
7.5	Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	161
7.6	Assembly sequence	164
8	Servicing gearbox housing	180
8.1	Servicing gearbox housing	180
9	Servicing clutch housing	184
9.1	Servicing clutch housing	184
10	Dismantling and assembling gearbox selector mechanism	192
10.1	Dismantling and assembling gearbox selector mechanism	192
11	Dismantling and assembling selector forks	197
11.1	Dismantling and assembling selector forks	197
35 - Gears, Shafts		204
1	Dismantling and assembling input shaft	204
1.1	Dismantling and assembling input shaft	204
2	Adjusting input shaft	216
2.1	Adjusting input shaft	216
2.2	Table of adjustment shims	218
2.3	Performing measurement check	220
3	Dismantling and assembling output shaft (pinion shaft)	221
3.1	Dismantling and assembling output shaft (pinion shaft)	221
3.2	From gearbox build date 04 09 0 the synchronisation for 1st gear has been modified	246
4	Adjusting output shaft	250
4.1	Adjusting output shaft	250
5	Dismantling and assembling reverse shaft	253
5.1	Dismantling and assembling reverse shaft	253
39 - Final drive, Differential rear		259
1	Removing and installing seal for drive flange or flange shaft	259
1.1	Removing and installing seal for drive flange or flange shaft	259
1.2	Removing and installing oil seal for left-hand flanged shaft	259
1.3	Removing and installing oil seal for right drive flange	263
2	Renewing bevel box output flange seal	267
2.1	Renewing bevel box output flange seal	267
3	Dismantling and assembling differential	269
3.1	Dismantling and assembling differential	269
4	Adjustment overview	283
4.1	Adjustment overview	283



5	Adjusting differential	284
5.1	Adjusting differential	284
6	Dismantling and assembling bevel box	286
6.1	Dismantling and assembling bevel box	286
6.2	Assembly overview	287
6.3	Dismantling and assembling sequence	295
7	Adjusting shaft bevel gear and bevel gear (gear set)	309
7.1	Adjusting shaft bevel gear and bevel gear (gear set)	309
7.2	General notes	309
7.3	Adjusting and marking of gear sets	310
7.4	Position of shims	313
7.5	Adjustment overview (bevel box)	313
7.6	Determining shaft bevel gear installation position (actual measurement)	314
7.7	Recommended sequence for adjusting gear set	314
7.8	Determining shim "S4" thickness when replacing output flange	315
7.9	Adjusting shaft bevel gear	316
7.10	Adjusting bevel gear	321
8	Removing and installing 2-section propshaft	324
8.1	Removing and installing 2-section propshaft	324
8.2	Removing and installing 2-part propshaft underfloor mountings	327
9	Removing and installing 3-section propshaft	328
9.1	Removing and installing 3-section propshaft	328
9.2	Removing and installing 3-section propshaft underfloor mounting	331
10	Servicing 2-section propshaft	335
10.1	Servicing 2-section propshaft	335
11	Servicing 3-section propshaft	348
11.1	Servicing 3-section propshaft	348
12	Checking function of viscous coupling	362
12.1	Checking function of viscous coupling	362
13	Removing and installing viscous coupling	363
13.1	Removing and installing viscous coupling	363
14	Removing and installing viscous coupling oil seal in rear final drive (final drive installed) ..	365
14.1	Removing and installing viscous coupling oil seal in rear final drive (final drive installed) ..	365
15	Removing and installing flange shaft or drive flange oil seal (final drive installed)	366
15.1	Removing and installing flange shaft or drive flange oil seal (final drive installed)	366
15.2	Renewing right-hand flange shaft oil seal	366
15.3	Renewing left drive flange seal	369
16	Functional check of freewheel	373
16.1	Functional check of freewheel	373
17	Functional check of freewheel lock	373
17.1	Functional check of freewheel lock	373
18	Removing and installing rear final drive	374
18.1	Removing and installing rear final drive	374
19	Checking rear final drive oil	377
19.1	Checking rear final drive oil	377
20	Dismantling and assembling rear final drive	378
20.1	Dismantling and assembling rear final drive	378
20.2	Removing and installing viscous coupling and pinion housing	379
20.3	Removing and installing differential lock and freewheel lock	381
20.4	Removing and installing input shaft bevel gear and differential lock control	386
20.5	Assembly sequence	390
21	Dismantling and assembling differential and freewheel (assembly overview)	401
21.1	Dismantling and assembling differential and freewheel (assembly overview)	401



22	Dismantling and assembling differential (assembly sequence)	405
22.1	Dismantling and assembling differential (assembly sequence)	405
23	Removing and installing freewheel (sequence)	409
23.1	Removing and installing freewheel (sequence)	409
24	Dismantling and assembling freewheel (sequence)	410
24.1	Dismantling and assembling freewheel (sequence)	410
25	Servicing shaft bevel gear bearings	411
25.1	Servicing shaft bevel gear bearings	411
25.2	Assembly overview	411
25.3	Assembly sequence	413
26	Servicing input shaft bevel gear bearings	419
26.1	Servicing input shaft bevel gear bearings	419
26.2	Assembly overview	419
26.3	Assembly sequence	427
27	Dismantling and assembling differential lock controls	434
27.1	Dismantling and assembling differential lock controls	434
28	Adjusting bevel gear and shaft bevel gear (gear set)	436
28.1	Adjusting bevel gear and shaft bevel gear (gear set)	436
28.2	General notes	436
28.3	Adjusting and marking of gear sets	436
28.4	Position of shims	439
28.5	Adjustment overview (rear final drive)	439
28.6	Determining shaft bevel gear installation position (actual measurement)	440
28.7	Recommended sequence for adjusting gear set	440
28.8	Adjusting shaft bevel gear	441
28.9	Adjusting bevel gear	446