



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Code letters, allocation, ratios, capacities	1
<b>2 Identifying rear final drive</b>	<b>3</b>
2.1 Location on final drive	3
2.2 Code letters, allocation, ratios, capacities	3
<b>3 Overview - power transmission</b>	<b>5</b>
<b>4 Calculating overall gear ratio "i"</b>	<b>7</b>
<b>5 Notes on performance test</b>	<b>8</b>
<b>6 General repair instructions</b>	<b>9</b>
6.1 Components	9
<b>30 - Clutch</b>	<b>11</b>
<b>1 Repairing clutch mechanism</b>	<b>11</b>
1.1 Assembly overview - pedal cluster	12
1.2 Removing and installing clutch pedal	13
1.3 Assembly overview - hydraulics and clutch release mechanism	13
1.4 Removing and installing over-centre spring	15
1.5 Bleeding clutch system	16
<b>2 Repairing clutch</b>	<b>18</b>
<b>34 - Controls, housing</b>	<b>21</b>
<b>1 Repairing selector mechanism</b>	<b>21</b>
1.1 Installation position of selector mechanism	21
1.2 Removing and installing selector housing	23
1.3 Removing and installing gear selector rod and gate selector rod	24
1.4 Removing and installing gear lever	30
1.5 Removing and installing cover for selector housing	32
1.6 Removing and installing selector mechanism	33
1.7 Adjusting selector mechanism	35
1.8 Installation position of selector mechanism	37
1.9 Removing and installing selector housing	39
1.10 Removing and installing gear selector rod and gate selector rod	40
1.11 Removing and installing gear lever	42
1.12 Removing and installing selector mechanism	44
1.13 Adjusting selector mechanism	46
<b>2 Removing and installing operating elements for differential lock and freewheel lock</b>	<b>49</b>
2.1 Removing and installing operating valve for differential lock and warning lamp	49
2.2 Removing and installing control element for differential lock	50
2.3 Adjusting differential lock	51
2.4 Removing and installing control element for freewheel lock	51
<b>3 Routing diagram of pipe and hose lines for differential lock and freewheel lock</b>	<b>54</b>
3.1 Routing diagram for vehicles with diesel engine	54
<b>4 Removing and installing gearbox and bevel box</b>	<b>60</b>
4.1 Removing	62
4.2 Transporting gearbox	67
4.3 Installing	68
<b>5 Removing and installing bevel box</b>	<b>72</b>
5.1 Removing	72
5.2 Installing	75



<b>6</b>	<b>Checking oil in manual gearbox with bevel box</b>	<b>77</b>
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>78</b>
7.1	Assembly overview	78
7.2	Dismantling and assembling gearbox housing and selector mechanism	80
7.3	Dismantling and assembling input shaft, output shaft, differential, bevel box and selector rods	81
7.4	Assembly procedure	82
<b>8</b>	<b>Repairing gearbox housing</b>	<b>88</b>
<b>9</b>	<b>Repairing clutch housing</b>	<b>93</b>
<b>10</b>	<b>Dismantling and assembling selector mechanism in gearbox</b>	<b>99</b>
<b>35 - Gears, shafts</b>		<b>102</b>
<b>1</b>	<b>Input shaft</b>	<b>102</b>
1.1	Dismantling and assembling input shaft	102
1.2	Adjusting input shaft	109
<b>2</b>	<b>Output shaft</b>	<b>114</b>
2.1	Dismantling and assembling output shaft	114
2.2	Adjusting output shaft	128
<b>3</b>	<b>Removing and installing gear wheel for reverse gear</b>	<b>133</b>
<b>39 - Final drive - rear differential</b>		<b>136</b>
<b>1</b>	<b>Two-part propshaft</b>	<b>136</b>
1.1	Removing and installing two-part propshaft	136
1.2	Removing and installing two-part propshaft support on underbody	138
1.3	Repairing two-part propshaft	138
<b>2</b>	<b>Three-part propshaft</b>	<b>146</b>
2.1	Removing and installing three-part propshaft	146
2.2	Removing and installing three-part propshaft supports on underbody	148
2.3	Repairing three-part propshaft	150
<b>3</b>	<b>Checking function of viscous coupling</b>	<b>159</b>
<b>4</b>	<b>Removing and installing viscous coupling</b>	<b>160</b>
4.1	Removing	160
4.2	Installing	161
<b>5</b>	<b>Renewing viscous coupling seal in rear final drive (final drive installed)</b>	<b>163</b>
<b>6</b>	<b>Renewing flange shaft or drive flange oil seals (final drive installed)</b>	<b>164</b>
6.1	Renewing seal for right flange shaft	164
6.2	Renewing left drive flange oil seal	165
<b>7</b>	<b>Checking function of freewheel</b>	<b>169</b>
<b>8</b>	<b>Checking function of freewheel lock</b>	<b>170</b>
<b>9</b>	<b>Removing and installing rear final drive</b>	<b>171</b>
9.1	Removing	171
9.2	Installing	172
<b>10</b>	<b>Checking gear oil in rear final drive</b>	<b>174</b>
<b>11</b>	<b>Dismantling and assembling rear final drive</b>	<b>175</b>
11.1	Removing and installing viscous coupling and pinion housing	176
11.2	Removing and installing differential and freewheel lock	177
11.3	Removing and installing bevel gear with stub shaft and differential lock control	179
11.4	Assembly procedure	180
<b>12</b>	<b>Dismantling and assembling differential and freewheel</b>	<b>189</b>
12.1	Assembly overview	189
12.2	Dismantling and assembling differential (procedure)	191
12.3	Removing and installing freewheel (procedure)	194
12.4	Dismantling and assembling freewheel (procedure)	195



<b>13</b>	<b>Repairing shaft bevel gear bearing</b>	<b>197</b>
13.1	Assembly overview	197
13.2	Assembly procedure	198
<b>14</b>	<b>Repairing bearing for bevel gear with stub shaft</b>	<b>203</b>
14.1	Assembly overview	203
14.2	Assembly procedure	207
<b>15</b>	<b>Dismantling and assembling differential lock control</b>	<b>214</b>
<b>16</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>215</b>
16.1	General information	215
16.2	Adjustment and marking of final drive gear sets	215
16.3	Position of shims	216
16.4	Adjustment overview - rear final drive	216
16.5	Determining fitting position of shaft bevel gear (actual values)	217
16.6	Recommended sequence for new adjustment of final drive gear set	217
16.7	Adjusting shaft bevel gear	218
16.8	Adjusting bevel gear (with stub shaft)	221
<b>39</b>	<b>Final drive - front differential</b>	<b>227</b>
<b>1</b>	<b>Removing and installing oil seal for drive flange or flange shaft</b>	<b>227</b>
<b>2</b>	<b>Renewing oil seal for drive flange and bevel box</b>	<b>231</b>
<b>3</b>	<b>Adjustment overview</b>	<b>236</b>
<b>4</b>	<b>Differential</b>	<b>237</b>
4.1	Dismantling and assembling differential	237
4.2	Adjusting differential	246
<b>5</b>	<b>Dismantling and assembling bevel box</b>	<b>251</b>
5.1	Assembly overview	251
5.2	Assembly procedure	254
<b>6</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>268</b>
6.1	General information	268
6.2	Adjustment and marking of final drive gear sets	268
6.3	Position of shims	269
6.4	Adjustment overview - bevel box	269
6.5	Recommended sequence for new adjustment of final drive gear set	270
6.6	Adjusting shaft bevel gear	270
6.7	Adjusting bevel gear (with stub shaft)	277