



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Code letters, gearbox allocation, ratios, equipment	2
2.1 Code letters, gearbox allocation, ratios, equipment	2
2.2 Gearboxes for vehicles with programme switch -E122-	2
2.3 Gearboxes for vehicles with electronic programme switch	5
3 Capacities	6
3.1 Capacities	6
4 Repair instructions	7
4.1 Repair instructions	7
01 - Self diagnosis, Electrical check	9
1 Performing self-diagnosis	9
1.1 Performing self-diagnosis	9
1.2 Technical data of self-diagnosis	10
1.3 Electronic components	11
1.4 Connecting fault reader V.A.G 1551 and selecting functions	17
1.5 List of selectable functions	19
1.6 Interrogating fault memory	20
1.7 Fault table	20
1.8 Erasing fault memory	24
1.9 Initiating basic setting	25
1.10 Read measured value block	26
1.11 Test table	28
1.12 Checking solenoid valve whilst driving	33
2 Gearbox: Electrical test	35
2.1 Gearbox: Electrical test	35
2.2 Test table	36
32 - Torque converter	41
1 Torque converter	41
1.1 Torque converter	41
1.2 Identification of torque converter	41
1.3 Draining torque converter	42
1.4 Removing and installing torque converter oil seal	42
37 - Controls, Housing	43
1 Servicing shift mechanism	43
1.1 Servicing shift mechanism	43
1.2 Checking selector mechanism	43
1.3 Checking and adjusting selector lever cable	43
1.4 Checking ignition key removal lock (vehicles with ignition key removal lock)	44
1.5 Dismantling and assembling shift mechanism	45
1.6 Removing and installing selector lever	49
1.7 Dismantling and assembling selector lever	52
1.8 Selector mechanism - right-hand drive vehicles	55
1.9 Removing and installing locking cable (vehicles with ignition key removal lock)	59
1.10 Adjusting locking cable (vehicles with ignition key removal lock)	61
2 Checking gearbox	61
2.1 Checking gearbox	61
2.2 Checking shift points	61
2.3 Checking stall speed	62



2.4	Measuring main pressure	62
3	Removing and installing gearbox	62
3.1	Removing and installing gearbox	62
3.2	Tightening torques	70
4	Checking and topping up ATF level	70
4.1	Checking and topping up ATF level	70
4.2	Checking ATF level	70
4.3	Topping up ATF	71
5	Gearbox with selector elements up to 12.92	72
5.1	Gearbox with selector elements up to 12.92	72
5.2	Position of selector elements on gearboxes up to 12.92	73
5.3	Gearbox with selector elements from 01.93	75
5.4	Position of selector elements on gearboxes from 01.93	77
6	Dismantling and assembling gearbox	78
6.1	Dismantling and assembling gearbox	78
6.2	Removing and installing ATF cooler and ATF filler tube	78
6.3	Modifying gearbox holder VW 353	79
6.4	Dismantling and assembling planetary gearbox -Overview-	80
6.5	I - Removing and installing ATF pump to supporting tube	82
6.6	II - Removing and installing reverse gear clutch -K2- to small sun gear	85
6.7	III - Removing and installing free wheel and reverse gear brake -B1-	89
6.8	IV - Planet carrier and gearbox housing with input gear and cover	92
6.9	Dismantling and assembling planetary gearbox	95
6.10	Overview of all planetary gearbox adjustments	107
6.11	Adjusting planet carrier	109
6.12	Adjusting reverse gear brake -B1-	115
6.13	Adjusting clutch play between -K1- and -K2-	120
6.14	Adjusting 2nd and 4th gear brake -B2-	125
38	- Gears, Hydraulic controls	129
1	Dismantling and assembling ATF pump	129
1.1	Dismantling and assembling ATF pump	129
2	Dismantling and assembling free wheel with -B1- piston	132
2.1	Dismantling and assembling free wheel with -B1- piston	132
3	Dismantling and assembling 1st to 3rd gear clutch -K1- with turbine shaft on gearboxes up to 12.92	135
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1- with turbine shaft on gearboxes up to 12.92	135
3.2	Dismantling and assembling 1st to 3rd gear clutch -K1- with turbine shaft on gearboxes from 01.93	143
4	Dismantling and assembling reverse gear clutch -K2-	149
4.1	Dismantling and assembling reverse gear clutch -K2-	149
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with pump shaft on gearboxes up to 12.92	152
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with pump shaft on gearboxes up to 12.92	152
5.2	Dismantling and assembling 4th gear clutch -K3- with pump shaft on gearboxes from 01.93	156
6	Removing and installing valve body	160
6.1	Removing and installing valve body	160
7	Dismantling and assembling parking lock	167
7.1	Dismantling and assembling parking lock	167
39	- Final drive, Differential	174
1	Checking oil in final drive	174
1.1	Checking oil in final drive	174



2	Removing and installing oil seal for flange shaft or drive flange	175
2.1	Removing and installing oil seal for flange shaft or drive flange	175
3	Dismantling and assembling final drive	179
3.1	Dismantling and assembling final drive	179
3.2	Repair overview of final drive	180
3.3	Removing and installing bearing housing	181
3.4	Removing and installing differential	187
3.5	Removing and installing input gear	191
3.6	Removing and installing drive pinion	196
3.7	Dismantling and assembling differential	204
4	Adjusting final drive	211
4.1	Adjusting final drive	211
4.2	Overview of adjustments	211
4.3	Adjustments to be completed after replacing individual components	213
4.4	Adjusting drive pinion	214
4.5	Adjusting input gear	217
4.6	Adjusting differential	218