



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	1
1.1   Technical data . . . . .	1
1.2   Engine number . . . . .	1
1.3   Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>2</b>
1 <b>Removing and installing engine . . . . .</b>	2
1.1   Removing and installing engine . . . . .	2
1.2   Notes on removing . . . . .	2
1.3   Securing engine to assembly stand . . . . .	4
1.4   Notes on installing . . . . .	4
1.5   Tightening torques . . . . .	5
<b>13 - Crankshaft group . . . . .</b>	<b>6</b>
1 <b>Dismantling and assembling engine . . . . .</b>	6
1.1   Dismantling and assembling engine . . . . .	6
1.2   Removing, installing and tensioning toothed belt . . . . .	13
1.3   Adjusting alternator V-belt tension . . . . .	16
2 <b>Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .</b>	18
2.1   Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .	18
2.2   Renewing crankshaft oil seal - pulley end - . . . . .	22
2.3   Crankshaft dimensions . . . . .	23
3 <b>Dismantling and assembling pistons and conrods . . . . .</b>	24
3.1   Dismantling and assembling pistons and conrods . . . . .	24
3.2   Piston and cylinder dimensions . . . . .	29
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>30</b>
1 <b>Removing and installing cylinder head . . . . .</b>	30
1.1   Removing and installing cylinder head . . . . .	30
1.2   Removing and installing cylinder head . . . . .	33
1.3   Checking compressions . . . . .	34
2 <b>Servicing valve gear . . . . .</b>	36
2.1   Servicing valve gear . . . . .	36
2.2   Reworking valve seats . . . . .	42
2.3   Checking hydraulic bucket tappets . . . . .	44
2.4   Removing and installing camshaft oil seal . . . . .	44
2.5   Removing and installing camshaft . . . . .	45
2.6   Checking valve guides . . . . .	46
2.7   Renewing valve guides . . . . .	47
2.8   Renewing valve stem seals . . . . .	47
<b>17 - Lubrication . . . . .</b>	<b>50</b>
1 <b>Removing and installing parts of the lubrication system . . . . .</b>	50
1.1   Removing and installing parts of the lubrication system . . . . .	50
1.2   Checking oil pressure and oil pressure switch . . . . .	54
<b>19 - Cooling system . . . . .</b>	<b>56</b>
1 <b>Removing and installing parts of cooling system . . . . .</b>	56
1.1   Removing and installing parts of cooling system . . . . .	56
1.2   Parts of cooling system body side . . . . .	57
1.3   Parts of cooling system - engine side . . . . .	61
1.4   Coolant hose connection diagram . . . . .	63



1.5	Draining and filling cooling system . . . . .	64
1.6	Checking radiator fan run-on . . . . .	66
1.7	Removing and installing radiator and radiator fan . . . . .	66
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>68</b>
1	<b>    Removing and installing parts of fuel supply system . . . . .</b>	<b>68</b>
1.1	Removing and installing parts of fuel supply system . . . . .	68
1.2	Safety precautions when working on the fuel supply system . . . . .	71
1.3	Rules for cleanliness . . . . .	71
1.4	Removing and installing fuel tank . . . . .	71
1.5	Removing and installing fuel gauge sender . . . . .	72
1.6	Servicing accelerator mechanism . . . . .	73
1.7	Adjusting accelerator cable . . . . .	74
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>75</b>
1	<b>    Removing and installing parts of exhaust system . . . . .</b>	<b>75</b>
1.1	Removing and installing parts of exhaust system . . . . .	75
1.2	Removing and installing clamping springs . . . . .	77
1.3	Tensioning and relieving tension on clamping springs . . . . .	77