



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Securing engine to assembly stand	6
1.4 Notes on installing	6
1.5 Tightening torques	8
1.6 Additional information and work instructions for vehicles with air conditioner	8
13 - Crankshaft group	9
1 Dismantling and assembling engine	9
1.1 Dismantling and assembling engine	9
1.2 Removing and installing ribbed belt	26
1.3 Removing and installing toothed belt	28
1.4 Adjusting alternator V-belt tension	32
1.5 Removing and installing ribbed belt tensioning device	33
2 Dismantling and assembling cylinder block, crankshaft and flywheel	36
2.1 Dismantling and assembling cylinder block, crankshaft and flywheel	36
2.2 Renewing crankshaft oil seal -pulley end-	42
2.3 Crankshaft dimensions	43
2.4 Removing and installing drive plate	44
3 Dismantling and assembling pistons and conrods	47
3.1 Dismantling and assembling pistons and conrods	47
3.2 Piston and cylinder dimensions	52
15 - Cylinder head, Valve gear	54
1 Removing and installing cylinder head	54
1.1 Removing and installing cylinder head	54
1.2 Removing and installing cylinder head	60
1.3 Checking compressions	61
2 Servicing valve gear	62
2.1 Servicing valve gear	62
2.2 Reworking valve seats	68
2.3 Checking hydraulic bucket tappets	70
2.4 Removing and installing camshaft	71
2.5 Removing and installing camshaft oil seal	73
2.6 Checking valve guides	73
2.7 Renewing valve guides	74
2.8 Renewing valve stem seals	74
17 - Lubrication	77
1 Removing and installing parts of the lubrication system	77
1.1 Removing and installing parts of the lubrication system	77
1.2 Checking oil pressure and oil pressure switch	90
19 - Cooling system	92
1 Removing and installing parts of cooling system	92



1.1	Removing and installing parts of cooling system	92
1.2	Parts of cooling system body side	93
1.3	Parts of cooling system - engine side	101
1.4	Coolant hose connection diagram	104
1.5	Draining and filling cooling system	107
1.6	Removing and installing radiator and radiator fan	109
1.7	Checking thermo switch and continued coolant circulation pump	111
20	- Fuel supply system	113
1	Removing and installing parts of fuel supply system	113
1.1	Removing and installing parts of fuel supply system	113
1.2	Removing and installing fuel tank with its attachments	114
1.3	Removing and installing fuel delivery unit	117
1.4	Safety precautions when working on the fuel supply system	121
1.5	Rules for cleanliness	121
1.6	Removing and installing fuel delivery unit	121
1.7	Dismantling and assembling fuel delivery unit	123
1.8	Checking fuel pump	124
1.9	Removing and installing fuel tank	128
1.10	Servicing accelerator mechanism	130
1.11	Adjusting throttle cable	132
1.12	Servicing the activated charcoal filter system	134
1.13	Checking activated charcoal filter system control	137
2	Checking electronic power control (EPC)	139
2.1	Checking electronic power control (EPC)	139
2.2	Function of EPC system	140
2.3	Checking electronic accelerator warning lamp	140
2.4	Checking accelerator pedal position sender	143
26	- Exhaust system	146
1	Removing and installing parts of exhaust system	146
1.1	Removing and installing parts of exhaust system	146
1.2	Retrofitting front exhaust pipe stop plate	155
1.3	Checking catalyst	156
2	Exhaust gas recirculation system	157
2.1	Exhaust gas recirculation system	157
2.2	Removing and installing parts of exhaust gas recirculation system	158
2.3	Checking exhaust gas recirculation valve (mechanical)	161
2.4	Secondary air system	162
2.5	Removing and installing parts of secondary air system	163
2.6	Checking combi valve and non return valve	165
2.7	Checking secondary air pump	166
2.8	Checking secondary air inlet valve	167