



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Securing engine to repair frame	8
1.4 Notes on installing	9
1.5 Tightening torques	11
1.6 Assembly mountings	11
1.7 Additional information and removal instructions for vehicles with air conditioner	12
13 - Crankshaft group	14
1 Dismantling and assembling engine	14
1.1 Dismantling and assembling engine	14
1.2 Removing and installing ribbed belt	27
2 Removing and installing sealing flanges and drive plate	29
2.1 Removing and installing sealing flanges and drive plate	29
2.2 Renewing crankshaft oil seal -vibration damper end-	33
2.3 Removing and installing drive plate	36
3 Removing and installing crankshaft	38
3.1 Removing and installing crankshaft	38
4 Dismantling and assembling pistons and conrods	43
4.1 Dismantling and assembling pistons and conrods	43
4.2 Piston and cylinder dimensions	49
15 - Cylinder head, Valve gear	50
1 Removing and installing cylinder head	50
1.1 Removing and installing cylinder head	50
1.2 Removing and installing cylinder head cover	59
1.3 Checking valve timing	64
1.4 Adjusting valve timing	66
1.5 Removing and installing cylinder head	72
1.6 Checking compression pressures	79
2 Servicing valve gear	82
2.1 Servicing valve gear	82
2.2 Reworking valve seats	90
2.3 Removing and installing camshafts	93
2.4 Checking camshaft adjustment	99
2.5 Checking valve guides	103
2.6 Renewing valve stem seals	105
17 - Lubrication	108
1 Removing and installing parts of the lubrication system	108
1.1 Removing and installing parts of the lubrication system	108
1.2 Dismantling and assembling oil filter housing	114
1.3 Dismantling and assembling oil pump	117
1.4 Removing and installing oil sump	120
1.5 Checking oil pressure and oil pressure switch	122



19 - Cooling system	125
1 Removing and installing parts of cooling system	125
1.1 Removing and installing parts of cooling system	125
1.2 Parts of cooling system body side	126
1.3 Parts of cooling system engine side	130
1.4 Coolant hose connection diagram	134
1.5 Dismantling and assembling coolant thermostat housing	136
1.6 Draining and filling cooling system	139
1.7 Removing and installing radiator and fans	142
1.8 Checking radiator fan	144
1.9 Checking continued coolant circulation pump	145
1.10 Removing and installing coolant pump	147
1.11 Checking vacuum valve	149
20 - Fuel supply system	150
1 Removing and installing parts of fuel supply system	150
1.1 Removing and installing parts of fuel supply system	150
1.2 Removing and installing fuel tank with its attachments and fuel filter	151
1.3 Safety precautions when working on the fuel supply system	157
1.4 Rules for cleanliness	157
1.5 Removing and installing fuel delivery unit	157
1.6 Removing and installing fuel tank	160
1.7 Checking fuel pump	161
2 Electronic power control (EPC)	168
2.1 Electronic power control (EPC)	168
2.2 Function of EPC system	168
2.3 Servicing parts of electronic power control (EPC)	169
2.4 Checking accelerator pedal position sender	170
3 Activated charcoal filter system	173
3.1 Activated charcoal filter system	173
3.2 Function	173
3.3 Servicing parts of the activated charcoal filter system	174
3.4 Checking fuel tank breather	176
26 - Exhaust system	179
1 Removing and installing parts of exhaust system	179
1.1 Removing and installing parts of exhaust system	179
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	180
1.3 Silencer with mountings	185
2 Secondary air system	187
2.1 Secondary air system	187
2.2 Function	187
2.3 Removing and installing parts of the secondary air system	188
2.4 Checking combi-valve	191
2.5 Removing and installing combi-valve	193