



Contents

22 - Mixture preparation, Carburetor	1
1 Removing and installing carburetor and intake manifold	1
1.1 Removing and installing carburetor and intake manifold	1
1.2 Air cleaner	5
1.3 Checking intake air preheating	5
1.4 Check double thermostitch	5
1.5 Checking intake air system for leaks (unmetered air)	6
2 Servicing 2E3 carburetor	7
2.1 Servicing 2E3 carburetor	7
2.2 Carburetor upper section	8
2.3 Carburetor lower section	13
2.4 Carburetor adjustment data	16
2.5 Jets and settings	17
2.6 Idling adjustment	19
2.7 Checking and adjusting cold idling speed	20
2.8 Checking and adjusting pull-down device	21
2.9 Checking vacuum for vacuum unit - Stage II	23
2.10 Checking function of throttle valve - Stage II	24
2.11 Checking and adjusting injection quantity	25
2.12 Basic throttle valve setting, Stage II	27
2.13 Checking and adjusting throttle damper	28
2.14 Vacuum connections	30
28 - Ignition system	32
1 Servicing TCI-H ignition system	32
1.1 Servicing TCI-H ignition system	32
1.2 Dismantling and assembling distributor	34
1.3 Safety precautions	37
1.4 Adjustment data, Spark plugs	37
1.5 Ignition distributor data	38
1.6 Installing distributor	39
1.7 Checking and adjusting ignition timing	40
1.8 Checking ignition timing control	41
1.9 Checking TCI-H switch unit and Hall sender	45