



## Contents

|  |           |
|--|-----------|
| <b>01 - Self diagnosis, Electrical check . . . . .</b>   | <b>1</b>  |
| <b>1 Self-diagnosis . . . . .</b>  | <b>1</b>  |
| 1.1 Self-diagnosis . . . . .   | 1         |
| 1.2 Function . . . . .   | 1         |
| 1.3 Technical data of self-diagnosis . . . . .   | 1         |
| 1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . . | 2         |
| 1.5 Interrogating fault memory . . . . .   | 4         |
| 1.6 Fault table . . . . .  | 5         |
| 1.7 Erasing fault memory . . . . .   | 9         |
| 1.8 Final control diagnosis . . . . .  | 10        |
| 1.9 Reading measuring value block . . . . .  | 13        |
| 1.10 Display group overview . . . . .  | 14        |
| 1.11 Checking voltage supply for fault reader V.A.G 1551 . . . . .                             | 18        |
| <b>2 Electrical check . . . . .</b>  | <b>19</b> |
| 2.1 Electrical check . . . . .   | 19        |
| 2.2 Wiring and component check with test box V.A.G 1598/18 . . . . .                           | 19        |
| 2.3 Test table . . . . .   | 20        |
| <b>24 - Mixture preparation, Injection . . . . .</b>   | <b>25</b> |
| <b>1 Digifant injection and ignition system . . . . .</b>                                      | <b>25</b> |
| 1.1 Digifant injection and ignition system . . . . .   | 25        |
| 1.2 Fitting locations overview . . . . .   | 25        |
| 1.3 Servicing injection part . . . . .   | 29        |
| 1.4 Technical data . . . . .   | 42        |
| 1.5 Safety precautions . . . . .   | 43        |
| 1.6 Rules for cleanliness . . . . .  | 43        |
| 1.7 Carrying out basic settings . . . . .  | 43        |
| 1.8 Checking idling stabilization . . . . .  | 46        |
| 1.9 Checking Lambda probe and Lambda control . . . . .   | 47        |
| 1.10 Checking engine operating mode . . . . .  | 48        |
| 1.11 Checking throttle valve potentiometer . . . . .   | 50        |
| 1.12 Checking coolant temperature sender . . . . .   | 51        |
| 1.13 Checking intake air temperature sender . . . . .  | 51        |
| 1.14 Checking intake manifold pressure sender . . . . .  | 53        |
| 1.15 Matching engine electronic control unit to electronic immobilizer . . . . .               | 53        |
| 1.16 Checking fuel pressure regulator and holding pressure . . . . .                           | 55        |
| 1.17 Removing and installing injectors . . . . .   | 57        |
| 1.18 Checking injectors . . . . .  | 58        |
| 1.19 Checking intake air system for leaks (unmetered air) . . . . .                            | 61        |
| 1.20 Checking intake air preheating . . . . .  | 62        |
| 1.21 Basic throttle valve setting . . . . .  | 63        |
| 1.22 Checking and adjusting idling switch . . . . .  | 63        |
| <b>28 - Ignition system . . . . .</b>  | <b>65</b> |
| <b>1 Digifant injection and ignition system . . . . .</b>                                      | <b>65</b> |
| 1.1 Digifant injection and ignition system . . . . .   | 65        |
| 1.2 Servicing ignition part . . . . .  | 65        |
| 1.3 Dismantling and assembling distributor . . . . .   | 69        |
| 1.4 Safety precautions . . . . .   | 69        |
| 1.5 Test data, spark plugs . . . . .   | 70        |
| 1.6 Installing distributor . . . . .   | 71        |
| 1.7 Checking and adjusting ignition timing . . . . .   | 72        |
| 1.8 Checking ignition timing control . . . . .   | 73        |
| 1.9 Checking Hall sender . . . . .   | 74        |



Transporter 1991 >  
Digifant injection and ignition system (2.5 ltr. engine) - Edition 02.1994

---

|      |  |    |
|------|--|----|
| 1.10 | Checking ignition transformer . . . . .              | 75 |
| 1.11 | Checking ignition transformer output stage . . . . . | 75 |