



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	4
1.3 Securing engine to assembly stand .....	8
1.4 Notes on installing .....	10
1.5 Tightening torques .....	11
1.6 Additional information and work instructions for vehicles with air conditioner .....	12
<b>13 - Crankshaft group</b> .....	<b>13</b>
<b>1 Dismantling and assembling engine</b> .....	<b>13</b>
1.1 Dismantling and assembling engine .....	13
1.2 Adjusting alternator V-belt tension .....	35
1.3 Removing and installing ribbed belt .....	36
1.4 Removing and installing ribbed belt tensioning device .....	39
1.5 Removing, installing and tensioning camshaft toothed belt (>01.95) .....	42
1.6 Removing, installing and tensioning camshaft toothed belt (02.95 >) .....	49
1.7 Removing, installing and tensioning injection pump toothed belt (engine codes AAB, AJA) .....	55
1.8 Removing, installing and tensioning injection pump toothed belt (engine codes ACV, AHY, AJT, AUF, AXG, AXL, AYC) .....	60
<b>2 Removing and installing sealing flange and flywheel</b> .....	<b>66</b>
2.1 Removing and installing sealing flange and flywheel .....	66
2.2 Removing and installing drive plate .....	71
2.3 Removing and installing dual mass flywheel .....	73
2.4 Renewing crankshaft oil seal - pulley end - .....	74
<b>3 Removing and installing crankshaft</b> .....	<b>77</b>
3.1 Removing and installing crankshaft .....	77
3.2 Crankshaft dimensions .....	79
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>80</b>
4.1 Dismantling and assembling pistons and conrods .....	80
4.2 Checking piston projection at TDC .....	87
4.3 Piston and cylinder dimensions .....	89
<b>15 - Cylinder head, Valve gear</b> .....	<b>90</b>
<b>1 Removing and installing cylinder head</b> .....	<b>90</b>
1.1 Removing and installing cylinder head .....	90
1.2 Removing and installing cylinder head .....	99
1.3 Checking compression pressures .....	101
<b>2 Servicing valve gear</b> .....	<b>104</b>
2.1 Servicing valve gear .....	104
2.2 Reworking valve seats .....	113
2.3 Checking valve guides .....	115
2.4 Renewing valve guides .....	115
2.5 Renewing valve stem seals .....	117
2.6 Removing and installing camshaft .....	119
2.7 Checking hydraulic bucket tappets .....	120
2.8 Replacing swirl chambers (engine codes AAB, AJA) .....	121



<b>17 - Lubrication</b> . . . . .	<b>123</b>
<b>1 Removing and installing parts of the lubrication system</b> . . . . .	<b>123</b>
1.1 Removing and installing parts of the lubrication system . . . . .	123
1.2 Checking oil pressure and oil pressure switch . . . . .	138
<b>19 - Cooling system</b> . . . . .	<b>141</b>
<b>1 Removing and installing parts of cooling system</b> . . . . .	<b>141</b>
1.1 Removing and installing parts of cooling system . . . . .	141
1.2 Parts of cooling system, body side . . . . .	142
1.3 Parts of cooling system - engine side . . . . .	150
1.4 Coolant hose connection diagram . . . . .	154
1.5 Draining and filling coolant . . . . .	158
1.6 Removing and installing radiator and fan . . . . .	161
1.7 Checking thermo switch and coolant circulation pump or continued coolant circulation pump . . . . .	164
<b>20 - Fuel supply system</b> . . . . .	<b>167</b>
<b>1 Removing and installing parts of fuel supply system</b> . . . . .	<b>167</b>
1.1 Removing and installing parts of fuel supply system . . . . .	167
1.2 Removing and installing fuel tank with its attachments . . . . .	168
1.3 Safety precautions when working on the fuel supply system . . . . .	170
1.4 Rules for cleanliness . . . . .	171
1.5 Removing and installing fuel gauge sender . . . . .	171
1.6 Removing and installing fuel tank . . . . .	173
1.7 Servicing accelerator mechanism (engine codes AAB, AJA) . . . . .	174
1.8 Adjusting accelerator cable . . . . .	176
1.9 Servicing cold start accelerator (CSA) operating cable (engine codes AAB, AJA) . . . . .	177
1.10 Adjusting CSA operating cable . . . . .	178
<b>21 - Charging</b> . . . . .	<b>179</b>
<b>1 Charge air system with turbocharger</b> . . . . .	<b>179</b>
1.1 Charge air system with turbocharger . . . . .	179
1.2 Removing and installing turbocharger with attachments . . . . .	179
1.3 Removing and installing air cooling parts . . . . .	188
1.4 Turbocharger hose/pipe connections . . . . .	193
1.5 Rules for cleanliness . . . . .	194
1.6 Removing and installing exhaust turbocharger . . . . .	195
<b>2 Checking charge pressure system</b> . . . . .	<b>199</b>
2.1 Checking charge pressure system . . . . .	199
2.2 Checking turbocharger . . . . .	199
<b>26 - Exhaust system</b> . . . . .	<b>205</b>
<b>1 Removing and installing parts of exhaust system</b> . . . . .	<b>205</b>
1.1 Removing and installing parts of exhaust system . . . . .	205
1.2 Removing and installing clamping springs . . . . .	210
1.3 Tensioning and relieving tension on clamping springs . . . . .	211
<b>2 Exhaust gas recirculation system</b> . . . . .	<b>214</b>
2.1 Exhaust gas recirculation system . . . . .	214
2.2 Removing and installing parts of exhaust gas recirculation system . . . . .	214
2.3 Vacuum hose connection diagram . . . . .	221
2.4 Checking exhaust gas recirculation valve . . . . .	223