



Contents

23 - Mixture preparation, Injection	1
1 Servicing fuel injection system	1
1.1 Servicing fuel injection system	1
1.2 Rules for cleanliness	1
1.3 Servicing injection pump	2
1.4 Servicing fuel filter	8
1.5 Checking fuel system for leaks	9
1.6 Removing and installing injection pump	10
1.7 Checking and adjusting injection pump timing	16
1.8 Checking valve timing	19
1.9 Sealing injection pump connections	21
1.10 Adjusting idling and governed speeds	22
1.11 Residual volume basic setting	23
1.12 Removing and installing injectors	24
1.13 Servicing injectors	25
1.14 Checking injector nozzle valve tip for damage, injection pressure and for leakage.	26
2 Servicing injection pump	28
2.1 Servicing injection pump	28
2.2 Replacing injection pump throttle lever return spring	33
2.3 Renewing pump cover throttle lever bush, pump cover gasket and throttle lever shaft O-ring	35
2.4 Renewing fuel delivery adjusting screw O-ring	37
2.5 Replacing idling speed shaft O-ring	38
2.6 Renewing injection timing device cover O-ring	38
2.7 Renewing CSA lever/cover O-ring	38
28 - Glow plug system	40
1 Checking glow plug system	40
1.1 Checking glow plug system	40
1.2 Checking glow plug current consumption	40
1.3 Checking glow plugs	40
1.4 Glow plugs with burned electrodes	41