



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Features of self-diagnosis .....	1
1.3 Technical data of self-diagnosis .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit .....	2
1.5 Interrogating fault memory .....	4
1.6 Fault table .....	5
1.7 Erasing fault memory .....	11
1.8 Final control diagnosis .....	13
<b>2 Measured value blocks</b> .....	<b>16</b>
2.1 Measured value blocks .....	16
2.2 Reading measured value block .....	16
2.3 Display group overview engine codes ACV, AHY, AJT .....	17
2.4 Evaluating measured value blocks .....	20
<b>23 - Mixture preparation, Injection</b> .....	<b>34</b>
<b>1 Servicing Diesel direct injection system</b> .....	<b>34</b>
1.1 Servicing Diesel direct injection system .....	34
1.2 Safety precautions .....	34
1.3 Rules for cleanliness .....	34
1.4 Fitting locations overview .....	35
1.5 Servicing injection pump .....	40
1.6 Servicing fuel filter .....	45
1.7 Servicing accelerator linkage .....	47
1.8 Checking sender adjustment .....	48
1.9 Removing and installing injection pump .....	50
1.10 Dynamically checking and adjusting commencement of injection .....	58
1.11 Checking valve timing .....	61
1.12 Removing and installing injectors .....	66
1.13 Checking injectors .....	67
1.14 Checking injectors for break-off pressure and for leakage .....	68
1.15 Renewing injection timing device cover O-ring .....	70
<b>2 Checking components and functions</b> .....	<b>70</b>
2.1 Checking components and functions .....	70
2.2 Checking engine speed sender .....	70
2.3 Checking intake manifold pressure sender and altitude sender .....	72
2.4 Checking coolant temperature sender .....	73
2.5 Checking brake light switch and brake pedal switch .....	75
2.6 Checking clutch pedal switch .....	77
2.7 Checking intake manifold temperature sender .....	79
2.8 Checking Diesel direct injection system voltage supply .....	81
2.9 Checking fuel temperature sender .....	82
2.10 Checking modulating piston movement sender and quantity adjuster .....	85
2.11 Checking needle lift sender .....	90
2.12 Checking injection timing control range .....	91
2.13 Checking charge pressure control .....	95
2.14 Checking exhaust gas recirculation and air mass meter function .....	98
2.15 Checking speedometer sender .....	106
2.16 Checking accelerator position sender .....	106
2.17 Checking cruise control system (CCS) .....	109
<b>3 Replacing, coding and matching engine control unit</b> .....	<b>111</b>
3.1 Replacing, coding and matching engine control unit .....	111
3.2 Replacing engine control unit .....	111



3.3	Coding engine control unit . . . . .	111
3.4	Matching engine electronic control unit to electronic immobilizer . . . . .	113
3.5	Matching engine electronics control unit to tachograph (only with engine control unit MSA12) . . . . .	114
<b>28</b>	<b>- Glow plug system . . . . .</b>	<b>116</b>
<b>1</b>	<b>Checking glow plug system . . . . .</b>	<b>116</b>
1.1	Checking glow plug system . . . . .	116
1.2	Checking glow plugs . . . . .	117