



Contents

00 - Technical data	1
1 Notes on "Automatic gearbox 01P"	1
1.1 Historical development of this gearbox	1
1.2 Torque converter	2
1.3 Automatic gearbox control unit J217 with driving situation gearshifts (fuzzy logic)	2
1.4 Self-diagnosis	3
2 Identification of gearbox	4
2.1 Location on gearbox	4
3 Identification codes, engine allocation, ratios, equipment	5
4 Capacities	17
4.1 Planetary gearbox	17
4.2 Final drive	17
5 Repair notes	18
32 - Torque converter	21
1 Torque converter	21
1.1 Identification of torque converter	21
1.2 Allocation of torque converter	21
1.3 Removing sleeve bearing from turbine shaft	22
1.4 Removing and installing torque converter oil seal	24
1.5 Draining torque converter	24
37 - Controls, housing	26
1 Electrical/electronic components and fitting locations	26
2 Repairing selector mechanism	36
2.1 Checking selector mechanism	36
2.2 Checking and adjusting selector lever cable	37
2.3 Checking operation of the ignition key withdrawal lock	37
2.4 Dismantling and assembling selector mechanism	38
2.5 Removing and installing selector lever	41
2.6 Dismantling and assembling selector lever	42
2.7 Selector mechanism - right-hand drive vehicles	43
2.8 Removing and installing locking cable (vehicles with ignition key withdrawal lock)	45
2.9 Adjusting locking cable (vehicles with ignition key withdrawal lock)	46
3 Checking gearbox	47
3.1 Connecting tester from Volkswagen and selecting functions	47
3.2 Measuring main pressure	48
4 Removing and installing gearbox	52
4.1 Distinguishing features of Transporters after 01.96 with long and short front section	52
4.2 Removing and installing gearbox for all vehicles before 12.95 and vehicles after 01.96 with short front section	53
4.3 Removing and installing gearbox for vehicles after 01.96 with long front section	65
5 Checking ATF level and topping up	76
5.1 Checking ATF level	77
5.2 Topping up ATF	80
5.3 Renewing ATF	81
6 Gearbox with selector elements	82
7 Dismantling and assembling gearbox	85
7.1 Removing and installing ATF cooler and ATF filler pipe	85
7.2 Repair with an exchange component	86
7.3 Overview - dismantling and assembling planetary gearbox	91



7.4	I - Removing and installing ATF pump to support tube	92
7.5	II - Removing and installing reverse gear clutch K2 to large sun gear	94
7.6	III - Removing and installing freewheel and reverse gear brake B1	95
7.7	IV - Planet carrier and gearbox housing with input gear and cover	96
7.8	Dismantling and assembling planetary gearbox	98
7.9	Installing exchange component (selector element component)	113
7.10	Overview - all planetary gearbox adjustments	120
7.11	Adjusting planet carrier	122
7.12	Adjusting reverse gear brake B1	126
7.13	Adjusting clutch play between -K1- and -K2-	130
7.14	Adjusting 2nd and 4th gear brake -B2-	134
38	- Gears, control	143
1	Dismantling and assembling ATF pump	143
2	Dismantling and assembling freewheel with -B1- piston	145
3	Dismantling and assembling 1st to 3rd gear clutch K1	147
4	Dismantling and assembling reverse gear clutch K2	150
5	Dismantling and assembling 3rd and 4th gear clutch K3 with turbine shaft	153
6	Removing and installing valve body	156
7	Dismantling and assembling parking lock	161
39	- Final drive - differential	165
1	Checking gear oil in final drive	165
2	Removing and installing oil seals for left flange shaft or right drive shaft or stub shaft	166
2.1	Removing and installing left flange shaft oil seal	166
2.2	Removing and installing oil seal for right drive flange or stub shaft	170
3	Dismantling and assembling final drive	175
3.1	Overview - final drive repair	175
3.2	Removing and installing bearing housing (vehicles before 12.95)	176
3.3	Removing and installing bearing housing (vehicles after 01.96 with freewheeling flange shaft on right)	180
3.4	Removing and installing input gear	186
3.5	Removing and installing pinion shaft	189
3.6	Removing and installing differential (vehicles before 12.95)	199
3.7	Removing and installing differential and bearing bush for pendulum support (vehicles after 01.96)	203
3.8	Dismantling and assembling differential	208
4	Adjusting final drive	217
4.1	Overview of adjustments	217
4.2	Adjustments to be completed after renewing individual components	218
4.3	Adjusting pinion shaft	218
4.4	Adjusting input gear	221
4.5	Adjusting differential	222