



Contents

01 - Self-diagnosis, electrical checks	1
1 Self-diagnosis function	1
1.1 Self-diagnosis technical data	2
1.2 Self-diagnosis - Guide	3
2 Performing self-diagnosis	5
2.1 Safety precautions	5
2.2 Connecting vehicle diagnosis, testing and information system VAS 5051	5
2.3 Connecting fault reader V.A.G 1551 and selecting functions	7
2.4 Automatic test sequence	8
2.5 Selecting control unit for automatic gearbox	9
2.6 List of selectable functions	10
2.7 Reading fault memory	10
3 Fault table	12
4 Erasing fault memory	19
5 Initiating basic setting	20
6 Read measured value block	21
6.1 List of selectable display group numbers	21
6.2 Test table	23
7 Ending output	34
8 Gearbox: Electrical test	35
8.1 Electrical test	36
8.2 Test table	39