



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Function	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating and erasing fault memory	4
1.6 Fault table	5
1.7 Final control diagnosis	7
1.8 Introduction of basic setting	9
1.9 Reading measuring value block	11
1.10 Display group overview for vehicles >02.92	12
1.11 Display group overview for vehicles >03.92	12
1.12 Read individual measuring value	13
1.13 Checking voltage supply for fault reader V.A.G 1551	14
2 Electrical check	15
2.1 Electrical check	15
2.2 Wiring and component check with test box V.A.G 1598	15
2.3 Checking on wiring loom plug	15
2.4 Checks with Digifant control unit connected	18
24 - Mixture preparation, Injection	20
1 Digifant injection and ignition system	20
1.1 Digifant injection and ignition system	20
1.2 Fitting locations overview	20
1.3 Servicing injection part	22
1.4 Dismantling and assembling intake manifold	27
1.5 Dismantling and assembling fuel manifold	29
1.6 Dismantling and assembling air cleaner	31
1.7 Safety precautions	32
1.8 Rules for cleanliness	32
1.9 Technical data	33
1.10 Idling check	33
1.11 Checking idling stabilization	36
1.12 Checking Lambda probe and Lambda control	38
1.13 Checking and adjusting throttle closing damper	40
1.14 Checking acceleration/full throttle enrichment and overrun cut-off	40
1.15 Checking throttle valve potentiometer	41
1.16 Checking coolant temperature sender	42
1.17 Checking intake air temperature sender	43
1.18 Checking CO potentiometer	43
1.19 Checking intake manifold pressure sender	44
1.20 Matching engine electronic control unit to electronic immobilizer	44
1.21 Checking fuel pressure regulator and holding pressure	46
1.22 Checking cold start valve	47
1.23 Removing and installing injectors	48
1.24 Checking injectors	50
1.25 Checking intake air system for leaks (unmetered air)	52
1.26 Checking intake air preheating	53
1.27 Basic throttle valve setting	54
1.28 Checking and adjusting idling switch	54
28 - Ignition system	56
1 Digifant injection and ignition system	56



1.1	Digital injection and ignition system	56
1.2	Servicing ignition part	56
1.3	Safety precautions	61
1.4	Test and adjustment data, spark plugs	62
1.5	Installing distributor	63
1.6	Checking and adjusting ignition timing	64
1.7	Checking ignition timing control	66
1.8	Checking Hall sender	67
1.9	Checking ignition transformer	68
1.10	Checking ignition transformer output stage	68