



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Fundamentals for batteries	1
1.2 Warning notices and safety regulations	1
1.3 Battery load test	3
1.4 Battery load test	5
2 Checking battery	6
2.1 Checking the various types of batteries	6
2.2 Visual check	8
2.3 Information about battery replacement and battery gas venting	9
2.4 Checking colour indicator in battery cover	10
2.5 Battery tester with printer VAS 6161	13
2.6 Battery tester DSS-7814 SET 08.78024-0005, MAN TGE	19
2.7 Current draw test	21
2.8 No-load current measurement	23
3 Charging the battery	32
3.1 Totally discharged batteries	32
3.2 Battery charger VAS 5095 A	33
3.3 Battery charger VAS 5900	39
3.4 Battery charger VAS 5900 A	51
3.5 Battery charger VAS 5903	60
3.6 Battery charger VAS 5906	71
3.7 Battery charger VAS 5908	74
3.8 Midtronics INC 940 battery charger (USA/Canada only)	83
3.9 Battery charger Fronius Acctiva Professional 35A, MAN TGE	87
3.10 Solar charger module VAS 6102A	89
3.11 Charging lithium-ion battery	90
4 Alternator	94
4.1 Checking function of poly V-belt pulley with freewheel	94
5 Cruise control system (CCS)	97
5.1 General description - cruise control system (CCS)	97
5.2 Activating and deactivating cruise control system (CCS)	97
90 - Gauges, instruments	98
92 - Windscreen wash/wipe system	99
1 Washer fluid line hose couplings	99
1.1 Hose couplings - windscreen and rear window washer system	99
1.2 Hose couplings - windscreen and rear window washer system	100
1.3 Hose couplings - headlight washer system	101
2 Hose repair	102
2.1 General description - hose repair	102
2.2 Repairing smooth pipe	102
2.3 Repairing corrugated pipe	102
94 - Lights, bulbs, switches - exterior	105
1 Operation and safety notes for gas discharge lamps	105
96 - Lights, bulbs, switches - interior	108
1 Immobiliser	108
1.1 General description - immobiliser	108
1.2 Online system test	109



1.3	Immobiliser control unit J362	109
1.4	Engine control unit J623	109
1.5	Immobiliser reader coil	109
1.6	Replacement ignition key	110
1.7	Ignition key - variable code transponder	110
1.8	New lock set	110
1.9	New identity on renewing all components	111
1.10	Adapting ignition key	111
2	12 V socket	113
2.1	Removing and installing 12 V socket	113
2.2	Removing and installing socket illumination bulb L42	116
3	Cigarette lighter U1	117
3.1	General description - cigarette lighter U1	117
3.2	Assembly overview - cigarette lighter U1	117
3.3	Removing and installing cigarette lighter socket	118
3.4	Removing and installing cigarette lighter illumination bulb L28	122
97 - Wiring		124
1	Vehicle diagnosis, testing and information systems	124
1.1	General description - vehicle diagnosis, testing and information system	124
1.2	Connecting vehicle diagnostic tester	124
2	Wiring harness and connector repairs	126
2.1	General notes concerning repairs to vehicle electrical system	126
2.2	Wiring harness repair set	128
2.3	Tool descriptions	132
2.4	Repairs to electrical wiring harnesses	137
2.5	Repairing fibre optic cables	164
2.6	Repair of aerial wires	172
2.7	Repairing connector housings and connectors	186
2.8	Releasing and dismantling connector housings	192
3	Cleaning contact surfaces	200
3.1	General description - contact surface cleaning set VAS 6410	200
3.2	Repairing ring terminals	200
3.3	Repairing threaded electrical connections	203
3.4	Cleaning battery terminal clamp and battery terminal	205
3.5	Preserving threaded electrical connections	206
4	Renewing lambda probe	208
4.1	General notes - renewing lambda probe	208
4.2	Types of protective tube on universal lambda probes	208
4.3	Renewing LSF lambda probe (4-pin)	209
4.4	Renewing LSU lambda probe (6-pin)	210
5	ESD workplace VAS 6613	212
5.1	Use of ESD workplace VAS 6613	212