



## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Communication systems</b>	<b>1</b>
1.1 General description - communication systems	1
1.2 Fault finding - communication systems	1
1.3 Notes on performing repair work on communication systems	1
1.4 Assembly overview - battery, transmitter and receiver unit, fuse and wiring harness	3
1.5 Implementation of suppression measures	4
1.6 General notes on operating mobile telephones and two-way radios	4
<b>2 "Alpha" radio system</b>	<b>6</b>
2.1 General description - "Alpha" radio system	6
2.2 Fitting location overview - "ALPHA" radio system	6
2.3 Removing and installing "ALPHA" radio system	8
2.4 Connector pin assignment - "ALPHA" radio system	9
2.5 Anti-theft coding - "ALPHA" radio system	10
<b>3 "Beta" radio system</b>	<b>11</b>
3.1 General description - "BETA" radio system	11
3.2 Fitting location overview - "BETA" radio system	11
3.3 Removing and installing "BETA" radio system	13
3.4 Connector pin assignment - "BETA" radio system	14
3.5 Anti-theft coding - "BETA" radio system	15
3.6 Adapting components - "BETA" radio system	15
<b>4 "Gamma" radio system</b>	<b>17</b>
4.1 General description - "GAMMA" radio system	17
4.2 Fitting location overview - "GAMMA" radio system	17
4.3 Removing and installing "GAMMA" radio system	19
4.4 Connector pin assignment - "GAMMA" radio system	20
4.5 Anti-theft coding - "GAMMA" radio system	22
4.6 Adapting components - "GAMMA" radio system	22
<b>5 "DELTA" radio system</b>	<b>24</b>
5.1 General description - "DELTA" radio system	24
5.2 Fitting location overview - "DELTA" radio system	25
5.3 Removing and installing "DELTA" radio system	26
5.4 Connector pin assignment - "DELTA" radio system	28
5.5 Anti-theft coding - "DELTA" radio system	31
5.6 Adapting components - "DELTA" radio system	32
<b>6 Radio system "R 110"</b>	<b>33</b>
6.1 General description - radio system "R 110"	33
6.2 Fitting location overview - radio system "R 110"	33
6.3 Removing and installing radio system "R 110"	35
6.4 Connector pin assignment - radio system "R 110"	37
6.5 Anti-theft coding - radio system "R 110"	39
6.6 Adapting components - radio system "R 110"	41
<b>7 Radio system "RCD 200"</b>	<b>43</b>
7.1 General description - radio system "RCD 200"	43
7.2 Overview of fitting locations - radio system "RCD 200"	44
7.3 Removing and installing radio system "RCD 200"	45
7.4 Connector pin assignment - radio system "RCD 200"	47
7.5 Anti-theft coding - radio system "RCD 200"	49
7.6 Adapting components - radio system "RCD 200"	52
<b>8 Radio system "RCD 210"</b>	<b>54</b>
8.1 General description - radio system "RCD 210"	54
8.2 Overview of fitting locations - radio system "RCD 210"	55



8.3	Removing and installing radio system "RCD 210" .....	57
8.4	Connector pin assignment - radio system "RCD 210" .....	59
8.5	Anti-theft coding - radio system "RCD 210" .....	61
8.6	Adapting components - radio system "RCD 210" .....	63
<b>9</b>	<b>Radio system "RCD 310" .....</b>	<b>64</b>
9.1	General description - radio system "RCD 310" .....	64
9.2	Overview of fitting locations - radio system "RCD 310" .....	66
9.3	Removing and installing radio system "RCD 310" .....	67
9.4	Connector pin assignment - radio system "RCD 310" .....	70
9.5	Anti-theft coding - radio system "RCD 310" .....	73
9.6	Adapting components - radio system "RCD 310" .....	74
<b>10</b>	<b>Radio navigation system (RNS) with monochrome display .....</b>	<b>76</b>
10.1	General description - radio navigation system with monochrome display .....	76
10.2	Fitting location overview - radio navigation system with monochrome display .....	77
10.3	Removing and installing radio navigation system with monochrome display .....	79
10.4	Connector pin assignment - radio navigation system with monochrome display .....	81
10.5	Anti-theft coding - radio navigation system with monochrome display .....	83
10.6	Adapting components - radio navigation system with monochrome display .....	85
<b>11</b>	<b>Radio navigation system "RNS-MFD 1" .....</b>	<b>88</b>
11.1	General description - radio navigation system "RNS-MFD 1" .....	88
11.2	Fitting location overview - radio navigation system "RNS-MFD 1" .....	89
11.3	Removing and installing radio navigation system "RNS-MFD 1" .....	91
11.4	Removing and installing traffic information control unit .....	93
11.5	Connector pin assignment - radio navigation system "RNS-MFD 1" .....	94
11.6	Anti-theft coding - radio navigation system "RNS-MFD 1" .....	96
11.7	Adapting components - radio navigation system "RNS-MFD 1" .....	99
<b>12</b>	<b>Radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....</b>	<b>101</b>
12.1	General description - radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....	101
12.2	Fitting location overview - radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....	102
12.3	Removing and installing radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....	104
12.4	Connector pin assignment - radio navigation systems "RNS 2-CD" and "RNS 2-DVD" ..	106
12.5	Anti-theft coding - radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....	110
12.6	Adapting components - radio navigation systems "RNS 2-CD" and "RNS 2-DVD" .....	112
<b>13</b>	<b>Radio navigation system "RNS 310" .....</b>	<b>114</b>
13.1	General description - radio navigation system "RNS 310" .....	114
13.2	Overview of fitting locations - radio navigation system "RNS 310" .....	116
13.3	Removing and installing radio navigation system "RNS 310" .....	117
13.4	Pin assignment - radio navigation system "RNS 310" .....	120
13.5	Anti-theft coding - radio navigation system "RNS 310" .....	122
13.6	Adapting components - radio navigation system "RNS 310" .....	124
<b>14</b>	<b>Radio navigation system "RNS 315" .....</b>	<b>126</b>
14.1	General description - radio navigation system "RNS 315" .....	126
14.2	Overview of fitting locations - radio navigation system "RNS 315" .....	127
14.3	Removing and installing radio navigation system "RNS 315" .....	129
14.4	Pin assignment - radio navigation system "RNS 315" .....	131
14.5	Anti-theft coding - radio navigation system "RNS 315" .....	134
14.6	Adapting components - radio navigation system "RNS 315" .....	136
<b>15</b>	<b>Radio navigation system "RNS 510" .....</b>	<b>137</b>
15.1	General description - radio navigation system "RNS 510" .....	137
15.2	Overview of fitting locations - radio navigation system "RNS 510" .....	138
15.3	Removing and installing radio navigation system "RNS 510" .....	140
15.4	Pin assignment - radio navigation system "RNS 510" .....	145
15.5	Anti-theft coding - radio navigation system "RNS 510" .....	148
15.6	Adapting components - radio navigation system "RNS 510" .....	150



<b>16</b>	<b>Multimedia system control unit J650</b> .....	<b>151</b>
16.1	General description - multimedia system control unit .....	151
16.2	Fitting location overview - multimedia system control unit .....	151
16.3	Removing and installing multimedia control unit .....	153
16.4	Removing and installing the plug-in connection for the multimedia control unit .....	154
<b>17</b>	<b>CD changer</b> .....	<b>155</b>
17.1	Removing and installing CD changer .....	155
<b>18</b>	<b>TV tuner</b> .....	<b>157</b>
18.1	Removing and installing TV tuner, vehicles as of model year 2010 .....	157
<b>19</b>	<b>Connection for external audio sources</b> .....	<b>159</b>
19.1	General description - connection for external audio sources .....	159
19.2	Removing and installing connection for external audio sources .....	160
19.3	Connector pin assignment - connection for external audio sources .....	161
<b>20</b>	<b>Sound system</b> .....	<b>162</b>
20.1	General description - sound system .....	162
20.2	Removing and installing front mid-range and treble loudspeakers .....	164
20.3	Removing and installing rear mid-range and treble loudspeakers .....	167
20.4	Removing and installing front bass loudspeakers .....	168
20.5	Removing and installing rear bass loudspeakers .....	170
20.6	Removing and installing rear loudspeakers in Camper .....	171
<b>21</b>	<b>Sound system amplifier</b> .....	<b>173</b>
21.1	General description - sound system amplifier .....	173
21.2	System overview - sound system amplifier, vehicles up to model year 2009 .....	174
21.3	System overview - sound system amplifier, vehicles as of model year 2010 .....	174
21.4	Removing and installing amplifier for sound system .....	177
21.5	Connector pin assignment - sound system amplifier .....	179
<b>22</b>	<b>Rear Seat Entertainment (RSE)</b> .....	<b>183</b>
22.1	Components of Rear Seat Entertainment system .....	183
22.2	Overview of fitting locations – Rear Seat Entertainment system .....	184
22.3	Removing and installing Rear Seat Entertainment system .....	184
22.4	Removing and installing interior light bulb .....	185
22.5	Changing batteries in headphones .....	186
22.6	Changing batteries in remote control .....	187
22.7	Pin assignment – Rear Seat Entertainment system .....	188
22.8	Fuse assignment - rear seat entertainment system .....	189
<b>23</b>	<b>“Digital voice enhancement” system (DVE), vehicles up to model year 2009</b> .....	<b>190</b>
23.1	General description - “digital voice enhancement” system .....	190
23.2	Fitting location overview - “digital voice enhancement” system .....	193
23.3	Removing and installing “digital voice enhancement control unit” .....	194
23.4	Connector pin assignment - “digital voice enhancement control unit” .....	196
23.5	Removing and installing “digital voice enhancement” microphone .....	197
23.6	Coding “digital voice enhancement” control unit .....	198
<b>24</b>	<b>“Digital voice enhancement” system (DVE), vehicles as of model year 2010</b> .....	<b>199</b>
24.1	General description - “digital voice enhancement” system .....	199
24.2	Fitting location overview - “digital voice enhancement” system .....	201
24.3	System overview - “digital voice enhancement” system (DVE) .....	203
24.4	Removing and installing “digital voice enhancement control unit” .....	206
24.5	Adapting digital voice enhancement microphones .....	206
<b>25</b>	<b>Telephone system</b> .....	<b>207</b>
25.1	General description - telephone system .....	207
25.2	Overview of fitting locations - telephone system .....	209
25.3	Fitting location overview - telephone system in rear passenger compartment .....	210
25.4	System overview - preparation for mobile telephone, vehicles as of 05.2007 .....	212
25.5	System overview - preparation for mobile telephone, vehicles as of model year 2010 .....	215



25.6	Removing and installing telephone bracket	220
25.7	Removing and installing handset, telephone system in rear passenger compartment	225
25.8	Removing and installing mobile telephone operating electronics control unit	226
25.9	Removing and installing telephone transmitter and receiver unit	228
25.10	Removing and installing telephone system microphone	229
25.11	Removing and installing adapter box for telephone system in rear passenger compartment	233
25.12	Removing and installing loudspeaker control unit for telephone system in rear passenger compartment	235
25.13	Removing and installing emergency assistance call button	236
<b>26</b>	<b>Aerial systems, vehicles up to model year 2009</b>	<b>238</b>
26.1	General description - aerial systems, vehicles up to model year 2009	238
26.2	Fitting location overview - diversity aerial system	239
26.3	Transmitting power - aerial systems	240
26.4	Removing and installing aerial selection control unit J515	241
26.5	Removing and installing aerial amplifier for side window aerial	242
26.6	Removing and installing windscreen aerial	243
26.7	Removing and installing bracket of telephone, navigation system and auxiliary heater aerial R66	244
26.8	Renewal of aerial wiring	245
<b>27</b>	<b>Aerial systems, vehicles as of model year 2010</b>	<b>246</b>
27.1	General description - aerial systems, vehicles as of model year 2010	246
27.2	Overview of fitting locations - aerial systems	248
27.3	Fitting location overview - aerial in modular exterior mirror	254
27.4	Overview of fitting locations - internet access aerial	255
27.5	Removing and installing aerial films for AM/FM/TV/DAB in modular exterior mirror	257
27.6	Removing and installing aerial film for GSM/UMTS telephone in modular exterior mirror	258
27.7	Removing and installing aerial for navigation in modular exterior mirror	260
27.8	Removing and installing aerial for AM/FM/DAB in bow-mounted exterior mirror	262
27.9	Removing and installing telephone aerial (GSM) in bow-mounted exterior mirror	263
27.10	Removing and installing roof aerial for telephone system in rear passenger compartment	264
27.11	Removing and installing front roof aerial R216	265
27.12	Renewal of aerial wiring	267
<b>28</b>	<b>"WiFi" internet access and "GPS" system, vehicles with "Business" equipment level, as of model year 2012</b>	<b>268</b>
28.1	General description - "WiFi" internet access and "GPS" system	268
28.2	System overview - "WiFi" internet access and "GPS" system	269
28.3	Removing and installing internet access control unit J666	270
28.4	Internet access control unit J666 - LED indicator conditions	270
28.5	Internet access control unit J666 - troubleshooting	272
<b>29</b>	<b>Reversing camera system</b>	<b>273</b>
29.1	General description - reversing camera system	273
29.2	Overview of fitting locations - reversing camera system	274
29.3	Removing and installing reversing camera	274
29.4	Removing reversing camera from camera housing and installing it into camera housing	276
29.5	Removing and installing reversing camera system control unit	277
29.6	Coding reversing camera system control unit	278
29.7	Calibrating reversing camera system	278
<b>30</b>	<b>Multifunction steering wheel</b>	<b>285</b>
30.1	General description - multifunction steering wheel	285
30.2	System overview - multifunction steering wheel	286
30.3	Removing and installing multifunction buttons E440 / E441	288
30.4	Connector pin assignment - multifunction steering wheel control unit	290



## Contents

<b>91 - Communication</b> .....	<b>1</b>
<b>1 Removing and installing fax machine</b> .....	<b>1</b>
1.1 General notes .....	1
1.2 Removing fax machine .....	1
1.3 Removing and installing mobile telephone operating electronics control unit J412 (interface box) .....	3
<b>2 DVD system</b> .....	<b>5</b>
2.1 General notes .....	5
2.2 Removing and installing control unit for monitor .....	5
2.3 Removing and installing monitor unit .....	6
2.4 Removing and installing switch to operated monitor .....	7
2.5 Removing and installing DVD system operating unit with headphones connection .....	8
2.6 Removing and installing headphone connection on swivel seat .....	8
2.7 Removing and installing headphones connection on rear seat bench .....	9