



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Overview - power transmission</b>	<b>3</b>
2.1 Overview - power transmission	3
2.2 Overview - power transmission - all-wheel drive	4
<b>3 Technical data</b>	<b>7</b>
3.1 Allocation gearbox - engine, gear ratios and capacities	7
3.2 Allocation gearbox - engine, gear ratios and capacities, four-wheel drive	9
3.3 Calculating overall gear ratio "i"	13
<b>4 Repair notes</b>	<b>15</b>
4.1 Gearbox	15
4.2 Gaskets and seals	15
4.3 Locking devices	16
4.4 Nuts and bolts	16
4.5 Bearings	16
4.6 Shims	17
4.7 Synchro-rings	17
4.8 Gear wheels	17
4.9 Synchromeshed gears	17
4.10 Clutch	17
<b>30 - Clutch</b>	<b>18</b>
<b>1 Clutch mechanism</b>	<b>18</b>
1.1 Assembly overview - pedal cluster	18
1.2 Assembly overview - clutch hydraulics	20
1.3 Assembly overview - clutch release mechanism	22
1.4 Removing and installing clutch pedal	23
1.5 Removing and installing mounting bracket	24
1.6 Removing and installing over-centre spring	27
1.7 Removing and installing clutch master cylinder	28
1.8 Removing and installing clutch master cylinder with mounting bracket removed	32
1.9 Removing and installing clutch pedal switch F36	33
1.10 Bleeding clutch mechanism	34
<b>2 Clutch</b>	<b>36</b>
2.1 Assembly overview - clutch	36
2.2 Removing and installing clutch	38
<b>34 - Controls, housing</b>	<b>42</b>
<b>1 Bevel box</b>	<b>42</b>
1.1 Removing bevel box	42
1.2 Installing bevel box	46
1.3 Removing bevel boxes as of model year 2010	49
1.4 Installing bevel boxes as of model year 2010	52
<b>2 Selector mechanism</b>	<b>56</b>
2.1 Installation position of selector mechanism	56
2.2 Assembly overview – gear knob and cover	57
2.3 Assembly overview - Gear lever and selector housing	58
2.4 Assembly overview – gear levers and selector housings as of model year 2007	61
2.5 Assembly overview – selector cables	63
2.6 Assembly overview – selector cables as of model year 2009	65
2.7 Assembly overview - selector unit	67



2.8	Assembly overview - selector forks	67
2.9	Removing and installing selector mechanism	68
2.10	Distinguishing between selector mechanisms	71
2.11	Adjusting selector mechanism, vehicles with retaining pin on selector unit	72
2.12	Adjusting selector mechanism, vehicles with no retaining pin on selector unit	76
2.13	Renewing selector shaft seal	81
<b>3</b>	<b>Removing and installing gearbox</b>	<b>84</b>
3.1	Specified torques for gearbox	84
3.2	Removing gearbox	86
3.3	Removing gearbox, vehicles as of model year 2010	96
3.4	Removing gearbox, four-wheel drive	105
3.5	Removing gearbox, vehicles with all-wheel drive as of model year 2010	116
3.6	Installing gearbox	125
3.7	Installing gearbox, vehicles as of model year 2010	131
3.8	Installing gearbox, four-wheel drive	138
3.9	Installing gearbox, vehicles with all-wheel drive as of model year 2010	145
<b>4</b>	<b>Transporting gearbox</b>	<b>153</b>
4.1	Transporting gearbox	153
4.2	Transporting gearbox, four-wheel drive	153
4.3	Converting adapter 10 - 222 A /23 with adapter 10 - 222 A /23-1	154
<b>5</b>	<b>Gear oil</b>	<b>156</b>
5.1	Checking gear oil level, manual gearbox	156
5.2	Checking gear oil level, bevel box	158
5.3	Checking gear oil level – bevel boxes as of model year 2010	159
<b>6</b>	<b>Dismantling and assembling gearbox</b>	<b>161</b>
6.1	Schematic overview - gearbox	161
6.2	Schematic overview - four-wheel drive	162
6.3	Assembly overview - input shaft, output shafts, differential and selector rods	163
6.4	Assembly overview - input shaft, output shafts, differential, bevel box and selector rods, all-wheel drive	165
6.5	Dismantling and assembling gearbox	167
<b>7</b>	<b>Gearbox housing, clutch housing</b>	<b>187</b>
7.1	Assembly overview - gearbox housing	187
7.2	Assembly overview - clutch housing	189
7.3	Assembly overview - gearbox housing and clutch housing	191
7.4	Repairing gearbox housing	193
7.5	Repairing clutch housing	195
<b>35 - Gears, shafts</b>		<b>199</b>
<b>1</b>	<b>Input shaft</b>	<b>199</b>
1.1	Assembly overview - input shaft	199
1.2	Dismantling and assembling input shaft	201
1.3	Renewing input shaft seal	207
<b>2</b>	<b>Output shaft</b>	<b>209</b>
2.1	Assembly overview - output shaft for 1st and 2nd gear	209
2.2	Assembly overview - output shaft for 3rd and 4th gear	212
2.3	Assembly overview - output shaft for reverse gear	214
2.4	Dismantling and assembling output shaft for 1st and 2nd gear	216
2.5	Dismantling and assembling output shaft for 3rd and 4th gear	227
2.6	Dismantling and assembling reverse gear output shaft	240
2.7	Removing stop ring and spring from and installing on reverse gear synchromeshed gear	247
2.8	Adjusting output shaft	250
<b>39 - Final drive - differential</b>		<b>251</b>
<b>1</b>	<b>Oil seals</b>	<b>251</b>



1.1	Assembly overview - seals	251
1.2	Renewing seal on left of gearbox	252
1.3	Renewing seal on right of gearbox, front-wheel drive vehicles	256
1.4	Renewing seal on right of gearbox, vehicles with all-wheel drive	260
1.5	Renewing seal on right of bevel box, vehicles up to 2010	262
1.6	Renewing seal on right of bevel box, vehicles as of model year 2010	267
1.7	Renewing seal between output flange and bevel box, vehicles up to model year 2010	271
1.8	Renewing seal between output flange bevel box, vehicles as of model year 2010	275
1.9	Renewing small seal of stub shaft between manual gearbox and bevel box on bevel box, vehicles up to model year 2010	278
1.10	Renewing small seal of stub shaft between manual gearbox and bevel box on bevel box, vehicles as of model year 2010	281
1.11	Renewing large seal of stub shaft between manual gearbox and bevel box on bevel box, vehicles up to model year 2010	286
1.12	Renewing large seal of stub shaft between manual gearbox and bevel box on bevel box, vehicles as of model year 2010	289
<b>2</b>	<b>Differential</b>	<b>293</b>
2.1	Assembly overview - differential	293
2.2	Assembly overview - differential, four-wheel drive	295
2.3	Dismantling and assembling differential	298
2.4	Dismantling and assembling differential - all-wheel drive	305
2.5	Adjusting differential	313
2.6	Removing and installing stub shaft	318
<b>3</b>	<b>Adjustment overview</b>	<b>321</b>
3.1	Adjustment overview	321