



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the cooling system	2
2.2 Safety measures when working on fuel supply	3
2.3 Safety precautions when working on injection system	4
2.4 Safety precautions when working on ignition system	5
3 Repair instructions	7
3.1 Rules for cleanliness when working on fuel supply system/injection system	7
3.2 General notes on injection	7
3.3 General notes on ignition system	7
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Securing engine to assembly stand	16
1.3 Installing engine	16
2 Assembly mountings	18
2.1 Assembly overview - assembly mountings	18
13 - Crankshaft group	19
1 Cylinder block (pulley end)	19
1.1 Assembly overview - poly V-belt drive	19
1.2 Assembly overview - cylinder block (pulley end)	20
1.3 Assembly overview - cylinder block	21
1.4 Removing and installing poly-V belt	22
1.5 Removing and installing bracket for ancillaries	24
1.6 Renewing crankshaft oil seal - belt pulley end	24
1.7 Removing and installing sealing flange on pulley end	26
2 Cylinder block, gearbox end	30
2.1 Assembly overview - cylinder block, gearbox end	30
3 Crankshaft	32
3.1 Assembly overview - crankshaft	32
3.2 Removing and installing sender wheel	34
3.3 Crankshaft dimensions	34
4 Pistons and conrods	35
4.1 Assembly overview - pistons and conrods	35
4.2 Piston and cylinder dimensions	37
4.3 Checking pistons and cylinder bores	37
15 - Cylinder head, valve gear	38
1 Cylinder head	38
1.1 Assembly overview - cylinder head	38
1.2 Removing and installing cylinder head	40
1.3 Checking compression	45
2 Toothed belt drive	49
2.1 Removing and installing toothed belt	49
2.2 Removing and installing toothed belt, 2010 ➤	53
2.3 Checking semi-automatic toothed belt tensioner	59
3 Valve gear	60
3.1 Assembly overview - valve gear	60



3.2	Measuring axial play of camshaft	63
3.3	Removing and installing camshaft oil seal	63
3.4	Removing and installing camshaft	65
3.5	Removing and installing valve stem seals	68
3.6	Checking hydraulic compensation elements	71
4	Inlet and exhaust valves	73
4.1	Reworking valve seats	73
4.2	Checking valve guides	74
4.3	Valve dimensions	75
17 - Lubrication		76
1	Sump, oil pump	76
1.1	Assembly overview - sump/oil pump	76
1.2	Removing and installing sump	77
1.3	Removing and installing oil pump	80
1.4	Engine oil:	80
2	Oil filter, oil pressure switch	81
2.1	Assembly overview - oil filter/oil pressure switch	81
2.2	Checking oil pressure and oil pressure switch	82
2.3	Measuring oil consumption	84
19 - Cooling		85
1	Cooling system/coolant	85
1.1	Connection diagram - coolant hoses	85
1.2	Coolant hose schematic diagram, 2010 ▶	86
1.3	Coolant hose schematic diagram for vehicles with an additional heat exchanger, 2010 ▶	87
1.4	Coolant hose schematic diagram for vehicles with an additional heat exchanger in countries with hot to very hot climates, 2010 ▶	88
1.5	Coolant hose schematic diagram, vehicles with auxiliary heater, 2010 ▶	89
1.6	Coolant hose schematic diagram for vehicles with additional heat exchanger and auxiliary heater, 2010 ▶	90
1.7	Checking cooling system for leaks	90
1.8	Draining and adding coolant	92
2	Coolant pump, regulation of cooling system	101
2.1	Assembly overview - coolant pump, thermostat	101
2.2	Assembly overview - Y thermostat	103
2.3	Removing and installing coolant pump	104
2.4	Removing and installing thermostat	105
2.5	Testing Y-thermostat	107
3	Radiator, radiator fan	109
3.1	Assembly overview - radiator/radiator fan	109
3.2	Assembly overview - radiator, radiator fan, 2010 ▶	110
3.3	Assembly overview - radiator cowl with radiator fan V7 and right radiator fan V35	111
3.4	Assembly overview - radiator cowl with radiator fan V7 , 2010 ▶	112
3.5	Removing and installing radiator	113
3.6	Removing and installing radiator cowl with radiator fan V7 , 2010 ▶	114
24 - Mixture preparation - injection		116
1	Air filter	116
1.1	Assembly overview - air filter housing	116
2	Intake manifold	117
2.1	Assembly overview - intake manifold	117
2.2	Assembly overview - lower part of intake manifold with fuel rail	119
3	Injectors	120



3.1	Removing and installing injectors	120
3.2	Checking injectors	121
3.3	Checking quantity injected	124
4	Senders and sensors	126
4.1	Checking fuel pressure regulator and holding pressure	126
5	Engine control unit	129
5.1	Removing and installing engine (motor) control unit J623	129
26 - Exhaust system		130
1	Exhaust pipes and silencers	130
1.1	Assembly overview - silencers	130
1.2	Separating exhaust pipes from silencers	130
2	Emission control	132
2.1	Assembly overview - emission control	132
3	Exhaust gas recirculation	134
3.1	Assembly overview - exhaust gas recirculation	134
4	Secondary air system	135
4.1	Function	135
4.2	Assembly overview - secondary air system	135
4.3	Checking combination valve	136
28 - Ignition system		137
1	Ignition system	137
1.1	Assembly overview - ignition system	137
1.2	Removing and installing spark plugs	138
1.3	Test data, spark plugs	139