



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the cooling system	2
2.2 Safety regulations for working on fuel supply	2
2.3 Safety precautions when working on ignition system	4
3 Repair instructions	5
3.1 Rules for cleanliness when working on fuel supply system/injection system	5
4 General information	6
4.1 General notes on ignition system	6
5 Technical data	7
5.1 Technical data - injection system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine on engine and gearbox support VAS 6095	13
1.3 Installing engine	14
2 Assembly mountings	16
2.1 Overview - assembly mountings	16
13 - Crankshaft group	17
1 Cylinder block (pulley end)	17
1.1 Assembly overview - cylinder block	17
1.2 Removing and installing poly-V belt	19
1.3 Renewing crankshaft oil seal - belt pulley end	20
2 Cylinder block, gearbox end	23
2.1 Assembly overview - cylinder block, gearbox end	23
2.2 Renewing crankshaft oil seal (gearbox end)	24
2.3 Removing and installing drive plate	25
3 Crankshaft	27
3.1 Assembly overview - crankshaft	27
3.2 Removing and installing sender wheel	28
4 Pistons and conrods	29
4.1 Assembly overview - pistons and conrods	29
4.2 Checking pistons and cylinder bores	31
4.3 Installing piston	32
4.4 Piston and cylinder dimensions	33
15 - Cylinder head, valve gear	34
1 Cylinder head	34
1.1 Assembly overview - cylinder head	34
1.2 Removing and installing cylinder head	38
1.3 Removing and installing cylinder head cover	45
1.4 Checking compression	48
2 Cover for timing chain	52
2.1 Assembly overview - timing chain cover	52
2.2 Installing cover seals	53
3 Chain drive	55
3.1 Assembly overview - timing chain	55



3.2	Checking valve timing	58
3.3	Adjusting valve timing	59
4	Valve gear	66
4.1	Assembly overview - valve gear	66
4.2	Measuring axial play of camshaft	69
4.3	Removing and installing camshafts	69
4.4	Removing and installing valve stem seals	75
5	Inlet and exhaust valves	78
5.1	Checking valve guides	78
5.2	Reworking valve seats	78
5.3	Valve dimensions	80
17	- Lubrication	81
1	Sump, oil pump	81
1.1	Assembly overview - sump/oil pump	81
1.2	Assembly overview - oil pump	84
1.3	Removing and installing oil sump	86
1.4	Measuring oil consumption	87
1.5	Engine oil:	88
2	Oil filter, oil pressure switch	89
2.1	Assembly overview - oil filter housing, oil pressure switch	89
2.2	Checking oil pressure and oil pressure switch	90
19	- Cooling	93
1	Cooling system/coolant	93
1.1	Fitting location overview - cooling system	93
1.2	Overview of fitting locations - coolant hoses	95
1.3	Connection diagram - coolant hoses	96
1.4	Draining and adding coolant	97
1.5	Checking cooling system for leaks	104
2	Coolant pump, regulation of cooling system	106
2.1	Assembly overview - thermostat	106
2.2	Removing and installing coolant pump	107
3	Radiator, radiator fan	109
3.1	Assembly overview - radiator	109
3.2	Assembly overview - radiator cowl and radiator fan V7	110
3.3	Removing and installing radiator	112
24	- Mixture preparation - injection	115
1	Vacuum system	115
1.1	Assembly overview - vacuum system	115
2	Injectors	116
2.1	Removing and installing injectors	116
2.2	Checking injectors	117
3	Senders and sensors	121
3.1	Checking fuel pressure regulator and holding pressure	121
4	Intake manifold	124
4.1	Assembly overview - intake manifold	124
4.2	Exploded view - fuel rail	125
5	Air filter	127
5.1	Assembly overview - air filter	127
6	Engine (motor) control unit	128
6.1	Removing and installing engine (motor) control unit J623	128



26 - Exhaust system	129
1 Exhaust gas cleaning	129
1.1 Assembly overview - emission control	129
1.2 Removing and installing exhaust pipe/catalytic converter	130
2 Exhaust pipes and silencers	133
2.1 Assembly overview - silencers	133
2.2 Separating exhaust pipes from silencers	134
2.3 Aligning exhaust system free of stress	135
3 Secondary air system	136
3.1 Assembly overview - secondary air system	136
3.2 Function	137
3.3 Checking combination valve	137
28 - Ignition system	140
1 Ignition system	140
1.1 Assembly overview - ignition system	140
1.2 Removing and installing ignition coils with output stage	141
1.3 Test data, spark plugs	143