



Contents

00 - Technical data	1
1 Engine number/engine data	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on cooling system	2
2.2 Safety measures when working on fuel supply	3
2.3 Safety precautions when working on injection system	4
3 Repair notes	5
3.1 Rules for cleanliness when working on fuel supply system/injection system	5
3.2 Rules for cleanliness during work on fuel system	5
10 - Removing and installing engine	6
1 Removing and installing engine	6
1.1 Removing engine	6
1.2 Securing engine to assembly stand	12
1.3 Installing engine	12
2 Assembly mountings	15
2.1 Assembly overview - assembly mountings	15
13 - Crankshaft group	16
1 Cylinder block (pulley end)	16
1.1 Assembly overview - poly V-belt drive	16
1.2 Assembly overview - crankcase	17
1.3 Removing and installing poly-V belt	18
1.4 Renewing crankshaft oil seal - belt pulley end	20
1.5 Removing and installing sealing flange on pulley end	22
2 Cylinder block, gearbox end	26
2.1 Assembly overview - cylinder block, gearbox end	26
2.2 Removing and installing sealing flange on gearbox side	28
3 Crankshaft	37
3.1 Assembly overview - crankshaft	37
3.2 Removing and installing sender wheel	38
3.3 Crankshaft dimensions	39
4 Pistons and conrods	40
4.1 Assembly overview - pistons and conrods	40
4.2 Measuring piston projection at TDC	42
4.3 Checking pistons and cylinder bores	43
4.4 Piston and cylinder dimensions	44
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head	48
1.3 Removing and installing cylinder head cover	56
1.4 Checking compression	58
2 Toothed belt drive	61
2.1 Assembly overview - toothed belt drive	61
2.2 Removing and installing toothed belt, vehicles ➤ 12.05	62
2.3 Removing and installing toothed belt, vehicles 01.06 ➤	70
3 Valve gear	79
3.1 Assembly overview - valve gear	79
3.2 Measuring axial clearance of camshaft	80



3.3	Removing and installing camshaft oil seal	81
3.4	Removing and installing camshaft	83
3.5	Removing and installing valve stem seal	88
4	Inlet and exhaust valves	91
4.1	Checking valve guides	91
17 - Lubrication		92
1	Sump, oil pump	92
1.1	Assembly overview - sump/oil pump	92
1.2	Removing and installing sump	93
1.3	Engine oil:	96
2	Oil filter, oil pressure switch	97
2.1	Assembly overview - oil filter housing, oil pressure switch	97
2.2	Checking oil pressure and oil pressure switch	98
2.3	Measuring oil consumption	99
3	Oil circuit	100
3.1	Assembly overview - oil supply line	100
3.2	Removing and installing oil supply line	100
19 - Cooling		103
1	Cooling system/coolant	103
1.1	Coolant hose schematic diagram - engine codes AXB and AXC	103
1.2	Coolant hose schematic diagram - engine codes BRR and BRS	104
1.3	Draining and adding coolant	105
1.4	Checking cooling system for leaks	112
2	Coolant pump, regulation of cooling system	114
2.1	Assembly overview - coolant pump, thermostat	114
2.2	Removing and installing coolant pump	115
2.3	Removing and installing thermostat	116
3	Radiator, radiator fan	119
3.1	Assembly overview - radiator/radiator fan	119
3.2	Removing and installing radiator	120
21 - Turbocharging/supercharging		123
1	Turbocharger	123
1.1	Assembly overview - turbocharger, engine codes AXB and AXC	123
1.2	Assembly overview - turbocharger, engine codes BRR and BRS	125
1.3	Removing and installing turbocharger	127
2	Charge air system	129
2.1	Assembly overview - charge air system	129
2.2	Assembly overview - charge-air hose connections	130
2.3	Checking charge air system for leaks	131
23 - Mixture preparation - injection		133
1	Injectors	133
1.1	Assembly overview - injectors	133
1.2	Removing and installing O-rings for unit injector	134
1.3	Removing and installing injectors	135
1.4	Removing and installing prewiring for unit injectors	138
2	Vacuum system	142
2.1	Vacuum system schematic diagram - engine codes AXB and AXC	142
2.2	Vacuum system schematic diagram - engine codes BRR and BRS, ▶ 2007	143
2.3	Vacuum system schematic diagram - engine codes BRR and BRS, 2008 ▶	144
3	Air filter	145
3.1	Assembly overview - air filter	145



4	Intake manifold	146
4.1	Assembly overview - intake manifold, engine codes BRR and BRS	146
4.2	Assembly overview - intake manifold, engine codes AXB and AXC	146
5	Engine control unit	148
5.1	Removing and installing engine (motor) control unit J623	148
26	- Exhaust system	150
1	Exhaust pipes and silencers	150
1.1	Assembly overview - silencers/catalytic converters	150
1.2	Assembly overview - silencers/particulate filter	151
1.3	Separating exhaust pipes from silencers	152
2	Emission control	153
2.1	Assembly overview - emission control	153
2.2	Removing and installing particulate filter	154
3	Exhaust gas recirculation	158
3.1	Assembly overview - exhaust gas recirculation, engine codes AXB and AXC	158
3.2	Assembly overview - exhaust gas recirculation, engine codes BRR and BRS	159
28	- Glow plug system	160
1	Glow plug system	160
1.1	Removing and installing glow plugs Q10 / Q13	160
1.2	Checking glow plugs Q10 / Q13	162
1.3	Removing and installing engine speed sender G28	164
1.4	Removing and installing Hall sender G40	165