



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>4</b>
2.1 Safety regulations for working on fuel supply	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General information	6
<b>20 - Fuel supply system</b>	<b>9</b>
<b>1 Procedure in event of misfuelling</b>	<b>9</b>
1.1 Procedure in event of misfuelling	9
<b>2 Fuel</b>	<b>14</b>
2.1 Assembly overview - fuel tank	14
2.2 Removing and installing fuel tank	20
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>28</b>
3.1 Removing and installing fuel delivery unit, fuel gauge sender	28
3.2 Removing and installing fuel gauge sender G	29
<b>4 Plug-in connectors</b>	<b>31</b>
4.1 Separating plug-in connectors	31
<b>5 Fuel cooler</b>	<b>38</b>
5.1 Removing and installing fuel cooler	38
<b>6 Fuel filter</b>	<b>40</b>
6.1 Assembly overview – fuel filter	40
6.2 Bleeding fuel system	45
<b>7 Accelerator pedal</b>	<b>46</b>
7.1 Assembly overview - accelerator module	46
<b>8 Fuel supply</b>	<b>47</b>
8.1 Checking fuel system pressurisation pump G6	47
8.2 Removing and installing tandem pump	61
8.3 Checking tandem pump	67
8.4 Supplementary fuel pump V393	78