



Contents

50 - Body - front	1
1 Lock carrier to 2010	1
1.1 Assembly overview – lock carrier	1
1.2 Moving lock carrier to and back from service position with front bumper cover removed	2
1.3 Service position with front bumper cover installed	4
1.4 Removing and installing pressure hoses and hose connections with screw-type clamps	4
1.5 Removing and installing lock carrier with attachments	8
2 Lock carrier from 2010	11
2.1 Assembly overview – lock carrier	11
2.2 Moving lock carrier to and back from service position with front bumper cover fitted	12
2.3 Service position with front bumper cover removed	14
2.4 Removing and installing front end with add-on parts	14
2.5 Removing and installing assembly carrier	16
3 Wings	19
3.1 Assembly overview – wing	19
3.2 Removing and installing wing	19
4 Bulkhead	22
4.1 Assembly overview – bulkhead	22
4.2 Assembly overview – plenum chamber cover	23
4.3 Assembly overview – bulkhead	24
4.4 Assembly overview - battery housing cover	25
4.5 Removing and installing plenum chamber cover	27
55 - Bonnet, rear lid	31
1 Bonnet	31
1.1 Assembly overview – bonnet	31
1.2 Assembly overview - bonnet lock and release components	32
1.3 Assembly overview - bonnet stay	33
1.4 Removing and installing bonnet	34
1.5 Adjusting bonnet	36
1.6 Removing and installing bonnet lock	37
1.7 Removing and installing striker pin	39
1.8 Removing and installing bonnet lock operating lever	39
1.9 Removing and installing hinges	40
1.10 Removing and installing insulation	42
1.11 Removing and installing gas strut	43
1.12 Releasing gas from gas strut	44
2 Rear lid	45
2.1 Assembly overview – rear lid	45
2.2 Assembly overview - guide wedge and centring lug	46
2.3 Assembly overview - locking and release components, rear lid	47
2.4 Assembly overview - interior operating mechanism	51
2.5 Assembly overview - light strip	52
2.6 Removing and installing rear lid	53
2.7 Adjusting rear lid	55
2.8 Removing and installing light strip	60
2.9 Removing and installing hinges	61
2.10 Removing and installing bonnet lock	66
2.11 Removing and installing childproof lock operating mechanism	68
2.12 Removing and installing lock carrier for rear lid	69
2.13 Removing lock cylinder from and installing in lock carrier	73
2.14 Removing and installing mechanical lock cylinder	74



2.15	Exterior handle without lock cylinder as of 2010	76
2.16	Removing and installing interior door handle	81
2.17	Removing and installing rear lid seal	83
2.18	Removing and installing gas strut	83
3	Tank flap unit	85
3.1	Assembly overview - fuel tank flap	85
3.2	Removing and installing fuel tank flap	86
57	Front doors, door components, central locking	89
1	Door	89
1.1	Assembly overview - front door	89
1.2	Assembly overview - additional seals for postal and courier vehicles	90
1.3	Removing and installing inner door seals	91
1.4	Removing and installing door seal	92
1.5	Removing and installing door seal	93
1.6	Removing and installing front door	94
1.7	Renewing front door	96
1.8	Removing and installing striker pin	97
1.9	Greasing new door hinges	98
1.10	Adjusting door	98
1.11	Adjusting striker pin	102
2	Door components	104
2.1	Assembly overview – subframe	104
2.2	Assembly overview – door handle and door lock	105
2.3	Assembly overview - window channels and window slot (aperture) seals	107
2.4	Removing and installing assembly carrier	109
2.5	Removing and installing lock cylinder	112
2.6	Removing and installing door handle	113
2.7	Removing and installing door lock	116
2.8	Removing and installing mounting bracket	118
2.9	Removing and installing window regulator motor	120
3	Central locking	122
3.1	Overview of fitting locations – central locking system	122
3.2	Assembly overview - key with illumination and battery	125
3.3	Assembly overview - ignition key to 2010	125
3.4	Assembly overview - ignition key from 2010	126
3.5	Removing and installing battery for illuminated key	127
3.6	Removing and installing ignition key battery to 2010	128
3.7	Removing and installing ignition key battery from 2010	130
58	Rear doors, door components	132
1	Sliding door	132
1.1	Assembly overview - sliding door roller guides	132
1.2	Assembly overview - sliding door locking and release components	134
1.3	Assembly overview - sliding door remote release mechanism	136
1.4	Assembly overview - interior operating mechanism	137
1.5	Assembly overview - middle guide rail	138
1.6	Removing and installing inner door seals	140
1.7	Removing and installing seal	141
1.8	Removing and installing sliding door	142
1.9	Adjusting sliding door	143
1.10	Removing and installing striker pin	151
1.11	Removing and installing striker pin and power latching motor	152
1.12	Removing and installing lower roller guide	154
1.13	Removing and installing door arrester	155



1.14	Removing and installing hinge	156
1.15	Removing and installing door lock	158
1.16	Removing and installing sliding door remote release mechanism	159
1.17	Removing and installing contact module and contact strip	161
1.18	Removing and installing lock cylinder housing and exterior door handle	163
1.19	Removing and installing mounting bracket	164
1.20	Removing and installing interior door handle	165
1.21	Removing and installing upper guide rail	167
1.22	Removing and installing middle guide rail	168
2	Electrically operated sliding door	172
2.1	Assembly overview - electrical components of electrically operated sliding door	172
2.2	Assembly overview - guide rail with roller bearing	173
2.3	Assembly overview - upper roller guide with transponder	174
2.4	Assembly overview - lower roller guide	175
2.5	Assembly overview - wiring for electric sliding door operation	176
2.6	Removing and installing seal with pinch protection and electric sliding door actuator	177
2.7	Removing and installing sliding door with electrical controls	179
2.8	Removing and installing striker pin with power latching motor	181
2.9	Removing and installing door arrester	182
2.10	Removing and installing motor to open right sliding door V323	183
2.11	Removing and installing guide rail with roller bearing	185
2.12	Removing and installing upper guide rail with reader coil	188
2.13	Removing and installing upper roller guide with transponder	190
2.14	Removing and installing lower roller guide	191
2.15	Removing and installing right electric sliding door sender unit G481	192
3	Sliding door - high	194
3.1	Assembly overview - locking and release components for high sliding door	194
3.2	Assembly overview - emergency release	195
3.3	Removing and installing inner door seals	196
3.4	Renewing pre-seal	197
3.5	Removing and installing additional lock	198
3.6	Removing and installing manual release mechanism	198
3.7	Removing and installing centre stop	200
3.8	Removing and installing guide wedge - wedge guide	200
4	Cab door - double cab	203
4.1	Assembly overview - cab door	203
4.2	Assembly overview - door handle and door lock	204
4.3	Removing and installing inner door seals	205
4.4	Removing and installing cab door	206
4.5	Adjusting cab door	208
4.6	Removing and installing striker pin	210
4.7	Removing and installing door hinge	211
4.8	Removing and installing door arrester	212
4.9	Removing and installing bumper carrier	213
4.10	Removing and installing lock cylinder housing	214
4.11	Removing and installing door handle	216
4.12	Removing and installing mounting bracket	219
4.13	Removing and installing door lock	220
5	Wing doors	222
5.1	Assembly overview - wing door	222
5.2	Assembly overview - wing door hinges	223
5.3	Assembly overview - door arrester with opening angle of 250°	224
5.4	Assembly overview - locking and release components, wing doors, standard roof	225
5.5	Assembly overview - locking and release components, wing doors, high roof	226
5.6	Assembly overview - subframe	227



5.7	Removing and installing wing door seal	228
5.8	Removing and installing inner seal of wing door	229
5.9	Removing and installing wing door	230
5.10	Adjusting wing door	232
5.11	Removing and installing upper striker pin	239
5.12	Removing and installing lower striker pin	240
5.13	Replacing wing door	241
5.14	Removing and installing wing door hinges	241
5.15	Removing and installing door arrester	243
5.16	Installing stop in wing door for door arrester with opening angle of 250°	244
5.17	Removing and installing upper right wing door lock	246
5.18	Removing and installing release lever	247
5.19	Removing and installing lower right wing door lock	249
5.20	Removing and installing lower left wing door lock	250
5.21	Removing and installing childproof lock	251
5.22	Removing and installing latch carrier	251
5.23	Removing and installing interior door handle	253
5.24	Removing and installing exterior door handle	253
5.25	Removing and installing assembly carrier	254
5.26	Removing and installing light strip	256
5.27	Removing and installing upper left wing door lock	257
5.28	Removing and installing lock cylinder	258
60	- Sunroof	260
1	Sliding/tilting sunroof with glass panel (Webasto)	260
1.1	Assembly overview – sliding sunroof	260
1.2	Functional check	262
1.3	Removing and installing sliding/tilting sunroof glass panel	263
1.4	Adjusting height of sliding/tilting sunroof glass panel	264
1.5	Checking parallel running of glass panel	266
1.6	Adjusting parallel running of glass panel	266
1.7	Renewing panel seal	267
1.8	Removing wind deflector	267
1.9	Removing and installing sliding headliner	268
1.10	Removing and installing sliding/tilting sunroof drive	268
1.11	Adjusting drive for sliding/tilting sunroof (zero position)	269
1.12	Removing pre-selector control for sliding/tilting sunroof	271
1.13	Removing and installing carrier unit	272
1.14	Manual operation	273
1.15	Cleaning water drain hoses	273
61	- Convertible roof, hardtop, canopy	276
1	Convertible roof frame and soft top canopy	276
1.1	Assembly overview - canopy frame with canopy	276
1.2	Contact corrosion	279
63	- Bumpers	281
1	Front bumper cover to 2010	281
1.1	Assembly overview - front bumper cover	281
1.2	Assembly overview - front bumper cover, add-on parts	282
1.3	Assembly overview - front bumper cover, add-on parts, commercial vehicles	284
1.4	Assembly overview - bumper carrier	285
1.5	Removing and installing front bumper cover	286
1.6	Removing and installing bumper carrier	288
1.7	Repairing front bumper cover	290
2	Front bumper cover from 2010	291



2.1	Assembly overview - front bumper cover	291
2.2	Assembly overview - front bumper cover, add-on parts	292
2.3	Assembly overview - parking aid and brackets in front bumper cover	293
2.4	Assembly overview - bumper carrier	294
2.5	Removing and installing front bumper cover	295
2.6	Removing and installing front bumper carrier	297
2.7	Repairing front bumper cover	300
2.8	Installing brackets for parking aid system	300
3	Rear bumper cover to 2010	305
3.1	Assembly overview - rear bumper cover	305
3.2	Assembly overview - rear bumper cover, add-on parts	306
3.3	Assembly overview - parking aid and brackets in rear bumper cover	306
3.4	Assembly overview - rear bumper cover, substructure parts	307
3.5	Assembly overview - rear bumper carrier	308
3.6	Removing and installing rear bumper cover	309
3.7	Repairing rear bumper cover	311
3.8	Installing brackets for parking aid system	311
4	Rear bumper cover from 2010	316
4.1	Assembly overview - rear bumper cover	316
4.2	Removing and installing rear bumper cover	317
64 - Glazing		321
1	Repair instructions	321
1.1	Minimum drying times for bonded windows	321
1.2	Window repair	322
1.3	Fitting instructions	322
1.4	Preparing old undamaged window for glazing	324
1.5	Preparing new window for glazing	325
1.6	Preparing body flange for glazing	325
1.7	Touching up paint damage	326
1.8	Cleaning off excess adhesive	326
2	Windscreen	327
2.1	Assembly overview - windscreen	327
2.2	Windscreen spacings	327
2.3	Removing and installing windscreen	330
2.4	Preparing windscreen with viewing window for chassis number for vehicles without chassis number	334
3	Side windows	335
3.1	Assembly overview - side windows	335
3.2	Removing and installing rear side window	338
4	Sliding window	346
4.1	Assembly overview - sliding window	346
4.2	Removing sliding window for sliding door	346
4.3	Removing and installing sliding window in side panel	349
5	Rear windscreen	356
5.1	Assembly overview - rear window	356
5.2	Assembly overview - rear window, double cab and dropside	357
5.3	Assembly overview - rear window, wing door	358
5.4	Assembly overview - sliding window and rear window for partition	359
5.5	Removing undamaged double cab and dropside rear window	360
5.6	Removing broken double cab and dropside rear window	360
5.7	Installing rear window for double cab and dropside	360
5.8	Removing undamaged rear window	361
5.9	Removing broken rear window	362
5.10	Installing rear window	362



5.11	Removing undamaged wing door window	363
5.12	Removing damaged wing door window	364
5.13	Installing rear wing door window	364
5.14	Removing and installing sliding window and rear window for partition	364
6	Front door windows	367
6.1	Removing and installing door window	367
6.2	Adjusting door window	368
66	- Exterior equipment	370
1	Radiator grille to 2010	370
1.1	Assembly overview - radiator grille	370
1.2	Removing and installing radiator grille	370
1.3	Removing and installing radiator grille trim and strip	372
2	Radiator grille from 2010	374
2.1	Assembly overview - radiator grille and emblem	374
2.2	Removing and installing radiator grille and emblem	374
3	Mouldings, trims, extensions	376
3.1	Assembly overview - B-pillar trim	376
3.2	Assembly overview - guide rail	377
3.3	Removing and installing trim strip	377
3.4	Removing and installing roller guide trim	384
3.5	Removing and installing wing cover	386
3.6	Removing and installing guide rail	386
3.7	Renewing roof strip	389
3.8	Renewing protective films	389
4	Noise insulation	391
4.1	Assembly overview - noise insulation	391
4.2	Removing and installing noise insulation	391
5	Underbody cladding	394
5.1	Assembly overviews	394
6	Trim film and protective film	409
6.1	Removing and installing trim film for fog light trim	409
6.2	Fitting instructions	412
7	Exterior mirror to 2010	413
7.1	Assembly overview – exterior mirror, up to 2010	413
7.2	Removing and installing mirror housing	413
7.3	Removing and installing mirror glass	416
7.4	Removing and installing exterior mirror	416
8	Exterior mirrors from 2010	418
8.1	Assembly overview – exterior mirror	418
8.2	Removing and installing mirror glass	419
8.3	Removing and installing housing frame	421
8.4	Removing and installing mirror housing	423
8.5	Removing and installing exterior mirror	424
9	Exterior mirror, double cab and dropside	426
9.1	Assembly overview - exterior mirror, double cab and dropside	426
9.2	Removing and installing double cab and dropside exterior mirror	428
10	Wheel housing liner	429
10.1	Assembly overview – front wheel housing liner	429
10.2	Assembly overview – rear wheel housing liner	430
10.3	Removing and installing front wheel housing liner	430
10.4	Removing and installing rear wheel housing liner	432
11	Lettering and emblem	434
11.1	Assembly overview - lettering on rear lid	434



11.2	Assembly overview - lettering on rear wing doors	435
11.3	Assembly overview - lettering on rear lid, dropside	436
11.4	Dimensions - lettering and emblems on rear lid	437
11.5	Dimensions – lettering on rear, wing doors	439
11.6	Dimensions – lettering on rear, dropside	441
11.7	Removing and installing rear emblem	442
11.8	Removing and installing “BLUEMOTION” lettering on radiator grille	444
11.9	Removing and installing lettering or emblem	445
12	Load floor body	446
12.1	Contact corrosion	446
12.2	Assembly overview - dropside body	446
12.3	Load floor and tailboard	447
12.4	Assembly overview – tailboard, add-on parts	450
12.5	Assembly overview - skid plate for short wheelbase	451
12.6	Assembly overview - skid plate for long wheelbase	451
12.7	Assembly overview - rear wheel housing	452
12.8	Assembly overview - tank trim	453
13	Towing bracket	455
13.1	Assembly overview - rigid towing bracket	455
13.2	Assembly overview - towing bracket, double cab and dropside	456
13.3	Assembly overview - towing eye	457
13.4	Removing and installing rigid towing bracket	458
13.5	Removing and installing towing bracket, double cab and dropside	460
13.6	Removing and installing towing eye	462
14	Spare wheel bracket	464
14.1	Assembly overview - closed bodies	464
14.2	Assembly overview - open bodies	464
15	Mudflap	466
15.1	Assembly overview - front mud flaps	466
15.2	Assembly overview - rear mud flaps	466
15.3	Assembly overview - rear mud flaps, double cab and dropside	467