



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	4
2.1 Safety regulations for working on fuel supply	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General information	6
20 - Fuel supply system	9
1 Procedure in event of misfuelling	9
1.1 Procedure in event of misfuelling	9
2 Fuel	14
2.1 Assembly overview - fuel tank	14
2.2 Removing and installing fuel tank	20
3 Fuel delivery unit, fuel gauge sender	28
3.1 Removing and installing fuel delivery unit, fuel gauge sender	28
3.2 Removing and installing fuel gauge sender G	29
4 Plug-in connectors	31
4.1 Separating plug-in connectors	31
5 Fuel cooler	38
5.1 Removing and installing fuel cooler	38
6 Fuel filter	40
6.1 Assembly overview – fuel filter	40
6.2 Bleeding fuel system	45
7 Accelerator pedal	46
7.1 Assembly overview - accelerator module	46
8 Fuel supply	47
8.1 Checking fuel system pressurisation pump G6	47
8.2 Removing and installing tandem pump	61
8.3 Checking tandem pump	67
8.4 Supplementary fuel pump V393	78