



## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery</b> .....	<b>1</b>
1.1 Fundamentals for batteries .....	1
1.2 Warning notices and safety regulations .....	1
1.3 Battery types .....	3
1.4 Battery load test .....	5
<b>2 Checking battery</b> .....	<b>6</b>
2.1 Checking the various types of batteries .....	6
2.2 Inspection .....	7
2.3 Information about battery replacement and battery gas venting .....	8
2.4 Checking colour indicator in battery cover .....	9
2.5 Battery tester with printer VAS 6161 .....	12
2.6 Battery tester DSS-7814 SET 08.78024-0005 , MAN TGE .....	17
2.7 Current draw test .....	20
2.8 No-load current measurement .....	21
<b>3 Charging the battery</b> .....	<b>29</b>
3.1 Totally discharged batteries .....	29
<b>4 Alternator</b> .....	<b>31</b>
4.1 Checking function of poly V-belt pulley with freewheel .....	31
<b>5 Alternator</b> .....	<b>33</b>
5.1 Checking function of poly V-belt pulley with freewheel .....	33
<b>6 Cruise control system (CCS)</b> .....	<b>34</b>
6.1 General description - cruise control system (CCS) .....	34
6.2 Activating and deactivating cruise control system (CCS) .....	34
<b>90 - Gauges, instruments</b> .....	<b>35</b>
<b>92 - Windscreen wash/wipe system</b> .....	<b>36</b>
<b>1 Washer fluid line hose couplings</b> .....	<b>36</b>
1.1 Hose couplings - windscreen and rear window washer system .....	36
1.2 Hose couplings - windscreen and rear window washer system .....	37
1.3 Hose couplings - headlight washer system .....	38
<b>2 Hose repair</b> .....	<b>39</b>
2.1 General description - hose repair .....	39
2.2 Repairing smooth pipe .....	39
2.3 Repairing corrugated pipe .....	39
<b>94 - Lights, bulbs, switches - exterior</b> .....	<b>42</b>
<b>1 Operation and safety notes for gas discharge lamps</b> .....	<b>42</b>
<b>96 - Lights, bulbs, switches - interior</b> .....	<b>45</b>
<b>1 Immobiliser</b> .....	<b>45</b>
1.1 General description - immobiliser .....	45
1.2 Online system test .....	46
1.3 Immobiliser control unit J362 .....	46
1.4 Immobiliser .....	46
1.5 Engine control unit J623 .....	46
1.6 Immobiliser reader coil .....	47
1.7 Immobiliser reader coil .....	47
1.8 Replacement ignition key .....	47
1.9 Ignition key - variable code transponder .....	47
1.10 New lock set .....	48



1.11	New identity on renewing all components	48
1.12	Adapting ignition key	48
<b>2</b>	<b>12 V socket</b>	<b>50</b>
2.1	Removing and installing 12 V socket	50
2.2	Removing and installing socket illumination bulb L42	52
<b>3</b>	<b>Cigarette lighter U1</b>	<b>53</b>
3.1	General description - cigarette lighter U1	53
3.2	Assembly overview - cigarette lighter U1	53
3.3	Removing and installing cigarette lighter socket	54
3.4	Removing and installing cigarette lighter illumination bulb L28	57
<b>97 - Wiring</b>		<b>59</b>
<b>1</b>	<b>Vehicle diagnostic, testing and information systems</b>	<b>59</b>
1.1	General description - vehicle diagnosis, testing and information system	59
1.2	Connecting vehicle diagnostic tester	59
<b>2</b>	<b>Wiring harness and connector repairs</b>	<b>61</b>
2.1	General notes concerning repairs to vehicle electrical system	61
2.2	Wiring harness repair set	64
2.3	Tool descriptions	67
2.4	Repairs to electrical wiring harnesses	71
2.5	Repairing fibre optic cables	92
2.6	Repair of aerial wires	98
2.7	Repairing connector housings and connectors	112
2.8	Releasing and dismantling connector housings	116
<b>3</b>	<b>Cleaning contact surfaces</b>	<b>123</b>
3.1	General description - contact surface cleaning set VAS 6410	123
3.2	Servicing ring terminals	123
3.3	Repairing threaded electrical connections	125
3.4	Cleaning battery terminal clamp and battery terminal	127
3.5	Preserving threaded electrical connections	128
<b>4</b>	<b>Renewing lambda probe</b>	<b>130</b>
4.1	General notes - renewing lambda probe	130
4.2	Types of protective tube on universal lambda probes	130
4.3	Renewing LSF lambda probe (4-pin)	131
4.4	Renewing LSU lambda probe (6-pin)	132
<b>5</b>	<b>ESD workplace VAS 6613</b>	<b>134</b>
5.1	Use of ESD workplace VAS 6613	134