



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on high-voltage system	1
1.4 Safety precautions when working in vicinity of high-voltage components	2
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
<b>3 Repair notes</b>	<b>5</b>
3.1 General information	5
3.2 Rules for cleanliness	5
3.3 General repair instructions	6
3.4 Gaskets and seals	6
3.5 Bolts and nuts	7
<b>4 Hazard classification for the high-voltage system</b>	<b>8</b>
<b>5 Technical data</b>	<b>9</b>
5.1 Capacities	9
5.2 Allocation gearbox - engine	9
<b>6 Electrical components</b>	<b>12</b>
6.1 Overview of fitting locations - electrical components	12
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch</b>	<b>13</b>
1.1 Assembly overview - dual clutch	13
1.2 Removing and installing clutch end cover	14
1.3 Installing dual clutch	19
1.4 Removing dual clutch	28
<b>34 - Controls, housing</b>	<b>33</b>
<b>1 Mechatronic unit</b>	<b>33</b>
1.1 Removing and installing mechatronic unit	33
1.2 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	41
<b>2 Bevel box</b>	<b>42</b>
2.1 Assembly overview - bevel box	42
2.2 Removing bevel box	44
2.3 Installing bevel box	49
2.4 Checking gear oil level in bevel box	53
2.5 Installing repair kit for stub shaft	55
<b>3 Selector mechanism</b>	<b>59</b>
3.1 Assembly overview - selector mechanism	59
3.2 Manual release from position P	60
3.3 Removing and installing selector mechanism	62
3.4 Checking selector mechanism	65
3.5 Removing and installing gear selector cable	66
3.6 Removing and installing selector lever handle	71
3.7 Checking and adjusting selector lever cable	74
3.8 Renewing selector shaft seal	77
<b>4 Removing and installing gearbox</b>	<b>81</b>
4.1 Specified torques for gearbox	81
4.2 Removing gearbox	81
4.3 Installing gearbox	116



<b>5</b>	<b>Assembly mountings</b>	<b>127</b>
5.1	Assembly overview - assembly mountings	127
<b>6</b>	<b>Transporting gearbox</b>	<b>128</b>
6.1	Transporting gearbox	128
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>131</b>
7.1	Assembly overview - gearbox	131
7.2	Dismantling and assembling gearbox	134
7.3	Removing and installing cap	135
<b>8</b>	<b>Securing to engine and gearbox support</b>	<b>139</b>
8.1	Secure gearbox on engine and gearbox support	139
<b>9</b>	<b>Gear oil circuit</b>	<b>142</b>
9.1	Removing and installing gear oil cooler	142
9.2	Removing and installing gear oil filter	146
<b>10</b>	<b>Gear oil</b>	<b>149</b>
10.1	Checking gear oil level	149
10.2	Draining and filling gear oil	151
<b>35 - Gears, shafts</b>		<b>158</b>
1	<b>Dismantling and assembling gears and shafts</b>	<b>158</b>
<b>39 - Final drive - differential</b>		<b>159</b>
<b>1</b>	<b>Seals</b>	<b>159</b>
1.1	Overview of fitting locations - oil seals	159
1.2	Renewing left seal	160
1.3	Renewing right seal	162
<b>2</b>	<b>Components of bevel box</b>	<b>169</b>
2.1	Renewing bevel box seals	169