



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair notes	7
3.4 Foreign objects in engine	7
3.5 Contact corrosion	7
3.6 Routing and attachment of lines	8
3.7 Fitting radiator and condensers	8
3.8 Checking vacuum system	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Securing engine on engine and gearbox support	21
1.3 Installing engine	23
2 Assembly mountings	28
2.1 Assembly overview - assembly mountings	28
2.2 Removing and installing engine mounting	31
2.3 Removing and installing engine mounting	33
2.4 Removing and installing gearbox mounting	35
2.5 Supporting engine in installation position	37
13 - Crankshaft group	39
1 Cylinder block (pulley end)	39
1.1 Assembly overview - poly V-belt drive	39
1.2 Removing and installing poly-V belt	42
1.3 Removing and installing tensioner for poly V-belt	44
1.4 Removing and installing vibration damper	45
1.5 Removing and installing bracket for ancillaries	52
1.6 Renewing crankshaft oil seal - belt pulley end	54
1.7 Removing and installing engine support	57
2 Cylinder block, gearbox end	61
2.1 Assembly overview - flywheel	61
2.2 Removing and installing flywheel	62
2.3 Removing and installing sealing flange on gearbox side	64
2.4 Renewing needle bearing in drive plate	68
3 Crankshaft	71
3.1 Assembly overview - crankshaft	71
3.2 Crankshaft dimensions	73
3.3 Measuring axial clearance of crankshaft	73
3.4 Measuring radial clearance of crankshaft	74
3.5 Allocation of main bearing shells	75



3.6	Removing and installing sender wheel	77
4	Balancer shaft	78
4.1	Assembly overview - balance shaft	78
4.2	Removing and installing balance shaft	79
5	Pistons and conrods	90
5.1	Assembly overview - pistons and conrods	90
5.2	Removing and installing pistons	92
5.3	Checking pistons and cylinder bores	93
5.4	Separating new conrod	96
5.5	Checking radial clearance of conrods	97
15 - Cylinder head, valve gear	98	
1	Cylinder head	98
1.1	Assembly overview - cylinder head	98
1.2	Removing and installing cylinder head	102
1.3	Checking compression	113
1.4	Removing and installing vacuum pump	114
2	Cover for timing chain	116
2.1	Assembly overview - cover for timing chain	116
2.2	Removing and installing timing chain cover	119
3	Chain drive	124
3.1	Assembly overview - drive chain for balance shaft	124
3.2	Assembly overview - camshaft timing chains	127
3.3	Removing and installing camshaft timing chain	129
3.4	Removing and installing drive chain for balance shaft	145
3.5	Checking valve timing	148
4	Valve gear	150
4.1	Assembly overview - valve gear	150
4.2	Removing and installing camshaft	153
4.3	Removing and installing camshaft adjuster	166
4.4	Removing and installing camshaft control valve 1 N205	167
4.5	Removing and installing valve stem seals	168
4.6	Measuring axial play of camshaft	178
5	Inlet and exhaust valves	180
5.1	Checking valve guides	180
5.2	Checking valves	181
5.3	Valve dimensions	181
17 - Lubrication	182	
1	Sump, oil pump	182
1.1	Removing and installing oil sump	182
1.2	Removing and installing upper part of sump	184
1.3	Removing and installing oil pump	190
1.4	Engine oil:	192
1.5	Removing and installing oil level and oil temperature sender G266	192
2	Engine oil cooler	194
2.1	Assembly overview - engine oil cooler	194
2.2	Removing and installing engine oil cooler	196
3	Crankcase ventilation	198
3.1	Removing and installing oil separator	198
4	Oil filter, oil pressure switch	200
4.1	Removing and installing oil pressure switch F22	200
4.2	Checking oil pressure	200



19 - Cooling	203
1 Cooling system/coolant	203
1.1 Overview of fitting locations – cooling system	203
1.2 Checking cooling system for leaks	205
1.3 Draining and adding coolant	207
2 Coolant pump, regulation of cooling system	217
2.1 Assembly overview - coolant pump, thermostat	217
2.2 Removing and installing coolant pump	219
2.3 Removing and installing thermostat	227
2.4 Removing and installing toothed belt for coolant pump	229
2.5 Removing and installing coolant temperature sender G62	231
2.6 Removing and installing radiator outlet coolant temperature sender G83	232
2.7 Removing and installing coolant valves	234
3 Radiator, radiator fan	236
3.1 Assembly overview - radiator/radiator fan	236
3.2 Removing and installing radiator	236
3.3 Removing and installing radiator cowl with radiator fan	242
21 - Turbocharging/supercharging	244
1 Turbocharger	244
1.1 Assembly overview - turbocharger	244
1.2 Removing and installing turbocharger	247
2 Charge air system	254
2.1 Assembly overview - charge air system	254
2.2 Removing and installing charge air cooler	255
2.3 Removing and installing charge pressure sender G31	256
2.4 Checking charge air system for leaks	258
24 - Mixture preparation - injection	261
1 Injection system	261
1.1 Overview of fitting locations - injection system	261
2 Vacuum system	264
2.1 Connection diagram – vacuum system	264
3 Injectors	265
3.1 Removing and installing injectors	265
3.2 Renewing seals on injectors	266
3.3 Cleaning injectors	269
4 Air filter	272
4.1 Assembly overview - air filter housing	272
4.2 Removing and installing air filter housing	274
5 Intake manifold	276
5.1 Assembly overview - lower part of intake manifold with fuel rail	276
5.2 Removing and installing intake manifold upper part	278
5.3 Removing and installing lower part of intake manifold	280
5.4 Removing and installing throttle valve module J338	282
5.5 Checking intake manifold change-over	284
6 Senders and sensors	287
6.1 Removing and installing air mass meter G70	287
6.2 Removing and installing fuel pressure sender G247	288
7 Engine control unit	290
7.1 Removing and installing engine control unit J623	290
8 High-pressure pump	292
8.1 Assembly overview - high-pressure pump	292



8.2	Removing and installing high-pressure pump	294
9	Lambda probe	297
9.1	Assembly overview - Lambda probe	297
9.2	Removing and installing Lambda probe	298
26 - Exhaust system	302	
1	Exhaust pipes and silencers	302
1.1	Removing and installing centre silencer	302
1.2	Removing and installing rear silencer	303
1.3	Aligning exhaust system free of stress	305
1.4	Checking exhaust system for leaks	306
1.5	Installation position of clamp	306
2	Emission control	309
2.1	Removing and installing catalytic converter	309
28 - Ignition system	314	
1	Ignition system	314
1.1	Assembly overview - ignition system	314
1.2	Removing and installing ignition coils with output stage	315
1.3	Removing and installing knock sensor 1 G61	318
1.4	Removing and installing Hall sender G40	319
1.5	Removing and installing engine speed sender G28	319
1.6	Test data, spark plugs	320