



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Identification of bevel box	4
3 Repair notes	5
3.1 General repair instructions	5
4 Technical data	10
4.1 Capacities	10
4.2 Allocation gearbox - engine	10
4.3 Calculation of gear ratios	11
5 Overview - power transmission	12
5.1 Overview - power transmission - front-wheel drive	12
5.2 Overview - power transmission - all-wheel drive	13
6 Electrical components	16
6.1 Overview of fitting locations - electrical components	16
30 - Clutch	17
1 Clutch mechanism	17
1.1 Assembly overview - pedal cluster	17
1.2 Assembly overview - clutch hydraulics	19
1.3 Assembly overview - clutch release mechanism	20
1.4 Removing and installing clutch pedal	21
1.5 Removing and installing over-centre spring	26
1.6 Removing and installing mounting bracket	29
1.7 Checking clutch master cylinder and clutch slave cylinder	38
1.8 Removing and installing clutch position sender G476	39
1.9 Removing and installing clutch master cylinder	40
1.10 Removing and installing clutch slave cylinder together with release bearing	42
1.11 Removing and installing bleeder	44
1.12 Bleeding clutch mechanism	45
1.13 Checking clutch master cylinder and clutch slave cylinder	47
1.14 Removing and installing bearing bush	47
2 Clutch	48
2.1 Assembly overview - clutch	48
2.2 Removing and installing clutch	48
34 - Controls, housing	53
1 Bevel box	53
1.1 Assembly overview - bevel box	53
1.2 Removing bevel box	55
1.3 Installing bevel box	60
1.4 Checking gear oil level in bevel box	63
1.5 Installing repair kit for stub shaft	65
2 Selector mechanism	69
2.1 Installation position - selector mechanism	69
2.2 Assembly overview - Gear lever and selector housing	70
2.3 Removing and installing selector mechanism	72
2.4 Adjusting selector mechanism	73



2.5	Removing and installing selector cable	76
2.6	Removing and installing selector lever handle	79
2.7	Renewing selector shaft seal	81
2.8	Checking selector mechanism	82
2.9	Removing and installing mounting for cable support bracket	83
2.10	Removing and installing relay lever	83
3	Removing and installing gearbox	85
3.1	Specified torques for gearbox	85
3.2	Removing gearbox	86
3.3	Installing gearbox	107
4	Assembly mountings	125
4.1	Assembly overview - assembly mountings	125
5	Gearbox transport	127
5.1	Gearbox transport	127
6	Dismantling and assembling gearbox	130
6.1	Schematic overview - gearbox	130
6.2	System overview - gearbox	132
6.3	Assembly overview - gearbox housing and selector mechanism	133
6.4	Assembly overview - selector unit	137
6.5	Assembly overview - input shaft, output shafts, differential, selector rods	137
6.6	Assembly overview - selector forks	139
6.7	Dismantling and assembling gearbox	140
7	Gearbox housing, clutch housing	180
7.1	Assembly overview - gearbox housing	180
7.2	Assembly overview - clutch housing	182
7.3	Repairing gearbox housing	184
7.4	Repairing clutch housing	187
8	Securing to engine and gearbox support	191
8.1	Securing to engine and gearbox support	191
9	Gear oil	193
9.1	Checking gear oil level	193
35 - Gears, shafts		196
1	Input shaft	196
1.1	Assembly overview - input shaft	196
1.2	Dismantling and assembling input shaft	200
2	Output shaft	216
2.1	Assembly overview - output shaft	216
2.2	Dismantling and assembling output shaft	223
2.3	Adjusting output shaft	256
39 - Final drive - differential		257
1	Seals	257
1.1	Overview of fitting locations - oil seals	257
1.2	Renewing left seal	257
1.3	Renewing right seal	262
1.4	Renewing input shaft seal	267
2	Differential	270
2.1	Assembly overview - differential	270
2.2	Dismantling and assembling differential	272
2.3	Adjusting differential	281
3	Components of bevel box	287
3.1	Renewing bevel box seals	287