



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when tow-starting or towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair notes	5
3.1 General information	5
3.2 Rules for cleanliness	5
3.3 General repair instructions	6
3.4 Gaskets and seals	6
3.5 Nuts and bolts	7
3.6 Routing and attachment of lines	7
4 Technical data	8
4.1 Capacities	8
4.2 Allocation gearbox - motor	8
5 Electrical components	11
5.1 Overview of fitting locations - electrical components	11
6 Hazard classification of high-voltage system	12
30 - Clutch	13
1 Clutch	13
1.1 Assembly overview - dual clutch	13
1.2 Removing and installing clutch end cover	13
1.3 Removing dual clutch	16
1.4 Installing dual clutch	18
34 - Controls, housing	26
1 Mechatronic unit	26
1.1 Assembly overview – mechatronic unit	26
1.2 Removing and installing mechatronic unit	27
1.3 Removing and installing sump	30
2 Bevel box	32
2.1 Assembly overview - bevel box	32
2.2 Removing bevel box	34
2.3 Installing bevel box	36
2.4 Checking gear oil level in bevel box	36
3 Selector mechanism	39
3.1 Assembly overview – selector mechanism	39
3.2 Manual release from P position	41
3.3 Removing and installing selector mechanism	41
3.4 Checking selector mechanism	43
3.5 Removing and installing selector lever cable	45
3.6 Removing and installing selector lever handle	46
3.7 Checking and adjusting selector lever cable	49
3.8 Renewing selector shaft seal	49
4 Removing and installing gearbox	52
4.1 Specified torques for gearbox	52
4.2 Removing gearbox	52
4.3 Installing gearbox	65



5	Assembly mountings	72
5.1	Assembly overview - assembly mountings	72
6	Gearbox transport	73
6.1	Transporting gearbox	73
7	Dismantling and assembling gearbox	77
7.1	Assembly overview – gearbox	77
7.2	Removing and installing cap	81
7.3	Removing and installing gearbox breather	84
8	Securing to engine and gearbox support	86
8.1	Secure gearbox on engine and gearbox support	86
9	Gear oil circuit	87
9.1	Removing and installing gear oil cooler	87
9.2	Removing and installing gearbox oil filter	91
10	Gear oil	93
10.1	Checking gear oil level	93
10.2	Draining and filling gear oil	95
11	Senders and sensors	98
11.1	Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	98
35 - Gears, shafts		99
1	Dismantling and assembling gears and shafts	99
39 - Final drive - differential		100
1	Oil seals	100
1.1	Overview of fitting locations – oil seals	100
1.2	Renewing left seal	101
1.3	Renewing right seal	102
2	Components of bevel box	106
2.1	Renewing oil seals for bevel box	106
2.2	Dismantling and assembling stub shaft	112