



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on SCR system	2
1.5 Safety precautions when working on the exhaust system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 General information</b>	<b>6</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	6
<b>4 Repair notes</b>	<b>7</b>
4.1 Routing and attachment of lines	7
4.2 General repair instructions	7
4.3 Checking vacuum system	7
4.4 Assessing quality of diesel fuel	8
<b>20 - Fuel supply system</b>	<b>10</b>
<b>1 Procedure in event of misfuelling</b>	<b>10</b>
1.1 Procedure in event of misfuelling	10
<b>2 Fuel</b>	<b>17</b>
2.1 Assembly overview - fuel tank	17
2.2 Draining fuel tank	24
2.3 Removing and installing fuel tanks	27
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>40</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	40
3.2 Removing and installing fuel delivery unit, fuel gauge sender	42
3.3 Removing and installing fuel gauge sender G	44
<b>4 Plug-in connectors</b>	<b>46</b>
4.1 Disconnecting plug-in connectors	46
<b>5 Fuel filter</b>	<b>53</b>
5.1 Assembly overview - fuel filter	53
5.2 Removing and installing fuel filter	60
5.3 Removing and installing water separator sender G63	65
<b>6 Accelerator mechanism</b>	<b>66</b>
6.1 Assembly overview - accelerator pedal module	66
6.2 Removing and installing accelerator module with accelerator position sender G79/G185	66
<b>7 Fuel pump</b>	<b>68</b>
7.1 Checking fuel system pressurisation pump G6	68
7.2 Supplementary fuel pump V393	76
7.3 Removing and installing fuel pump control unit J538	83