

001 - Basic equipment	1-15
1. Basic equipment	1
2. Fuse holder B, Fuse holder C	2
3. Fuse holder C	3
4. Onboard supply control unit, Fuse holder C	4
5. Hazard warning light switch, Onboard supply control unit, Data bus diagnostic interface	5
6. Ignition/starter switch, Onboard supply control unit, Selector lever sensors control unit, Engine/motor control unit, Ignition key withdrawal lock solenoid	6
7. Front left brake pad wear sender, Rear right brake pad wear sender, Onboard supply control unit	7
8. Rotary light switch, Horn and dual tone horn, Bass horn, Onboard supply control unit	8
9. Onboard supply control unit, Left tail light cluster, Right tail light cluster, Reversing camera, Automatic anti-dazzle interior mirror	9
10. Reversing light switch, Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	10
11. Brake fluid level warning contact, Windscreen washer fluid level sender, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	11
12. Steering column combination switch, Onboard supply control unit	12
13. Steering column combination switch, Onboard supply control unit	13
14. Steering column combination switch, Horn plate, Airbag control unit, Onboard supply control unit, Airbag igniter on driver side	14
15. Immobiliser reader coil, Handbrake warning switch, Fuel gauge sender, Control unit in dash panel insert, Control unit 1 for information electronics, Dash panel insert	15
002 - Automatic anti-dazzle interior mirror , (4L6)	16-17
1. Automatic anti-dazzle interior mirror , (4L6)	16
2. Onboard supply control unit, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	17
003 - Interior lights	18-27
1. Interior lights	18
2. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	19
3. Contact strip in left B-pillar, Contact strip in right B-pillar, Onboard supply control unit, Rear left door lock unit, Rear right door lock unit, Rear left sliding door lock unit, Rear right sliding door lock unit	20
4. Interior mirror, Onboard supply control unit, Special vehicle control unit, Front interior light, Left footwell light, Right footwell light, Automatic anti-dazzle interior mirror	21
5. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Right step light	22
6. Onboard supply control unit, Step light	23
7. Rear interior light 3, Rear left reading light, Rear right reading light, Left centre reading light, Right centre reading light	24
8. Additional interior light, Additional interior light 2, Rear interior light, Rear driver side entry light, Rear passenger side entry light	25
9. Rear lid contact switch, Coupling point on left D-pillar, Coupling point for rear lid	26
10. Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	27
004 - Anti-lock brake system (ABS)	28-33
1. Anti-lock brake system (ABS)	28
2. Differential lock control unit, ABS hydraulic unit, Fuse holder A, Fuse holder B	29
3. Brake light switch, Brake fluid level warning contact, Steering angle sender, Steering moment sender, Power steering control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, ABS hydraulic unit	30
4. Driver door contact switch, Driver side central locking lock unit, Front right speed sensor, Front left speed sensor, Vacuum sender, Onboard supply control unit, ABS hydraulic unit, Driver door lock unit	31
5. Switch module 1 in dash panel, next to steering wheel, Button for TCS and electronic stabilisation program, Hill descent control button, ABS hydraulic unit	32
6. Rear right speed sensor, Rear left speed sensor	33
005 - Roof ventilator , (3JF)	34-36
1. Roof ventilator , (3JF)	34
2. Switch for roof ventilator to ventilate load area, Switch for roof ventilator to extract air from load area, Onboard supply control unit, Load area ventilation warning lamp, Load area air extraction warning lamp, Fuse holder H	35
3. Coupling point on left A-pillar, Roof ventilator	36
006 - Parking aid (PDC) , (7X1),(7X2),(7X5),(8A6),(8A7),(8A8),(8A9)	37-43
1. Parking aid (PDC) , (7X1),(7X2),(7X5),(8A6),(8A7),(8A8),(8A9)	37
2. Centre switch module in dash panel, Parking aid control unit, Onboard supply control unit, Park assist steering control unit. Fuse holder C	38

3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit, Park assist steering control unit	39
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	40
5. Rear parking aid warning buzzer, Parking aid control unit, Park assist steering control unit	41
6. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender	42
7. Rear left park assist steering sender, Rear right park assist steering sender	43
007 - Lane change assist	44-46
1. Lane change assist	44
2. Suppression filter, Lane change assist control unit 2, Lane change assist warning lamp in left exterior mirror, Fuse holder C, Left exterior mirror	45
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist warning lamp in right exterior mirror, Right exterior mirror	46
008 - Rotating lights (yellow)	47-49
1. Rotating lights (yellow)	47
2. Switch module 2 in dash panel, next to steering wheel, Onboard supply control unit, Rotating light control unit, Fuse holder H	48
3. Rotating light relay, Coupling point on left B-pillar, bottom, Coupling point for roof, left	49
009 - Electric tachograph	50-53
1. Electric tachograph	50
2. Tachograph, Interface control unit for telematics, Fuse holder C	51
3. Tachograph, Tachograph sender, Onboard supply control unit, Data bus diagnostic interface	52
4. Tachograph, Control unit for external vehicle communication, Coupling point in interior	53
010 - Electrically operated rear lid , (4E7)	54-60
1. Electrically operated rear lid , (4E7)	54
2. Parking aid control unit, Voltage supply relay 1, Voltage supply relay 2, Fuse holder C, Fuse holder H	55
3. Rear lid remote release button, Onboard supply control unit	56
4. Onboard supply control unit, Data bus diagnostic interface, Rear lid control unit	57
5. Rear lid handle release button, Button to close rear lid in luggage compartment, Rear lid contact switch, Rear lid warning buzzer, Rear lid control unit	58
6. Rear lid control unit, Power latching for rear lid, Rear lid drive unit	59
7. Rear lid control unit, Rear lid drive unit 2	60
011 - Roof-mounted turn signals , (9H1),(9H2)	61-63
1. Roof-mounted turn signals , (9H1),(9H2)	61
2. Rear left turn signal additional relay, Fuse holder A, Fuse holder C	62
3. Rear right turn signal additional relay, Onboard supply control unit, Fuse holder C	63
012 - Accident data memory	64-65
1. Accident data memory	64
2. Accident data memory button, Special vehicle control unit, Accident data memory, Fuse holder C	65
013 - Electromechanical power steering (Servotronic)	66-67
1. Electromechanical power steering (Servotronic)	66
2. Power steering control unit, Data bus diagnostic interface, Fuse holder A	67
014 - LED headlights	68-73
1. LED headlights	68
2. Onboard supply control unit, Fuse holder C	69
3. Rotary light switch, Steering column combination switch, Onboard supply control unit	70
4. Onboard supply control unit, Data bus diagnostic interface, Left turn signal repeater bulb, Right turn signal repeater bulb	71
5. Rear right vehicle level sender, Front right vehicle level sender, Headlight range control unit, Data bus diagnostic interface	72
6. Headlight range control unit, Front left headlight, Front right headlight	73
015 - Automatic adaptive suspension, adjustable dampers	74-78
1. Automatic adaptive suspension, adjustable dampers	74
2. Centre switch module 3 in dash panel, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	75
3. Rear body acceleration sender, Electronically controlled damping control unit, Rear right shock absorber damping adjustment valve	76
4. Rear left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve	77
5. Front left vehicle level sender, Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve. Front right shock absorber damping adjustment valve	78

016 - Airbag systems for LHD vehicles , (L0L)	79-87
1. Airbag systems for LHD vehicles , (L0L)	79
2. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Diagnostic connection	80
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Emergency call module control unit and communication unit	81
4. Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	82
5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	83
6. Driver side belt switch, Airbag control unit, Passenger side curtain airbag rear igniter	84
7. Front passenger side belt switch, Front passenger side belt fastened contact, Seat occupied sensor on front passenger side, Pressure sensor for seat occupied recognition, Airbag control unit	85
8. Belt switch for seat row 1, centre, Airbag control unit	86
9. Rear centre belt switch, Rear left belt switch	87
017 - Airbag systems for RHD vehicles , (L0R)	88-96
1. Airbag systems for RHD vehicles , (L0R)	88
2. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Diagnostic connection	89
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Emergency call module control unit and communication unit	90
4. Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	91
5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	92
6. Driver side belt switch, Airbag control unit, Driver side curtain airbag rear igniter, Passenger side curtain airbag rear igniter	93
7. Front passenger side belt switch, Front passenger side belt fastened contact, Seat occupied sensor on front passenger side, Pressure sensor for seat occupied recognition, Airbag control unit	94
8. Belt switch for seat row 1, centre, Airbag control unit	95
9. Rear centre belt switch, Rear left belt switch	96
018 - Multifunction steering wheel	97-98
1. Multifunction steering wheel	97
2. Steering column combination switch, Horn plate, Multifunction steering wheel control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	98
019 - Headlights with halogen bulbs (H7)	99-103
1. Headlights with halogen bulbs (H7)	99
2. Steering column combination switch, Onboard supply control unit, Fuse holder C	100
3. Rotary light switch, Headlight range control regulator, Onboard supply control unit	101
4. Onboard supply control unit, Front left headlight	102
5. Onboard supply control unit, Front right headlight, Left turn signal repeater bulb, Right turn signal repeater bulb	103
020 - Rear left door	104-105
1. Rear left door	104
2. Rear left central locking lock unit, Onboard supply control unit, Fuse holder C, Rear left door lock unit	105
021 - Manually controlled heater, 2nd heat exchanger with passenger compartment ventilation, air recirculation via headliner with air conditioner ducts , (9AC),(KC1)	106-113
1. Manually controlled heater, 2nd heat exchanger with passenger compartment ventilation, air recirculation via headliner with air conditioner ducts , (9AC),(KC1)	106
2. Circulation pump relay, Fuse holder C, Circulation pump	107
3. Heater and air conditioning controls, Additional display and operating unit 1, Fresh air blower control unit, Fuse holder C, Fresh air blower	108
4. Heater and air conditioning controls, Data bus diagnostic interface, Coupling point in engine compartment	109
5. Heater and air conditioning controls, Operating and display unit for camping equipment	110
6. Heater and air conditioning controls, Temperature flap, Air distribution flap, Air recirculation flap	111
7. Rear fresh air blower control unit, Rear fresh air blower, Rear temperature flap	112
8. Rear fresh air blower switch. Onboard supply control unit. Coolant shut-off valve. Rear fresh air	113

blower	
022 - Climatic , (KC2),(KC3),(KC4),(KH6)	114-125
1. Climatic , (KC2),(KC3),(KC4),(KH6)	114
2. Circulation pump relay, Fuse holder C, Circulation pump	115
3. Pressure sender for refrigerant circuit, Fresh air blower control unit, Fuse holder C, Fresh air blower	116
4. Magnetic clutch relay, Coolant shut-off valve relay, Climatronic coolant shut-off valve, Fuse holder B	117
5. Heater and air conditioning controls, Air conditioning system control unit, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Air conditioner compressor	118
6. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface	119
7. Heater and air conditioning controls, Air conditioning system control unit	120
8. Heater and air conditioning controls, Operating and display unit for camping equipment, Additional display and operating unit 1, Air conditioning system control unit, Air recirculation flap	121
9. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioning system control unit, Temperature flap, Air distribution flap	122
10. Rear temperature flap, Rear air distribution flap	123
11. Rear fresh air blower control unit, Rear fresh air blower, Rear air distribution flap 2	124
12. Rear fresh air blower switch, Onboard supply control unit, Coolant shut-off valve, Rear fresh air blower	125
023 - Climatronic , (9AH)	126-138
1. Climatronic , (9AH)	126
2. Circulation pump relay, Fuse holder C, Circulation pump	127
3. Pressure sender for refrigerant circuit, Fresh air blower control unit, Fuse holder C, Fresh air blower	128
4. Magnetic clutch relay, Coolant shut-off valve relay, Climatronic coolant shut-off valve, Fuse holder B	129
5. Heater and air conditioning controls, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Air conditioner compressor	130
6. Heater and air conditioning controls, Operating and display unit for camping equipment, Additional display and operating unit 1, Data bus diagnostic interface	131
7. Heater and air conditioning controls	132
8. Heater and air conditioning controls, Sunlight penetration photosensor, Vent temperature sender, driver side, Vent temperature sender, front passenger side	133
9. Heater and air conditioning controls, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Defroster flap	134
10. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap, Footwell flap	135
11. Heater and air conditioning controls, Air distribution flap, Fresh air and air recirculation flap	136
12. Rear vent temperature sender, Rear temperature flap, Rear air distribution flap	137
13. Rear fresh air blower control unit, Rear fresh air blower, Rear air distribution flap 2	138
024 - Electric sliding door with power latching system , (5Q4),(5R4)	139-148
1. Electric sliding door with power latching system , (5Q4),(5R4)	139
2. Fuse holder C, Fuse holder H, Fuse holder K	140
3. Sliding door reader coil, Sliding door solenoid coil, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit	141
4. Centre switch module 4 in dash panel, Rear driver side door control unit, Rear passenger side door control unit, Sliding door opening motor	142
5. Rear left exterior door handle switch, Rear left interior door handle switch, Sliding door sender unit, Anti-trapping sender, Onboard supply control unit, Data bus diagnostic interface, Rear left power latching motor	143
6. Operating unit with manual release mechanism for left sliding door, Contact strip in left sliding door, Contact strip in left B-pillar, Onboard supply control unit, Rear left sliding door lock unit, Rear left power latching motor	144
7. Operating unit with manual release mechanism for right sliding door, Contact strip in right sliding door, Contact strip in right B-pillar, Onboard supply control unit, Rear right sliding door lock unit, Rear right power latching motor	145
8. Rear right exterior door handle switch, Rear right interior door handle switch, Right anti-trapping sensor, Right electric sliding door sender unit, Rear right power latching motor	146
9. Rear driver side door control unit, Rear passenger side door control unit, Motor to open right sliding door	147
10. Right sliding door reader coil. Right sliding door solenoid coil. Rear driver side door control	148

	unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit	
025 -	Power latching system for sliding doors , (5Q7),(5R7)	149-153
	1. Power latching system for sliding doors , (5Q7),(5R7)	149
	2. Rear left exterior door handle switch, Rear left interior door handle switch, Contact strip in left sliding door, Contact strip in left B-pillar, Onboard supply control unit, Fuse holder C, Fuse holder K, Rear left power latching motor	150
	3. Operating unit with manual release mechanism for left sliding door, Contact strip in left sliding door, Contact strip in left B-pillar, Onboard supply control unit, Rear left sliding door lock unit, Rear left power latching motor	151
	4. Operating unit with manual release mechanism for right sliding door, Contact strip in right B-pillar, Onboard supply control unit, Rear right sliding door lock unit	152
	5. Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right B-pillar, Onboard supply control unit, Rear right power latching motor	153
026 -	Convenience system , (L0L)	154-164
	1. Convenience system , (L0L)	154
	2. Driver side interior locking button for central locking system, Onboard supply control unit, Fuse holder C	155
	3. Driver door control unit, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	156
	4. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	157
	5. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit	158
	6. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door lock unit	159
	7. Operating unit with manual release mechanism for left sliding door, Rear left central locking lock unit, Rear left exterior door handle switch, Rear left interior door handle switch, Contact strip in left B-pillar, Onboard supply control unit, Rear left sliding door lock unit	160
	8. Operating unit with manual release mechanism for right sliding door, Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right B-pillar, Onboard supply control unit, Rear right sliding door lock unit	161
	9. Onboard supply control unit	162
	10. Rear lid release switch, Rear lid handle release button, Rear lid contact switch, Protective diode, Power latching control unit	163
	11. Rear lid release switch, Rear lid handle release button, Rear lid central locking motor	164
027 -	Convenience system , (L0R)	165-175
	1. Convenience system , (L0R)	165
	2. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Fuse holder C	166
	3. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger door lock unit	167
	4. Driver side interior locking button for central locking system, Onboard supply control unit	168
	5. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	169
	6. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	170
	7. Operating unit with manual release mechanism for left sliding door, Rear left central locking lock unit, Rear left exterior door handle switch, Rear left interior door handle switch, Contact strip in left B-pillar, Onboard supply control unit, Rear left sliding door lock unit	171
	8. Operating unit with manual release mechanism for right sliding door, Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right B-pillar, Onboard supply control unit, Rear right sliding door lock unit	172
	9. Onboard supply control unit	173
	10. Rear lid release switch, Rear lid handle release button, Rear lid contact switch, Protective diode, Power latching control unit	174
	11. Rear lid release switch, Rear lid handle release button, Rear lid central locking motor	175
028 -	Electrically adjustable and heated exterior mirror with fold-in feature , (L0L),(6XP)	176-181
	1. Electrically adjustable and heated exterior mirror with fold-in feature , (L0L),(6XP)	176
	2. Onboard supply control unit, Fuse holder C	177
	3. Mirror adjustment switch, Driver door control unit, Left exterior mirror	178
	4. Driver door control unit, Left exterior mirror	179
	5. Suppression filter, Driver door control unit, Front passenger door control unit	180
	6. Front passenger door control unit, Right exterior mirror	181
029 -	Electrically adjustable and heated exterior mirror , (L0L),(6XN)	182-185
	1. Electrically adjustable and heated exterior mirror . (L0L).(6XN)	182

2. Mirror adjustment switch, Onboard supply control unit	183
3. Mirror adjustment switch, Left exterior mirror	184
4. Right exterior mirror	185
030 - Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (7VE),(7VF),(7VG),(7VL),(9M4),(9M5)	186-191
1. Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (7VE),(7VF),(7VG),(7VL),(9M4),(9M5)	186
2. Auxiliary coolant heater relay, Auxiliary coolant heater coolant circuit valve relay, Engine/motor control unit, Heater coolant shut-off valve, Fuse holder B	187
3. Circulation pump relay, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Fuse holder C	188
4. Operating and display unit for camping equipment, Additional display and operating unit 1, Data bus diagnostic interface, Coupling point on dash panel, centre	189
5. Auxiliary heater control unit, Metering pump, Circulation pump	190
6. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Glow plug with flame monitor	191
031 - Auxiliary air heater , (9M4),(7VA),(7VG),(7VF),(7VM)	192-195
1. Auxiliary air heater , (9M4),(7VA),(7VG),(7VF),(7VM)	192
2. Temperature sensor for air inlet on auxiliary air heater, Auxiliary air heater control unit, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Fuse holder C, Fuse holder H	193
3. Flame monitor, Temperature sensor for air outlet on auxiliary air heater, Auxiliary air heater control unit, Glow plug for heater, Combustion air blower 2, Metering pump 2	194
4. Heater and air conditioning controls, Operating and display unit for camping equipment, Additional display and operating unit 1, Data bus diagnostic interface	195
032 - Windscreen heater , (4GR)	196-198
1. Windscreen heater , (4GR)	196
2. Heated windscreen relay, Onboard supply control unit, Fuse holder A, Fuse holder B, Fuse holder J, Heated windscreen	197
3. Centre switch module 2 in dash panel, Onboard supply control unit	198
033 - Fog light	199-200
1. Fog light	199
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb	200
034 - Cigarette lighter and 12 V sockets	201-203
1. Cigarette lighter and 12 V sockets	201
2. Fuse holder H, Cigarette lighter, 12 V socket, 12 V socket 2	202
3. 12 V socket 3, 12 V socket 4, 12 V socket 5, 12 V socket 6, 12 V socket 7, 12 V socket 8	203
035 - USB charging sockets	204-207
1. USB charging sockets	204
2. Fuse holder C, Fuse holder H, USB charging socket 1, USB charging socket 1 for special vehicles	205
3. Onboard supply control unit, Left USB charging socket, seat row 3	206
4. Control unit 1 for information electronics, USB charging socket 2, USB connection 1	207
036 - Radio systems/navigation systems	208-214
1. Radio systems/navigation systems	208
2. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	209
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	210
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone	211
5. Control unit 1 for information electronics, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker	212
6. Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	213
7. Control unit 1 for information electronics, GPS aerial, Radio aerial 2, Digital radio aerial, Radio aerial	214
037 - Tyre Pressure Monitoring System	215-216
1. Tyre Pressure Monitoring System	215
2. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Fuse holder C	216
038 - Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	217-220
1. Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	217
2. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	218
3. Operating unit for preparation for mobile telephone. Emergency call module control unit and	219

communication unit, GPS aerial, LTE aerial 1, LTE aerial 2, Loudspeaker for emergency call module	
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone	220
039 - Preparation for mobile telephone , (9IJ),(9ZX)	221-223
1. Preparation for mobile telephone , (9IJ),(9ZX)	221
2. Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Fuse holder C	222
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone, Storage compartment with interface for mobile telephone	223
040 - Special equipment, police , (IP2)	224-244
1. Special equipment, police , (IP2)	224
2. Fuse holder C, Fuse holder G, Fuse holder H	225
3. Front stop command light, Two-way radio voltage relay, Rotating light relay, 12 V socket for special vehicles	226
4. Flashing lights relay, Terminal 75 voltage supply relay 1, Flashing lights relay 2, 2-pin connector, Charging station for hand-held 2-way radio	227
5. Blocking diode, Onboard supply control unit, Special vehicle control unit	228
6. Ignition/starter switch, Centre switch module 1 in dash panel, Centre switch module 2 in dash panel, 2-way radio switch, Interior lighting central switch button, Ignition bypass button, Button for daytime running light switch-off, Special vehicle control unit, Engine/motor control unit, Two-way radio warning lamp, Ignition bypass warning lamp, Rear interior lights button warning lamp, Warning lamp for daytime running lights switch-off	229
7. Handbrake warning switch, Control unit in dash panel insert, Special vehicle control unit, Control unit for ignition bypass, Dash panel insert, 12-pin connector, Coupling point in left seat box, Coupling point in right seat box	230
8. Special vehicle control unit, 12-pin connector	231
9. Special vehicle control unit, 8-pin connector	232
10. Special vehicle control unit	233
11. Special vehicle control unit, 10-pin connector	234
12. Accident data memory button, Special vehicle control unit, Accident data memory, Left roof-mounted turn signal bulb, Right roof-mounted turn signal bulb	235
13. Special vehicle control unit, 10-pin connector, Coupling point for roof, left, Coupling point for roof, right	236
14. Microphone 2 on driver side, 2-pin connector	237
15. Two-way radio loudspeaker volume control 1, Two-way radio loudspeaker volume control 2, Two-way radio loudspeaker, Two-way radio loudspeaker 2, Two-way radio loudspeaker 3, Two-way radio loudspeaker 4, Coupling point for two-way radio in special vehicle	238
16. 2-pin connector, 8-pin connector	239
17. 12-pin connector, Coupling point for rear lid	240
18. Rear stop command light, Flashing light in rear lid, 12-pin connector	241
19. Coupling point for roof, left, Rear lid light, Rear lid light 2	242
20. 12 V socket 2 for special vehicles, Rear interior light 4, Left reading light for seat row 3, Right reading light for seat row 3	243
21. Operating unit for special signals, 12 V socket 3 for special vehicles, Reading light behind driver seat, Reading light for pull-out table	244
041 - 2.0l diesel engine , CXEC	245-269
1. 2.0l diesel engine , CXEC	245
2. Fuse holder B	246
3. Fuse holder B	247
4. Battery, Starter, Battery monitor control unit, Fuse holder C	248
5. Alternator with voltage regulator, Fuse holder A, Fuse holder J, Threaded connection (30), on wiring junction	249
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2	250
7. Main relay, Engine/motor control unit, Charge air cooling pump	251
8. Centre switch module in dash panel, Brake light switch, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	252
9. Ignition/starter switch, Steering column combination switch, Engine/motor control unit	253
10. Radiator outlet coolant temperature sender, Engine/motor control unit, Heater element for crankcase breather, Pump for exhaust gas recirculation cooler	254
11. Air mass measurement module, Water separator sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit	255
12. Fuel pump relay, Engine/motor control unit, Radiator fan	256
13. Exhaust gas temperature sender 4, Engine/motor control unit, Relay for reducing agent metering system, Coupling point in engine compartment	257
14. Delivery unit for reducing agent metering system. Engine/motor control unit. Control unit for	258

reducing agent heater, Coupling point in engine compartment, Reducing agent tank	
15. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	259
16. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	260
17. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Variable intake manifold position sender, Position sender 2 for charge pressure positioner, Position sender for charge pressure positioner, Engine/motor control unit	261
18. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	262
19. Hall sender, Knock sensor 1, Knock sensor 2, Charge pressure sender 2, Pressure differential sender, Engine/motor control unit	263
20. Charge pressure sender, Coolant temperature sender, Fuel temperature sender, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender 3, Engine/motor control unit	264
21. Automatic glow period control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector for reducing agent	265
22. Automatic glow period control unit, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	266
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating	267
24. Engine/motor control unit, Charge pressure control solenoid valve, Charge pressure control solenoid valve 2, Intake manifold flap valve, Turbine changeover valve	268
25. Fuel delivery unit, Oil level and oil temperature sender, Dash panel insert	269
042 - Reducing agent metering system , CXEC, CXFA, CXGD, CXGE, CXHA, CXHC	270-275
1. Reducing agent metering system , CXEC, CXFA, CXGD, CXGE, CXHA, CXHC	270
2. Engine/motor control unit, Fuse holder B, Fuse holder C	271
3. Delivery unit for reducing agent metering system, Exhaust gas temperature sender 4, Engine/motor control unit, Control unit for reducing agent heater	272
4. Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Reducing agent tank, Heater for reducing agent line (heater circuit 2)	273
5. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	274
6. Centre switch module 3 in dash panel, Onboard supply control unit, Special vehicle control unit	275
043 - Adjustable lumbar support , (7P1),(7P2),(7P7),(7P8),(7P9)	276-278
1. Adjustable lumbar support , (7P1),(7P2),(7P7),(7P8),(7P9)	276
2. Front left lumbar support adjustment switch, Fuse holder C, Front left lumbar support adjustment motor, Front left lumbar support height adjustment motor	277
3. Front right lumbar support adjustment switch, Front right lumbar support adjustment motor, Front right lumbar support height adjustment motor	278
044 - Front left seat, electric , (L0L)	279-283
1. Front left seat, electric , (L0L)	279
2. Heated front seats control unit, Fuse holder C, Heated seat cushion for front left seat	280
3. Driver operating unit for memory settings, Data bus diagnostic interface, Driver seat adjustment control unit	281
4. Driver seat lumbar support adjustment switch, Switch module for driver seat, Driver seat adjustment control unit	282
5. Backrest adjustment sender for driver seat, Lumbar support height adjustment sender, Lumbar support longitudinal adjustment sender, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	283
045 - Seat heating for seats with leather covers	284-287
1. Seat heating for seats with leather covers	284
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit, Fuse holder C	285
3. Heated front seats control unit, Heated seat cushion for front left seat	286
4. Heated front seats control unit, Heated seat cushion for front right seat	287
046 - Seat heating for seats with leatherette/cloth covers	288-291
1. Seat heating for seats with leatherette/cloth covers	288
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit, Fuse holder C	289
3. Heated front seats control unit, Heated seat cushion for front left seat, Heated backrest for front left seat	290
4. Heated front seats control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	291
047 - Front right seat, electric , (L0L)	292-295
1. Front right seat. electric . (L0L)	292

2. Heated front seats control unit, Fuse holder C	293
3.	294
4. Front passenger seat lumbar support adjustment switch, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	295
048 - Front left seat, electric , (L0R)	296-299
1. Front left seat, electric , (L0R)	296
2. Heated front seats control unit, Fuse holder C, Heated seat cushion for front left seat	297
3. Switch module for front passenger seat	298
4. Front passenger seat lumbar support adjustment switch, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	299
049 - Front right seat, electric , (L0R)	300-304
1. Front right seat, electric , (L0R)	300
2. Heated front seats control unit, Fuse holder C, Heated backrest for front right seat	301
3. Data bus diagnostic interface, Driver seat adjustment control unit	302
4. Driver seat adjustment control unit	303
5. Backrest adjustment sender for driver seat, Lumbar support height adjustment sender, Lumbar support longitudinal adjustment sender, Driver seat adjustment control unit, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	304
050 - 2.0l diesel engine , CXFA, CXGD, CXGE, CXHA, CXHC	305-329
1. 2.0l diesel engine , CXFA, CXGD, CXGE, CXHA, CXHC	305
2. Fuse holder B	306
3. Fuse holder B	307
4. Battery, Starter, Battery monitor control unit, Fuse holder B, Fuse holder C	308
5. Alternator with voltage regulator, Fuse holder A, Fuse holder J	309
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2	310
7. Main relay, Engine/motor control unit, Charge air cooling pump	311
8. Centre switch module in dash panel, Brake light switch, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	312
9. Ignition/starter switch, Steering column combination switch, Clutch position sender, Engine/motor control unit	313
10. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Heater element for crankcase breather, Pump for exhaust gas recirculation cooler	314
11. Air mass measurement module, Water separator sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	315
12. Temperature sensor 3 for exhaust recirculation, Fuel pump relay, Engine/motor control unit, Radiator fan	316
13. Exhaust gas temperature sender 4, Engine/motor control unit, Relay for reducing agent metering system, Coupling point in engine compartment	317
14. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Coupling point in engine compartment, Reducing agent tank	318
15. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	319
16. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	320
17. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Position sender for charge pressure positioner, Engine/motor control unit	321
18. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	322
19. Hall sender, Knock sensor 1, Knock sensor 2, Pressure differential sender, Engine/motor control unit	323
20. Charge pressure sender, Coolant temperature sender, Fuel temperature sender, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender 3, Engine/motor control unit	324
21. Automatic glow period control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector for reducing agent	325
22. Cylinder 3 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	326
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating	327
24. Engine/motor control unit, Charge pressure control solenoid valve	328
25. Fuel delivery unit, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	329

051 - Data bus network	330-347
1. Data bus network	330
2. Data bus diagnostic interface, Fuse holder B, Fuse holder C	331
3. Control unit for NOx sender, Data bus diagnostic interface, Engine/motor control unit	332
4. Taximeter, Mirror taximeter, Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Two-way radio, Coupling point 1 for special vehicle, taxi	333
5. Operating and display unit for camping equipment, Data bus diagnostic interface, Special vehicle control unit, Accident data memory, Interface control unit for telematics	334
6. Tachograph, Control unit in dash panel insert, Data bus diagnostic interface, Special vehicle control unit, Battery monitor control unit 2, Control unit for external vehicle communication, Dash panel insert	335
7. Rain sensor, Anti-theft alarm sensor, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit	336
8. Trailer detector control unit, Data bus diagnostic interface, Rear driver side door control unit, Rear passenger side door control unit, Emergency call module control unit and communication unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit, Battery monitor control unit 3	337
9. Data bus diagnostic interface, Rear lid control unit, Driver seat adjustment control unit, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit	338
10. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Additional display and operating unit 1, Fresh air blower control unit, Rear fresh air blower control unit, Data bus diagnostic interface	339
11. Alternator with voltage regulator, Steering column combination switch, Pressure sender for refrigerant circuit, Battery monitor control unit, Multifunction steering wheel control unit, Data bus diagnostic interface, DC/AC converter with socket, 12 V - 230 V	340
12. Auxiliary heater control unit, Data bus diagnostic interface, Auxiliary air heater control unit, Remote control receiver for auxiliary heater	341
13. Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Data bus diagnostic interface, Control unit for NOx sender, Control unit for reducing agent heater, Coupling point for fuel tank	342
14. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Reversing camera system control unit, Control unit 1 for information electronics	343
15. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	344
16. Interior mirror, Adaptive cruise control unit, Headlight range control unit, Data bus diagnostic interface, Front left headlight, Front right headlight, Front camera for driver assist systems	345
17. Alarm horn, ABS control unit, Electronically controlled damping control unit, Parking aid control unit, Power steering control unit, Data bus diagnostic interface	346
18. All-wheel drive control unit	347
052 - Fuses in engine compartment	348-369
1. Fuses in engine compartment	348
2. Battery, Starter, Alternator with voltage regulator, Battery isolation relay, Battery monitor control unit, Fuse holder J	349
3. Fuse holder A, Fuse holder J, Radiator fan	350
4. Fuse holder A	351
5. Fuse holder A	352
6. ABS control unit, Power steering control unit, Fuse holder A, Fuse holder C	353
7. Brake light additional relay, High-level brake light bulb, Fuse holder B	354
8. Fuse holder B	355
9. Charge pressure control solenoid valve, Charge pressure control solenoid valve 2, Intake manifold flap valve, Solenoid for coolant circuit, Turbine changeover valve, Fuse holder B, Heated windscreen	356
10. Magnetic clutch relay, Relay for reducing agent metering system, Fuse holder B	357
11. Brake light switch, Fuel delivery unit, Fuel pump relay, Fuse holder B	358
12. Switch module 1 in dash panel, next to steering wheel, Fuse holder B	359
13. Auxiliary coolant heater relay, Auxiliary coolant heater coolant circuit valve relay, Heater coolant shut-off valve, Fuse holder B	360
14. Delivery unit for reducing agent metering system, Oil level and oil temperature sender, Ignition key withdrawal lock solenoid, Fuse holder B, Coupling point on engine, bottom left	361
15. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Fuse holder B	362
16. Reversing light switch, Air mass measurement module, Clutch position sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2, Magnetic clutch for supercharger, Fuse holder B	363
17. Heater element for crankcase breather. Fuel pressure regulating valve. Fuel metering valve.	364

Valve for oil pressure control, Fuse holder B, Auxiliary pump for heating	
18. Lambda probe 1 before catalytic converter, Fuse holder B, Charge air cooling pump, Pump for exhaust gas recirculation cooler	365
19. Engine/motor control unit, Fuse holder B	366
20. Heated windscreen relay, Automatic glow period control unit, Data bus diagnostic interface, Fuse holder B	367
21. Control unit for reducing agent heater, Fuse holder M, Reducing agent tank	368
22. Fuse holder H	369
053 - Fuses in interior	370-415
1. Fuses in interior	370
2. Fresh air blower control unit, Fuse holder A, Fuse holder C, Fuse holder J, Fresh air blower	371
3. Front passenger seat lumbar support adjustment switch, Front left lumbar support adjustment switch, Front right lumbar support adjustment switch, Driver seat adjustment control unit, Fuse holder C	372
4. Switch module for front passenger seat, Special vehicle control unit, Fuse holder C	373
5. Starter, Terminal 15 voltage supply relay, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder C	374
6. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder B, Fuse holder C	375
7. Headlight range control regulator, Parking aid control unit, Voltage supply relay 1, Voltage supply relay 2, Front left headlight, Fuse holder C	376
8. Centre switch module 3 in dash panel, Oil level and oil temperature sender, Pressure sender for refrigerant circuit, Coolant shut-off valve relay, Climatronic coolant shut-off valve, Fuse holder C, Left washer jet heater element, Right washer jet heater element	377
9. Mirror adjustment switch, Steering column combination switch, Fuse holder C	378
10. Interior mirror, Differential lock control unit, Adaptive cruise control unit, Control unit for external vehicle communication, Front camera for driver assist systems, Fuse holder C, Automatic anti-dazzle interior mirror	379
11. Taximeter, Mirror taximeter, Circulation pump relay, Auxiliary heater control unit, Interface control unit for telematics, Two-way radio, Fuse holder C, Circulation pump	380
12. Fuse holder C	381
13. Fuse holder C	382
14. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Additional display and operating unit 1, Rear fresh air blower control unit, Remote control receiver for auxiliary heater, Fuse holder C, Rear fresh air blower	383
15. Contact strip in right sliding door, Contact strip in left sliding door, Contact strip in left B-pillar, Contact strip in right B-pillar, Fuse holder C, USB connection 1, Rear left power latching motor, Rear right power latching motor	384
16. Tachograph, Heated rear window relay, Fuse holder C	385
17. Rain sensor, Anti-theft alarm sensor, Interior monitoring sensor 2, Alarm horn, Fuse holder C, Left USB charging socket, seat row 3	386
18. Driver door control unit, Front passenger door control unit, Two-way signal amplifier for mobile telephone/data services, Fuse holder C	387
19. Rotary light switch, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C, Diagnostic connection	388
20. Onboard supply control unit, Control unit for reducing agent heater, Front right headlight, Fuse holder C	389
21. Ignition/starter switch, Accident data memory, Fuse holder C	390
22. Control unit in dash panel insert, Tyre Pressure Monitoring System control unit, Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C	391
23. Display unit for front information display and operating unit control unit, Reversing camera system control unit, Reversing camera, Storage compartment with interface for mobile telephone, Fuse holder C	392
24. X-contact relay, Heated front seats control unit, Fuse holder C	393
25. Lane change assist control unit, Lane change assist control unit 2, Fuse holder C	394
26. Fuse holder C, Rear window wiper motor, Rear left wing door window wiper motor, Rear right wing door window wiper motor, Heated rear window, Heated rear window in left wing door, Heated rear window in right wing door	395
27. Electronically controlled damping control unit, Rear left turn signal additional relay, Rear driver side door control unit, Rear passenger side door control unit, Left roof-mounted turn signal bulb, Fuse holder C	396
28. Rear fresh air blower switch, Terminal 15 voltage supply relay 2, Fuse holder C, Electrical terminal strip for external use	397
29. Vacuum switch for rear differential lock, Rear right turn signal additional relay, All-wheel drive control unit, Right roof-mounted turn signal bulb, Fuse holder C	398
30. Second battery. Battery isolation relay. Battery monitor control unit 2. Fuse holder G	399

31. Battery for special vehicle, Auxiliary air heater control unit, Battery monitor control unit 3, Battery fuse in special vehicle, Fuse holder G	400
32. Trailer detector control unit, Fuse holder H, Cigarette lighter, 12 V socket	401
33. Switch-over relay 1 for roof ventilator, Rotating light relay, Rotating light control unit, Fuse holder H, Coupling point on left B-pillar, bottom, 12 V socket 2, USB charging socket 1	402
34. End position button for cupboard light, Electric torch, Fuse holder H, 12 V socket for special vehicles	403
35. Onboard charging unit, Operating and display unit for camping equipment, Two-way radio voltage relay, Relay to close convertible roof, Relay to open convertible roof, Fuse holder H	404
36. Fuse holder H, USB charging socket 2, Kitchen background lighting	405
37. Rear lid control unit, Fuse holder H, 12 V socket 7, 12 V socket 8	406
38. Operating unit for special signals, Fuse holder H, Coupling point for roof, left, Coupling point for roof, right, 12 V socket 2 for special vehicles, Rear interior light 4	407
39. Accident data memory button, Terminal 75 voltage supply relay 1, Control unit for ignition bypass, Fuse holder H, 10-pin connector, Charging station for hand-held 2-way radio	408
40. Front stop command light, Rotating light relay, Flashing lights relay, Flashing lights relay 2, Fuse holder H, 1-pin connector, 8-pin connector, 12-pin connector	409
41. Fuse holder H, DC/AC converter with socket, 12 V - 230 V	410
42. Fuse holder F, Fuse holder H	411
43. Power latching control unit, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit, Fuse holder K	412
44. Coupling point for roof, left, 12 V socket 3, 12 V socket 4, 12 V socket 5, 12 V socket 6, USB charging socket 1 for special vehicles	413
45. Front left reading light button, Front right reading light button, Rear illumination bulb, Left interior light, Right interior light, Rear interior light, Rear left interior light, Rear right interior light, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	414
46. Rear stop command light, Flashing light in rear lid, Coupling point for roof, left, Reading light behind driver seat, Reading light for pull-out table, Rear lid light, Left reading light for seat row 3, Right reading light for seat row 3, Rear lid light 2	415
054 - Dual clutch gearbox (DSG)	416-420
1. Dual clutch gearbox (DSG)	416
2. Selector lever sensors control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Ignition key withdrawal lock solenoid, Fuse holder B	417
3. Data bus diagnostic interface, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	418
4. Onboard supply control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	419
5. Gearbox input speed sender, Clutch temperature sender, Mechatronic unit for dual clutch gearbox	420
055 - Rear right door	421-422
1. Rear right door	421
2. Onboard supply control unit, Fuse holder C, Rear right door lock unit	422
056 - Tail light clusters , (8VA)	423-428
1. Tail light clusters , (8VA)	423
2. Turn signal switch, Brake light switch, Reversing light switch, Onboard supply control unit	424
3. Rotary light switch, Brake light additional relay, Onboard supply control unit	425
4. Onboard supply control unit, Left tail light cluster, Right tail light cluster	426
5. High-level brake light bulb, Left number plate light, Right number plate light	427
6. High-level brake light bulb, High-level brake light bulb 2, Number plate light	428
057 - Tail light clusters with LEDs , (8VG),(8VH)	429-434
1. Tail light clusters with LEDs , (8VG),(8VH)	429
2. Turn signal switch, Steering column combination switch, Brake light switch, Reversing light switch, Onboard supply control unit, Fuse holder B, Fuse holder C	430
3. Rotary light switch, Brake light additional relay, Onboard supply control unit	431
4. Onboard supply control unit, Left tail light cluster, Right tail light cluster	432
5. High-level brake light bulb, Left number plate light, Right number plate light	433
6. High-level brake light bulb, High-level brake light bulb 2, Number plate light	434
058 - Reversing camera (Rear Assist) , (KA1)	435-439
1. Reversing camera (Rear Assist) , (KA1)	435
2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C	436
3. Data bus diagnostic interface, Control unit 1 for information electronics	437
4. Control unit 1 for information electronics	438
5. Reversing camera	439
059 - Heated rear window	440-442
1. Heated rear window	440
2. Heated rear window switch. Heater and air conditioning controls. Heated rear window relay.	441

Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	
3. Heated rear window, Heated rear window in left wing door, Heated rear window in right wing door	442
060 - Window wash/wipe system	443-447
1. Window wash/wipe system	443
2. Steering column combination switch, Onboard supply control unit, Fuse holder C	444
3. Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	445
4. Rear window wiper motor	446
5. Rear left wing door window wiper motor, Rear right wing door window wiper motor	447
061 - Assist systems , (6K2),(6K4)	448-449
1. Assist systems , (6K2),(6K4)	448
2. Adaptive cruise control unit, Data bus diagnostic interface, Fuse holder C	449
062 - Reversing camera (Rear Assist) , (KA2)	450-453
1. Reversing camera (Rear Assist) , (KA2)	450
2. Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	451
3. Reversing camera system control unit, Control unit 1 for information electronics	452
4. Reversing camera system control unit	453
063 - Power latching for rear lid , (3RH),(3RJ)	454-456
1. Power latching for rear lid , (3RH),(3RJ)	454
2. Onboard supply control unit, Power latching control unit, Fuse holder H, Power latching for rear lid	455
3. Rear lid contact switch	456
064 - Tail light clusters for dropside	457-460
1. Tail light clusters for dropside	457
2. Rotary light switch, Brake light switch, Reversing light switch, Onboard supply control unit, Fuse holder C	458
3. Turn signal switch, Steering column combination switch, Onboard supply control unit, Left tail light cluster, Left number plate light, Right number plate light	459
4. Onboard supply control unit, Right tail light cluster	460
065 - Trailer coupling , (1D1),(1D2),(1D7)	461-464
1. Trailer coupling , (1D1),(1D2),(1D7)	461
2. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder H	462
3. Brake light switch, Trailer detector control unit, Onboard supply control unit	463
4. Trailer socket	464
066 - Anti-theft alarm system, interior monitor	465-470
1. Anti-theft alarm system, interior monitor	465
2. Anti-theft alarm sensor, Interior monitoring sensor 2, Onboard supply control unit, Fuse holder C	466
3. Rear lid contact switch, Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	467
4. Contact strip in left B-pillar, Contact strip in right B-pillar, Onboard supply control unit, Rear left door lock unit, Rear right door lock unit, Rear left sliding door lock unit, Rear right sliding door lock unit	468
5. Button for deactivating interior monitoring and vehicle inclination sensor, Onboard supply control unit	469
6. Bonnet contact switch, Alarm horn, Onboard supply control unit	470
067 - All-wheel drive , (G0L),(G1D),(1Y0),(1Y4)	471-477
1. All-wheel drive , (G0L),(G1D),(1Y0),(1Y4)	471
2. Switch module 1 in dash panel, next to steering wheel, ABS control unit, Differential lock control unit, Fuse holder B, Fuse holder C, Fuse holder H	472
3. Differential lock control unit, Differential lock valve 1, Differential lock valve 2	473
4. Onboard supply control unit, Data bus diagnostic interface	474
5. Coupling point on left D-pillar	475
6. All-wheel drive control unit, Coupling opening control valve	476
7. Vacuum switch for rear differential lock, Oil pressure and oil temperature sender, All-wheel drive control unit	477
068 - All-wheel drive , (G0L),(G1D),(1Y0),(1Y4)	478-483
1. All-wheel drive , (G0L),(G1D),(1Y0),(1Y4)	478
2. Switch module 1 in dash panel, next to steering wheel, ABS control unit, Fuse holder B, Fuse holder C, Fuse holder H	479
3. Differential lock valve 1, Differential lock valve 2	480
4. Onboard supply control unit, Data bus diagnostic interface	481
5. Coupling opening control valve	482
6. Reed contact switch 2 for differential lock, Oil pressure and oil temperature sender, All-wheel drive coupling pump	483
069 - Special vehicle , (IP2),(IP4),(IP6),(IS2),(IS4),(IS5),(IS7)	484-490
1. Special vehicle . (IP2).(IP4).(IP6).(IS2).(IS4).(IS5).(IS7)	484

2. Terminal 15 voltage supply relay 2, Fuse holder C, Fuse holder J, Electrical terminal strip for external use	485
3. Fuse holder C	486
4. Onboard supply control unit, Data bus diagnostic interface, Accident data memory	487
5. Second battery, Battery isolation relay, Battery monitor control unit 2	488
6. Centre switch module 2 in dash panel, Centre switch module 3 in dash panel	489
7. Left roof-mounted turn signal bulb, Right roof-mounted turn signal bulb	490
070 - Interface for external use , (IS1)	491-492
1. Interface for external use , (IS1)	491
2. Terminal 15 voltage supply relay 2, Fuse holder C	492
071 - Footwell lights , (A8B),(A9K),(A9W),(A8M)	493-494
1. Footwell lights , (A8B),(A9K),(A9W),(A8M)	493
2. Onboard supply control unit, Front interior light, Left footwell light, Right footwell light	494
072 - Footwell lights , (A8E),(A8J),(A8Z),(A9X),(A9A),(A8L),(A8R)	495-496
1. Footwell lights , (A8E),(A8J),(A8Z),(A9X),(A9A),(A8L),(A8R)	495
2. Onboard supply control unit, Front interior light, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	496
073 - Earthing concept	497-544
1. Earthing concept	497
2. Battery, Battery for special vehicle, Battery monitor control unit, Battery monitor control unit 3	498
3. Auxiliary coolant heater relay, Coolant shut-off valve relay, Mechatronic unit for dual clutch gearbox, Air conditioner compressor regulating valve, Pump for exhaust gas recirculation cooler	499
4. Pressure sender for refrigerant circuit, Alarm horn, Magnetic clutch relay, Left turn signal repeater bulb, Right turn signal repeater bulb, Heater coolant shut-off valve, Climatronic coolant shut-off valve, Left washer jet heater element, Right washer jet heater element	500
5. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel pressure regulating valve, Charge air cooling pump, Auxiliary pump for heating	501
6. Brake light switch, Clutch position sender, Automatic glow period control unit, Brake light additional relay, Engine/motor control unit	502
7. Bonnet contact switch, Adaptive cruise control unit, Left fog light bulb, Right fog light bulb, Front left headlight, Front right headlight	503
8. Horn and dual tone horn, Bass horn, Power steering control unit, Onboard supply control unit, Windscreen wiper motor, Heated windscreen	504
9. Fresh air blower control unit, Onboard supply control unit	505
10. Interior mirror, Operating and display unit for camping equipment, Operating unit for preparation for mobile telephone, Additional display and operating unit 1, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch	506
11. Rain sensor, Anti-theft alarm sensor, ABS control unit, Front camera for driver assist systems, Front interior light, Automatic anti-dazzle interior mirror	507
12. Centre switch module in dash panel, Centre switch module 2 in dash panel, Steering column combination switch, Radiator fan	508
13. Tachograph, Oil level and oil temperature sender, Battery isolation relay, Selector lever sensors control unit, Accident data memory, Control unit for external vehicle communication	509
14. Suppression filter, Mirror adjustment switch, Centre switch module 4 in dash panel, Switch-over relay 1 for roof ventilator, Switch-over relay 2 for roof ventilator, Central locking SAFELOCK function warning lamp, Driver door lock unit, Front passenger door lock unit	510
15. Rear lid remote release button, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Left exterior mirror	511
16. Driver door control unit, Front passenger door control unit, Right exterior mirror	512
17. Switch module 1 in dash panel, next to steering wheel, Centre switch module 3 in dash panel, Front left brake pad wear sender, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface	513
18. Control unit for reducing agent heater, Reducing agent tank, Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	514
19. Control unit 2 for NOx sender, Control unit 1 for particulate sensor, Differential lock control unit, Auxiliary heater control unit, Differential lock valve 1, Differential lock valve 2, Metering pump, Circulation pump, Metering pump 2	515
20. Operating unit with manual release mechanism for left sliding door, Rear left exterior door handle switch, Rear left interior door handle switch, Contact strip in left sliding door, Contact strip in left B-pillar, Control unit for NOx sender, Control unit 3 for NOx sender, Sliding door sender unit, Anti-trapping sender, Rear left sliding door lock unit, Rear left power latching motor	516
21. Operating unit with manual release mechanism for right sliding door, Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right sliding door, Contact strip in right B-pillar, Right anti-trapping sensor, Right electric sliding door sender unit, Rear right sliding door lock unit. Rear right power latching motor	517

22. Heater and air conditioning controls, Front left lumbar support adjustment switch, Front right lumbar support adjustment switch, Rear left door lock unit, Rear right door lock unit	518
23. Glove compartment light switch, Rear fresh air blower switch, Heated rear window relay, Voltage supply relay 2, Electric torch, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	519
24. Driver seat adjustment control unit, Heated seat cushion for front left seat, Heated backrest for front left seat	520
25. Front passenger seat lumbar support adjustment switch, Switch module for front passenger seat, Heated front seats control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	521
26. Fuel delivery unit, Rotating light relay, Trailer detector control unit, Fuel pump control unit, Rotating light control unit, Interface control unit for telematics, Coupling point on left B-pillar, bottom, Cigarette lighter, 12 V socket	522
27. Rotary light switch, Control unit in dash panel insert, Special vehicle control unit, Dash panel insert, Fuse holder C	523
28. Hazard warning lights switch, Headlight range control regulator, Handbrake warning switch, Headlight range control unit, Diagnostic connection	524
29. Reversing camera system control unit, Control unit 1 for information electronics, Reversing camera	525
30. Relay to close convertible roof, Relay to open convertible roof, Display unit for front information display and operating unit control unit, Emergency call module control unit and communication unit, USB connection 1	526
31. Front stop command light, Two-way radio voltage relay, Rotating light relay, Flashing lights relay, Terminal 75 voltage supply relay 1, 8-pin connector, Coupling point for roof, left	527
32. Second battery, Onboard charging unit, Auxiliary air heater control unit, Battery monitor control unit 2, Remote control receiver for auxiliary heater, 12 V socket for special vehicles	528
33. Centre switch module 1 in dash panel, Centre switch module 2 in dash panel, 10-pin connector, Coupling point for two-way radio in special vehicle, DC/AC converter with socket, 12 V - 230 V, 12 V socket 2, Charging station for hand-held 2-way radio, USB charging socket 1, Heated rear window	529
34. Operating unit for special signals, Rear stop command light, Flashing light in rear lid, 12 V socket 3 for special vehicles, Rear interior light 4, Reading light behind driver seat, Rear lid light, Rear lid light 2	530
35. Vacuum switch for rear differential lock, All-wheel drive control unit, 12 V socket 2 for special vehicles, Reading light for pull-out table, Left reading light for seat row 3, Right reading light for seat row 3	531
36. Tyre Pressure Monitoring System control unit, Lane change assist control unit, Lane change assist control unit 2, Left tail light cluster	532
37. Coupling point for roof, 12 V socket 5, USB charging socket 1 for special vehicles, Left USB charging socket, seat row 3, Interior light, Front left reading light, Front right reading light, Cupboard light	533
38. Rear lid release switch, Rear lid handle release button, Rear lid contact switch, Protective diode, High-level brake light bulb, Rear lid central locking motor, Rear left wing door window wiper motor, Number plate light, Heated rear window in left wing door	534
39. Rear lid release switch, Rear lid handle release button, Button to close rear lid in luggage compartment, High-level brake light bulb, Rear window wiper motor, Left number plate light, Right number plate light, Heated rear window	535
40. Power latching control unit, Coupling point for roof, left, Trailer socket, 12 V socket 6, 12 V socket 7, 12 V socket 8	536
41. Switch for surround lighting in rear lid, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit, Coupling point in interior, left, Centre interior light	537
42. Onboard charging unit, Water pump switch, Water pump switch for shower, Contactless button for kitchen light, Button for kitchen background lighting, Refrigerator box, Coolant pump	538
43. High-level brake light bulb 2, USB charging socket 2, Rear right wing door window wiper motor, Kitchenette light 1, Kitchenette light 2, Kitchenette light 3, Kitchenette light 4, Heated rear window in right wing door	539
44. Rear right brake pad wear sender, Interior monitoring sensor 2, Right tail light cluster, Left roof-mounted turn signal bulb, Right roof-mounted turn signal bulb, High-level brake light bulb	540
45. Operating and display unit for rear air conditioning system, Rear fresh air blower control unit, Rear lid control unit, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side active door protection control unit, Rear passenger side active door protection control unit, 12 V socket 3, 12 V socket 4	541
46. Rear interior light, Rear interior light 2, Rear interior light 3, Rear left reading light, Rear right reading light, Left centre reading light, Right centre reading light	542
47. Left tail light cluster, Right tail light cluster, 2-pin connector, 14-pin connector, Trailer socket. Left number plate light. Right number plate light	543

48. Switch module 2 in dash panel, next to steering wheel, Taxi alarm active button, Taxi alarm off button, Passive Taxi alarm button, Taximeter, Mirror taximeter, Two-way radio, Coupling point 1 for special vehicle, taxi	544
074 - Camping equipment , (A9A)	545-559
1. Camping equipment , (A9A)	545
2. Second battery, Battery isolation relay, Battery monitor control unit 2, Fuse holder G, Fuse holder J	546
3. Electric torch, Fuse holder H, USB charging socket 1	547
4. Relay to close convertible roof, Relay to open convertible roof, Fuse holder H, Hydraulic pump motor	548
5. Fuse holder C, DC/AC converter with socket, 12 V - 230 V, Interior socket 2, 230V, 110V	549
6. Onboard charging unit, 220 V automatic personnel protection circuit breaker, Exterior socket, 230 V, 110 V, Interior socket, 230 V, 110 V	550
7. Special vehicle control unit	551
8. Onboard supply control unit, Data bus diagnostic interface, Special vehicle control unit	552
9. Heater and air conditioning controls, Operating and display unit for camping equipment, Rear fresh air blower control unit, Special vehicle control unit	553
10. Special vehicle control unit, Series resistor	554
11. Special vehicle control unit, Interior light, Front left reading light, Front right reading light	555
12. Front left reading light button, Front right reading light button, Special vehicle control unit, Left interior light, Rear interior light, Rear left interior light	556
13. Switch for surround lighting in rear lid, Special vehicle control unit, 12 V socket 7, 12 V socket 8, Centre interior light	557
14. Special vehicle control unit, 12 V socket 3, 12 V socket 4, Right interior light, Rear right interior light	558
15. Roof hydraulics sender 1, Roof hydraulics sender 2, Roof hydraulics sender 3, Roof hydraulics sender 4, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	559
075 - Camping equipment , (A8L),(A8R)	560-579
1. Camping equipment , (A8L),(A8R)	560
2. Second battery, Battery isolation relay, Battery monitor control unit 2, Fuse holder G, Fuse holder J	561
3. Battery for special vehicle, Battery monitor control unit 3, Electric torch, Battery fuse in special vehicle, Fuse holder H	562
4. Relay to close convertible roof, Relay to open convertible roof, Fuse holder H, Hydraulic pump motor	563
5. Onboard charging unit, Fuse holder C, Fuse holder H, 12 V socket 3, 12 V socket 4	564
6. Onboard charging unit, 220 V automatic personnel protection circuit breaker, Exterior socket, 230 V, 110 V, Interior socket, 230 V, 110 V	565
7. Special vehicle control unit, DC/AC converter with socket, 12 V - 230 V, Interior socket 2, 230V, 110V	566
8. Heater and air conditioning controls, Operating and display unit for camping equipment, Rear fresh air blower control unit, Special vehicle control unit	567
9. Onboard supply control unit, Data bus diagnostic interface, Special vehicle control unit, Front interior light, Left luggage compartment light	568
10. Button for kitchen background lighting, Special vehicle control unit, Kitchenette light 1, Kitchenette light 2, Kitchenette light 3, Kitchenette light 4	569
11. Water pump switch for shower, Contactless button for kitchen light, Special vehicle control unit, USB charging socket 2, Coolant pump	570
12. Special vehicle control unit, Refrigerator box	571
13. End position button for cupboard light, Water level sender, Waste water level sender, Ambient temperature sender 2, Special vehicle control unit, Cupboard light	572
14. Special vehicle control unit, Series resistor	573
15. Front left reading light button, Front right reading light button, Special vehicle control unit, Centre interior light, Left interior light, Rear left interior light	574
16. Switch for surround lighting in rear lid, Rear lid contact switch, Special vehicle control unit, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	575
17. Special vehicle control unit, Rear illumination bulb, Right interior light, Rear right interior light	576
18. Special vehicle control unit, Interior light, Front left reading light, Front right reading light	577
19. 12 V socket 8	578
20. Roof hydraulics sender 1, Roof hydraulics sender 2, Roof hydraulics sender 3, Roof hydraulics sender 4	579
076 - Trailer coupling , (1D1),(1D2)	580-583
1. Trailer couplina . (1D1).(1D2)	580

2. Trailer detector control unit, Fuse holder H	581
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	582
4. Trailer detector control unit, Trailer socket	583
077 - Trailer coupling , (1D7)	584-587
1. Trailer coupling , (1D7)	584
2. Trailer detector control unit, Fuse holder H	585
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	586
4. Trailer detector control unit, 2-pin connector, 14-pin connector	587
078 - Second battery, not for Camper , (8FB)	588-589
1. Second battery, not for Camper , (8FB)	588
2. Second battery, Battery isolation relay, Onboard supply control unit, Fuse holder G, Fuse holder H, Fuse holder J	589
079 - Second battery, not for Camper , (8FE),(8FL)	590-591
1. Second battery, not for Camper , (8FE),(8FL)	590
2. Second battery, Battery isolation relay, Special vehicle control unit, Battery monitor control unit 2, Fuse holder G, Fuse holder H, Fuse holder J	591
080 - DC/AC converter with socket , (9Z3),(9Z6)	592-593
1. DC/AC converter with socket , (9Z3),(9Z6)	592
2. Data bus diagnostic interface, Fuse holder H, DC/AC converter with socket, 12 V - 230 V, Interior socket 2, 230V, 110V	593
081 - DC/AC converter with socket , (9Z3),(9Z6)	594-595
1. DC/AC converter with socket , (9Z3),(9Z6)	594
2. Data bus diagnostic interface, Special vehicle control unit, Battery monitor control unit 2, Fuse holder H, DC/AC converter with socket, 12 V - 230 V, Interior socket 2, 230V, 110V	595
082 - Heated washer jets	596-597
1. Heated washer jets	596
2. Fuse holder C, Left washer jet heater element, Right washer jet heater element	597
083 - Front camera for driver assist systems , (7Y0),(7Y1),(7IU),(8G1)	598-599
1. Front camera for driver assist systems , (7Y0),(7Y1),(7IU),(8G1)	598
2. Interior mirror, Data bus diagnostic interface, Fuse holder C, Front interior light	599
084 - Front camera for driver assist systems , (7Y4),(7Y5),(QR9)	600-601
1. Front camera for driver assist systems , (7Y4),(7Y5),(QR9)	600
2. Onboard supply control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror, Windscreen heater for lane departure warning	601
085 - Roof ventilator , (3JF)	602-604
1. Roof ventilator , (3JF)	602
2. Centre switch module 4 in dash panel, Switch-over relay 1 for roof ventilator, Onboard supply control unit, Fuse holder H	603
3. Switch-over relay 2 for roof ventilator, Roof ventilator	604
086 - Rain sensor, automatic anti-dazzle interior mirror , (8N6)	605-606
1. Rain sensor, automatic anti-dazzle interior mirror , (8N6)	605
2. Interior mirror, Rain sensor, Onboard supply control unit, Front camera for driver assist systems, Fuse holder C, Automatic anti-dazzle interior mirror	606
087 - Airbag systems for LHD vehicles , (L0L)	607-615
1. Airbag systems for LHD vehicles , (L0L)	607
2. Key-operated switch to deactivate airbag on front passenger side, Data bus diagnostic interface, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Diagnostic connection	608
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Emergency call module control unit and communication unit	609
4. Steering column combination switch, Coil connector, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	610
5. Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	611
6. Driver side belt switch, Passenger side curtain airbag rear igniter	612
7. Front passenger side belt switch, Front passenger side belt fastened contact, Seat occupied sensor on front passenger side, Pressure sensor for seat occupied recognition	613
8. Belt switch for seat row 1, centre	614
9. Rear centre belt switch, Rear left belt switch	615
088 - Airbag systems for RHD vehicles , (L0R)	616-624
1. Airbag systems for RHD vehicles , (L0R)	616
2. Key-operated switch to deactivate airbag on front passenger side. Data bus diagnostic interface.	617

Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Diagnostic connection	618
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Emergency call module control unit and communication unit	619
4. Steering column combination switch, Coil connector, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	620
5. Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	621
6. Driver side belt switch, Driver side curtain airbag rear igniter, Passenger side curtain airbag rear igniter	622
7. Front passenger side belt switch, Front passenger side belt fastened contact, Seat occupied sensor on front passenger side, Pressure sensor for seat occupied recognition	623
8. Belt switch for seat row 1, centre	624
9. Rear centre belt switch, Rear left belt switch	625-652
089 - 2.0l diesel engine , DNAA, DNAB, DNAC	625
1. 2.0l diesel engine , DNAA, DNAB, DNAC	626
2. Fuse holder B	627
3. Fuse holder B	628
4. Battery, Starter, Battery monitor control unit, Fuse holder A, Fuse holder B, Fuse holder C	629
5. Alternator with voltage regulator, Fuse holder A, Fuse holder J	630
6. Main relay, Engine/motor control unit, Charge air cooling pump	631
7. Auxiliary coolant heater coolant circuit valve relay, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2	632
8. Centre switch module in dash panel, Brake light switch, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	633
9. Ignition/starter switch, Steering column combination switch, Clutch position sender, Engine/motor control unit	634
10. Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	635
11. Control unit for NOx sender, Air mass measurement module, Engine/motor control unit	636
12. Lambda probe 1 before catalytic converter, Mixing valve for coolant regulation, Engine/motor control unit, Injector for reducing agent	637
13. Engine/motor control unit, Exhaust flap control unit, Injector 2 for reducing agent, Coupling point on engine, bottom right	638
14. Exhaust gas temperature sender 4, Engine/motor control unit	639
15. Water separator sender, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Pump for exhaust gas recirculation cooler	640
16. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Data bus diagnostic interface, Engine/motor control unit	641
17. Temperature and pressure sender for low-pressure fuel system, Automatic glow period control unit, Engine/motor control unit	642
18. Throttle valve module, Charge pressure control module, Engine/motor control unit, Heater element for crankcase breather, Auxiliary pump for heating	643
19. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation valve 3, Engine/motor control unit	644
20. Oil pressure sender, Engine speed sender, Charge pressure sender, Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit	645
21. Coolant temperature sender, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 2, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender 3, Coolant temperature sender for charge air cooler, Engine/motor control unit	646
22. Exhaust gas recirculation temperature sensor, Fuel pressure sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Inlet camshaft position sender, Engine/motor control unit, Fuel metering valve	647
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	648
24. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	649
25. Engine/motor control unit, Fuel pressure regulating valve, Valve for oil pressure control, Solenoid for coolant circuit	650
26. Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, NOx sender 3, Control unit for reducing agent heater, Control unit for NOx sender 3	651
27. Delivery unit for reducing agent metering system, Reducing agent tank	652
28. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	653-680
090 - 2.0l diesel engine , DMZA	653
1. 2.0l diesel engine . DMZA	654

2. Fuse holder B	654
3. Fuse holder B	655
4. Battery, Starter, Battery monitor control unit, Fuse holder A, Fuse holder B, Fuse holder C	656
5. Alternator with voltage regulator, Fuse holder A, Fuse holder J	657
6. Main relay, Engine/motor control unit, Charge air cooling pump	658
7. Auxiliary coolant heater coolant circuit valve relay, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2	659
8. Centre switch module in dash panel, Brake light switch, Trailer detector control unit, Onboard supply control unit, Engine/motor control unit	660
9. Ignition/starter switch, Steering column combination switch, Clutch position sender, Engine/motor control unit	661
10. Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	662
11. Control unit for NOx sender, Air mass measurement module, Engine/motor control unit	663
12. Lambda probe 1 before catalytic converter, Mixing valve for coolant regulation, Engine/motor control unit, Injector for reducing agent	664
13. Engine/motor control unit, Exhaust flap control unit, Injector 2 for reducing agent	665
14. Exhaust gas temperature sender 4, Engine/motor control unit	666
15. Water separator sender, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Pump for exhaust gas recirculation cooler	667
16. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	668
17. Temperature and pressure sender for low-pressure fuel system, Automatic glow period control unit, Engine/motor control unit, Positive connection 1 (30a), in engine compartment wiring harness	669
18. Throttle valve module, Charge pressure control module, Engine/motor control unit, Heater element for crankcase breather, Auxiliary pump for heating	670
19. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation valve 3, Position sender 2 for charge pressure positioner, Engine/motor control unit	671
20. Oil pressure sender, Engine speed sender, Charge pressure sender, Exhaust gas temperature sender 1, Charge pressure sender 2, Pressure differential sender, Engine/motor control unit	672
21. Coolant temperature sender, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 2, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Coolant temperature sender 3, Coolant temperature sender for charge air cooler, Engine/motor control unit	673
22. Exhaust gas recirculation temperature sensor, Fuel pressure sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Inlet camshaft position sender, Engine/motor control unit, Fuel metering valve	674
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	675
24. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	676
25. Engine/motor control unit, Charge pressure control solenoid valve 2, Fuel pressure regulating valve, Valve for oil pressure control, Solenoid for coolant circuit, Turbine changeover valve	677
26. Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Control unit for reducing agent heater	678
27. Delivery unit for reducing agent metering system, Reducing agent tank	679
28. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	680
091 - Reducing agent metering system , DNAA, DNAB, DNAC, DMZA	681-688
1. Reducing agent metering system , DNAA, DNAB, DNAC, DMZA	681
2. Fuse holder B, Fuse holder C, Fuse holder M	682
3. Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	683
4. Control unit for NOx sender, Engine/motor control unit	684
5. Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor	685
6. Delivery unit for reducing agent metering system, Control unit for reducing agent heater, Reducing agent tank	686
7. Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	687
8. Centre switch module 3 in dash panel, Onboard supply control unit, Special vehicle control unit	688
092 - Telematics , (IS3),(IS6),(IS8)	689-691
1. Telematics , (IS3),(IS6),(IS8)	689
2. Special vehicle control unit, Interface control unit for telematics, LTE aerial 3, Fuse holder C, Left exterior mirror	690
3. Tachograph, Interface control unit for telematics, Control unit for external vehicle communication, Coupling point in interior	691
093 - Convenience system , (LOR)	692-702
1. Convenience system , (LOR)	692
2. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit. Fuse holder C	693

3. Front passenger door control unit, Onboard supply control unit, Front passenger door lock unit	694
4. Driver side interior locking button for central locking system, Onboard supply control unit	695
5. Driver door control unit, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	696
6. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	697
7. Operating unit with manual release mechanism for left sliding door, Rear left central locking lock unit, Rear left exterior door handle switch, Rear left interior door handle switch, Contact strip in left sliding door, Contact strip in left B-pillar, Onboard supply control unit, Rear left sliding door lock unit	698
8. Operating unit with manual release mechanism for right sliding door, Rear right central locking lock unit, Rear right exterior door handle switch, Rear right interior door handle switch, Contact strip in right sliding door, Contact strip in right B-pillar, Onboard supply control unit, Rear right sliding door lock unit	699
9. Onboard supply control unit	700
10. Rear lid release switch, Rear lid handle release button, Rear lid contact switch, Protective diode, Power latching control unit	701
11. Rear lid release switch, Rear lid handle release button, Rear lid central locking motor	702
094 - Taxi equipment , (F4E),(F5P),(F5Z),(F4F)	703-711
1. Taxi equipment , (F4E),(F5P),(F5Z),(F4F)	703
2. Onboard supply control unit, Fuse holder C, Fuse holder H	704
3. Data bus diagnostic interface, Special vehicle control unit	705
4. Suppression filter for digital two-way radio, Special vehicle control unit, Two-way radio, Two-way radio loudspeaker, Microphone 2 on driver side	706
5. Special vehicle control unit, Roof aerial, Two-way radio	707
6. Reader unit for taxi charge system, Mirror taximeter, Special vehicle control unit	708
7. Taximeter, Special vehicle control unit	709
8. Taxi alarm active button, Taxi alarm off button, Special vehicle control unit, Coupling point 1 for special vehicle, taxi	710
9. Switch module 2 in dash panel, next to steering wheel, Passive Taxi alarm button, Special vehicle control unit, Coupling point for taxi roof sign	711
095 - Heated washer jets	712-713
1. Heated washer jets	712
2. Fuse holder C, Left washer jet heater element, Right washer jet heater element	713
096 - Electrically adjustable and heated exterior mirror with fold-in feature , (L0R),(6XP)	714-719
1. Electrically adjustable and heated exterior mirror with fold-in feature , (L0R),(6XP)	714
2. Onboard supply control unit, Fuse holder C	715
3. Front passenger door control unit, Left exterior mirror	716
4. Front passenger door control unit, Left exterior mirror	717
5. Suppression filter, Driver door control unit, Front passenger door control unit, Right exterior mirror	718
6. Mirror adjustment switch, Driver door control unit, Right exterior mirror	719
097 - Radio systems/navigation systems	720-726
1. Radio systems/navigation systems	720
2. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	721
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	722
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone	723
5. Control unit 1 for information electronics, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker	724
6. Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	725
7. Control unit 1 for information electronics, GPS aerial, Radio aerial 2, Digital radio aerial, Radio aerial	726
098 - Special equipment, police , (IP2)	727-748
1. Special equipment, police , (IP2)	727
2. Fuse holder C, Fuse holder F, Fuse holder G, Fuse holder H	728
3. Front stop command light, Two-way radio voltage relay, Rotating light relay, Fuse holder H, 12 V socket for special vehicles	729
4. Flashing lights relay, Terminal 75 voltage supply relay 1, Flashing lights relay 2, 2-pin connector, Charging station for hand-held 2-way radio	730
5. Blocking diode, Onboard supply control unit, Special vehicle control unit	731
6. Ignition/starter switch. Centre switch module 1 in dash panel. Centre switch module 2 in dash	732

panel, Special vehicle control unit, Engine/motor control unit	
7. Handbrake warning switch, Special vehicle control unit, Control unit for ignition bypass, Dash panel insert, 12-pin connector, Coupling point in left seat box, Coupling point in right seat box	733
8. Special vehicle control unit, 12-pin connector	734
9. Special vehicle control unit, 8-pin connector	735
10. Special vehicle control unit	736
11. Special vehicle control unit, 10-pin connector	737
12. Accident data memory button, Special vehicle control unit, Accident data memory, Left roof-mounted turn signal bulb, Right roof-mounted turn signal bulb	738
13. Special vehicle control unit, 10-pin connector, Coupling point for roof, left, Coupling point for roof, right	739
14. Special vehicle control unit, Microphone 2 on driver side, 2-pin connector	740
15. Two-way radio loudspeaker volume control 2, Two-way radio loudspeaker 2, Coupling point for two-way radio in special vehicle	741
16. Two-way radio loudspeaker volume control 1, Two-way radio loudspeaker, Two-way radio loudspeaker 3, Two-way radio loudspeaker 4, Coupling point for two-way radio in special vehicle	742
17. 2-pin connector, 8-pin connector	743
18. 12-pin connector, Coupling point for rear lid	744
19. Rear stop command light, Flashing light in rear lid, 12-pin connector	745
20. Coupling point for roof, left, Rear lid light, Rear lid light 2	746
21. 12 V socket 2 for special vehicles, Rear interior light 4, Left reading light for seat row 3, Right reading light for seat row 3	747
22. Operating unit for special signals, 12 V socket 3 for special vehicles, Reading light behind driver seat, Reading light for pull-out table	748
099 - Electrically adjustable and heated exterior mirror , (L0R),(6XN)	749-752
1. Electrically adjustable and heated exterior mirror , (L0R),(6XN)	749
2. Onboard supply control unit, Fuse holder C, Left exterior mirror	750
3. Mirror adjustment switch, Right exterior mirror	751
4. Mirror adjustment switch	752
100 - Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	753-756
1. Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	753
2. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	754
3. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, LTE aerial 1, LTE aerial 2, Loudspeaker for emergency call module	755
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone	756
101 - Preparation for mobile telephone , (9IJ),(9ZX)	757-759
1. Preparation for mobile telephone , (9IJ),(9ZX)	757
2. Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Fuse holder C	758
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone, Storage compartment with interface for mobile telephone	759
102 - Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	760-763
1. Emergency call module , (EL2),(EL5),(NZ2),(NZ3)	760
2. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	761
3. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, LTE aerial 1, LTE aerial 2, Loudspeaker for emergency call module	762
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front left microphone	763
103 - Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (7VE),(7VF),(7VG),(7VL),(9M4),(9M5)	764-768
1. Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (7VE),(7VF),(7VG),(7VL),(9M4),(9M5)	764
2. Circulation pump relay, Remote control receiver for auxiliary heater, Auxiliary heater aerial	765
3. Operating and display unit for camping equipment, Additional display and operating unit 1, Data bus diagnostic interface, Coupling point on dash panel, centre	766
4. Auxiliary heater control unit, Metering pump, Circulation pump	767
5. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Heater coolant shut-off valve, Glow plug with flame monitor	768
104 - Seat heating , (33C),(3TJ)	769-772
1. Seat heating , (33C),(3TJ)	769
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit, Fuse holder C	770
3. Heated front seats control unit. Heated seat cushion for front left seat. Heated backrest for	771

front left seat	
4. Heated front seats control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	772
801 - Fitting locations: Earth points - 1	773-789
1. Earth points	773-789
1.1 Earth points in front part of vehicle	774-778
1.1.1 Front from left	775
1.1.2 Front from right	775
1.1.3 Manual gearbox, 02Z	776
1.1.4 Manual gearbox, 0A5	777
1.1.5 Automatic gearbox, 0BT	778
1.2 Earth points in middle part of vehicle	779-784
1.2.1 Front left of interior	780
1.2.2 Front right of interior	781
1.2.3 Front middle of interior	781
1.2.4 Steering column	782
1.2.5 Front left door	783
1.2.6 Front right door	784
1.3 Earth points in rear part of vehicle	785-789
1.3.1 Rear left	786
1.3.2 Rear right	786
1.3.3 Platform, rear left	787
1.3.4 Camping equipment rear left	788-789
802 - Fitting locations: Fuses - 1	790-835
1. Fuses	790-835
1.1 Fuse holder A -SA-, from May 2019	791-796
1.1.1 Fitting location of fuse holder A -SA-, from May 2019	791-792
1.1.2 Fuse assignment for fuse holder A -SA-, from May 2019	793-796
1.2 Fuse holder B -SB-, from May 2019	797-801
1.2.1 Fitting location of fuse holder B -SB-, from May 2019	797
1.2.2 Fuse assignment for fuse holder B -SB-, from May 2019	798-801
1.3 Fuse holder C -SC-, from May 2019	802-811
1.3.1 Fitting location of fuse holder C -SC-, left-hand drive models, from May 2019	802
1.3.2 Fuse assignment of fuse holder C -SC-, left-hand drive models, from May 2019	803
1.3.3 Fitting location of fuse holder C -SC-, right-hand drive models, from May 2019	804
1.3.4 Fuse assignment of fuse holder C -SC-, right-hand drive models, from May 2019	805-806
1.3.5 Fuse assignment for fuse holder C -SC-, from May 2019	807-811
1.4 Fuse holder F -SF-, from November 2020	812-813
1.4.1 Fitting location of fuse holder F -SF-, from November 2020	812-813
1.4.2 Fuse table for fuse holder F -SF-, from November 2020	814
1.5 Fuse holder G -SG-, from May 2019	814-816
1.5.1 Fitting location of fuse holder G -SG-, from May 2019	814-815
1.5.2 Fuse chart for fuse holder G -SG-, from May 2019	816
1.6 Fuse holder H -SH-	817-826
1.6.1 Fitting location of fuse holder H -SH-, from May 2019	817
1.6.2 Fuse chart for fuse holder H -SH-, from May 2019	818-822
1.6.3 Fuse table for fuse holder H -SH-, from November 2021	823-826
1.7 Fuse holder J -SJ-, from May 2019	827-828
1.7.1 Fitting location of fuse holder J -SJ-, from May 2019	827-828
1.7.2 Fuse assignment for fuse holder J -SJ-, from May 2019	829
1.8 Fuse holder K -SK-, from May 2019	829-830
1.8.1 Fitting location of fuse holder K -SK-, from May 2019	830
1.8.2 Fuse assignment for fuse holder K -SK-, from May 2019	831
1.9 Fuse holder M -SM-, from October 2020	831-832
1.9.1 Fitting location of fuse holder M -SM-, from October 2020	831
1.9.2 Fuse assignment for fuse holder M -SM-, from October 2020	832
1.10 Battery fuse in special vehicle -S339-, from May 2019	833-835
1.10.1 Fitting location of battery fuse in special vehicle -S339-, from May 2019	833-834
1.10.2 Fuse assignment of battery fuse in special vehicle -S339-, from May 2019	835
803 - Fitting locations: Relays - 1	836-847
1. Relays	836-847
1.1 Relay in engine compartment	838-839
1.1.1 Relay on left in engine compartment, from May 2019	838-839
1.2 Relay in middle part of vehicle	840-847
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, May 2019	840-841
1.2.2 Relays on fuse holder C -SC-. right-hand drive models. May 2019	842

1.2.3 Relay carrier 1 under seat on front left, from May 2019	843-844
1.2.4 Relay carrier 2 under seat on front left, from May 2019	845
1.2.5 Relay carrier 1 under seat on front right, from May 2019	846-847
804 - Fitting locations: front part of vehicle - 1	848-872
1. Fitting location: front part of vehicle	848-872
1.1 Fitting location: front part of vehicle	856-860
1.1.1 Front, view from front	856
1.1.2 Front, view from left	857
1.1.3 Front, view from right	858-859
1.1.4 Front, view from right, part 2	860
1.1.5 Coupling point holder on left in engine compartment	860
1.2 2.0l diesel engine, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC	861-864
1.2.1 2.0l diesel engine, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC, from front	862
1.2.2 2.0l diesel engine, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC, from above	862
1.2.3 2.0l diesel engine, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC, from rear	863
1.2.4 2.0l diesel engine, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC, from right	864
1.3 2.0l diesel engine, DNAA, DNAB, DNAC, DMZA	865-868
1.3.1 2.0l diesel engine, DNAA, DNAB, DNAC, DMZA, from front	866
1.3.2 2.0l diesel engine, DNAA, DNAB, DNAC, DMZA, from above	866
1.3.3 2.0l diesel engine, DNAA, DNAB, DNAC, DMZA, from rear	867
1.3.4 2.0l diesel engine, DNAA, DNAB, DNAC, DMZA, from right	868
1.4 Gearbox	869-872
1.4.1 Dual clutch gearbox, 0BT	869
1.4.2 Manual gearbox, 02Z	870
1.4.3 Manual gearbox, 0A5	871-872
805 - Fitting locations: middle part of vehicle - 1	873-929
1. Fitting locations: middle part of vehicle	873-929
1.1 At front of interior	887-905
1.1.1 Front left of interior, LHD models part 1	888-889
1.1.2 Front left of interior, LHD models part 2	890
1.1.3 Front left of interior, RHD models	891
1.1.4 Front right of interior, RHD models	892-893
1.1.5 Front right of interior, LHD models	894
1.1.6 Interior left B-pillar	895
1.1.7 Under left seat	895
1.1.8 Coupling point holder under left seat	896
1.1.9 Coupling point holder 2 under left seat	897
1.1.10 Interior right B-pillar	898
1.1.11 Under right seat	899
1.1.12 Coupling point holder under right seat	900-901
1.1.13 Dash panel, LHD models	902
1.1.14 Dash panel, RHD models	903
1.1.15 Steering wheel	904
1.1.16 Steering column	905
1.2 Seats	906-911
1.2.1 Left front seat	907-908
1.2.2 Right front seat, single seat	909-910
1.2.3 Right front seat, double seat	911
1.3 Roof	912-914
1.3.1 Roof, part 1	913
1.3.2 Roof, part 2	913-914
1.4 Doors	915-920
1.4.1 Driver door	915
1.4.2 Front passenger door	916
1.4.3 Rear left door, double cab	917
1.4.4 Rear right door, double cab	918
1.4.5 Left sliding door, panel van/estate car	919
1.4.6 Right sliding door, panel van/estate car	920
1.5 Heater and air conditioning unit	921-929
1.5.1 Heater unit	922-923
1.5.2 Air conditioning system	924
1.5.3 Climatronic, LHD models	925
1.5.4 Climatronic, right-hand drive	926
1.5.5 Rear right air conditioning system	927
1.5.6 Rear heater unit for double cab	928-929
806 - Fitting locations: rear part of vehicle - 1	930-943

1. Fitting locations: rear part of vehicle	930-943
1.1 Fitting locations: rear part of vehicle	934-943
1.1.1 Rear lid	934
1.1.2 left wing door	935
1.1.3 right wing door	936
1.1.4 Rear bumper, panel van/estate car	937
1.1.5 Rear grille panel and heated rear window -Z1-, platform/double cab	938
1.1.6 Rear side, view from left, panel van/estate car	939-940
1.1.7 Rear side, view from right, panel van/estate car	941-943
807 - Fitting locations: vehicle underbody - 1	944-951
1. Fitting locations: vehicle underbody	944-951
1.1 Fitting locations: vehicle underbody, front	946
1.1.1 Fitting locations: vehicle underbody, front	946
1.2 Fitting locations: vehicle underbody, middle	947-948
1.2.1 Middle of underbody, CXEC, CXFA, CXGD, CXGE, CXHA, CXHC	947
1.2.2 Middle of underbody, DNAA, DNAB, DNAC, DMZA	948
1.3 Fitting locations: vehicle underbody, rear	949-951
1.3.1 Fitting locations: vehicle underbody, rear	949
1.3.2 Differential lock	950-951
808 - Fitting locations: special vehicles - 1	952-963
1. Special vehicles	952-963
1.1 Fitting locations for camping equipment California Beach	954
1.1.1 Interior left side	954
1.2 Fitting locations for camping equipment California Trendline and California Comfortline	955-963
1.2.1 At front of interior	955
1.2.2 Interior left side	956
1.2.3 Interior right side	957
1.2.4 Rear interior	958
1.2.5 Pop-up roof	959
1.2.6 Outer left side	960
1.2.7 Front of roof	961
1.2.8 Underbody	962-963
830 - Connector views: parts with prefix A to D - 1	964-975
1. Connector views: parts with prefix A to D	964-975
1.1 Onboard charging unit -A11-	964
1.1.1 6-pin connector -T6bp-	964
1.1.2 6-pin connector -T6j-	965
1.2 Suppression filter for digital two-way radio -C33-	965-966
1.2.1 4-pin connector -T4dz-	966
1.2.2 4-pin connector -T4ea-	966
1.3 Alternator with voltage regulator -CX1-	967
1.3.1 2-pin connector -T2hr-	967
1.4 Ignition/starter switch -D-	968
1.4.1 6-pin connector -T6k-	968
1.5 Immobiliser reader coil -D2-	969
1.5.1 2-pin connector -T2ca-	969
1.6 Sliding door reader coil -D4-	970
1.6.1 2-pin connector -T2cb-	970
1.7 Sliding door solenoid coil -D5-	971
1.7.1 2-pin connector -T2cc-	971
1.8 Right sliding door reader coil -D6-	972
1.8.1 2-pin connector -T2cd-	972
1.9 Right sliding door solenoid coil -D7-	973
1.9.1 2-pin connector -T2jk-	973
1.10 Reader unit for taxi charge system -D10-	974-975
1.10.1 2-pin connector -T2ts-	974-975
831 - Connector views: parts with prefix E - 1	976-1047
1. Connector views: parts with prefix E	976-1047
1.1 Driver side belt switch -E24-	978-979
1.1.1 2-pin connector -T2ay-	978
1.1.2 2-pin connector -T2cf-	979
1.1.3 2-pin connector -T2hs-	979
1.2 Front passenger side belt switch -E25-	980-983
1.2.1 2-pin connector -T2ap-	980
1.2.2 2-pin connector -T2ha-	981
1.2.3 2-pin connector -T2hm-	982

1.2.4 2-pin connector -T2ho-	982
1.2.5 2-pin connector -T2ht-	983
1.3 Glove compartment light switch -E26-	984
1.3.1 3-pin connector -T3az-	984
1.4 Mirror adjustment switch -E43-	985-986
1.4.1 10-pin connector -T10cj-	985
1.4.2 10-pin connector -T10en-	985
1.4.3 6-pin connector -T6bl-	986
1.4.4 6-pin connector -T6p-	987
1.5 Water pump switch -E80-	987
1.5.1 2-pin connector -T2sh-	988
1.6 Headlight range control regulator -E102-	988
1.6.1 7-pin connector -T7a-	988
1.7 Window regulator switch in front passenger door -E107-	989
1.7.1 4-pin connector -T4y-	989
1.8 Water pump switch for shower -E134-	990
1.8.1 4-pin connector -T4dr-	990
1.9 Operating and display unit for camping equipment -E153-	991
1.9.1 6-pin connector -T6l-	991
1.10 Rear lid release switch -E165-	992-993
1.10.1 4-pin connector -T4j-	992
1.10.2 4-pin connector -T4z-	993
1.11 Driver seat lumbar support adjustment switch -E176-	994
1.11.1 6-pin connector -T6aq-	994
1.12 Front passenger seat lumbar support adjustment switch -E177-	995
1.12.1 6-pin connector -T6ar-	995
1.13 Rear fresh air blower switch -E179-	995-996
1.13.1 16-pin connector -T16d-	995
1.13.2 5-pin connector -T5x-	996
1.14 Key operated switch to deactivate airbag on front passenger side -E224-	997
1.14.1 6-pin connector -T6m-	997
1.15 Rear lid remote release button -E233-	998
1.15.1 4-pin connector -T4aa-	998
1.16 Rear lid handle release button -E234-	998-999
1.16.1 2-pin connector -T2ag-	998
1.16.2 2-pin connector -T2ce-	999
1.17 Operating and display unit for rear air conditioning system -E265-	1000
1.17.1 6-pin connector -T6bk-	1000
1.18 Driver side interior locking button for central locking system -E308-	1001
1.18.1 4-pin connector -T4ab-	1001
1.19 Button to close rear lid in luggage compartment -E406-	1001
1.19.1 4-pin connector -T4ad-	1001
1.20 Driver operating unit for memory settings -E464-	1002-1003
1.20.1 6-pin connector -T6as-	1002
1.20.2 6-pin connector -T6at-	1003
1.21 Taxi alarm active button -E485-	1004
1.21.1 6-pin connector -T6cg-	1004
1.22 Taxi alarm off button -E486-	1005
1.22.1 2-pin connector -T2tr-	1005
1.23 Accident data recorder button -E497-	1005
1.23.1 5-pin connector -T5f-	1005
1.24 1-way radio loudspeaker volume control 2 -E502-	1006-1007
1.24.1 4-pin connector -T4ct-	1006
1.24.2 4-pin connector -T4cu-	1007
1.25 2-way radio loudspeaker volume control 2 -E503-	1008
1.25.1 4-pin connector -T4k-	1008
1.25.2 4-pin connector -T4p-	1009
1.26 Operating unit for special signals -E507-	1009
1.26.1 6-pin connector -T6bm-	1009
1.27 Operating unit for preparation for mobile telephone -E508-	1010
1.27.1 6-pin connector -T6n-	1010
1.28 Operating unit for window regulator in driver door -E512-	1011-1012
1.28.1 10-pin connector -T10ck-	1011
1.28.2 4-pin connector -T4a-	1012
1.29 Passive taxi alarm button -E580-	1013
1.29.1 2-pin connector -T2tx-	1013

1.30 Steering column combination switch -E595-	1014-1015
1.30.1 10-pin connector -T10db-	1014
1.30.2 12-pin connector -T12o-	1014
1.30.3 16-pin connector -T16e-	1015
1.30.4 16-pin connector -T16l-	1016
1.31 Rear centre belt switch -E609-	1016
1.31.1 4-pin connector -T4ec-	1017
1.32 Button for deactivating interior monitoring and vehicle inclination sensor -E616-	1017
1.32.1 6-pin connector -T6q-	1017
1.33 Front left reading light button -E633-	1018
1.33.1 4-pin connector -T4ae-	1018
1.34 Front right reading light button -E634-	1019
1.34.1 4-pin connector -T4af-	1019
1.35 Switch module for driver seat -E663-	1020
1.35.1 12-pin connector -T12q-	1020
1.36 Switch module for front passenger seat -E664-	1021-1022
1.36.1 10-pin connector -T10dz-	1021
1.36.2 6-pin connector -T6ax-	1022
1.37 Rear left belt switch -E747-	1023
1.37.1 2-pin connector -T2wo-	1023
1.38 Front left lumbar support adjustment switch -E752-	1024
1.38.1 6-pin connector -T6au-	1024
1.39 Front right lumbar support adjustment switch -E753-	1024
1.39.1 6-pin connector -T6av-	1024
1.40 Additional display and operating unit 1 -E857-	1025
1.40.1 6-pin connector -T6r-	1025
1.41 Switch for surround lighting in rear lid -E903-	1026
1.41.1 4-pin connector -T4ac-	1026
1.42 End position button for cupboard light -E905-	1027
1.42.1 2-pin connector -T2ro-	1027
1.43 Contactless button for kitchen light -E906-	1028
1.43.1 4-pin connector -T4dq-	1028
1.44 Button for kitchen background lighting -E907-	1029
1.44.1 4-pin connector -T4ds-	1029
1.45 Belt switch for seat row 1, middle -E953-	1030
1.45.1 17-pin connector -T17bb-	1030
1.46 Rotary light switch -EX1-	1031
1.46.1 10-pin connector -T10ci-	1031
1.47 Hazard warning light switch -EX3-	1032
1.47.1 6-pin connector -T6o-	1032
1.48 Interior mirror -EX5-	1033
1.48.1 8-pin connector -T8t-	1033
1.49 Heater and air conditioning controls -EX21-	1034-1035
1.49.1 16-pin connector -T16o-	1034
1.49.2 16-pin connector -T16p-	1035
1.49.3 20-pin connector -T20e-	1036
1.50 Centre switch module in dash panel -EX22-	1036-1037
1.50.1 10-pin connector -T10cm-	1037
1.50.2 10-pin connector -T10i-	1037
1.51 Centre switch module 2 in dash panel -EX35-	1038
1.51.1 10-pin connector -T10cn-	1038
1.52 Switch module 1 in dash panel, next to steering wheel -EX43-	1039
1.52.1 10-pin connector -T10cp-	1039
1.53 Switch module 2 in dash panel, next to steering wheel -EX44-	1040-1041
1.53.1 10-pin connector -T10co-	1040
1.53.2 10-pin connector -T10em-	1041
1.54 Centre switch module 3 in dash panel -EX48-	1042
1.54.1 10-pin connector -T10cl-	1042
1.55 Centre switch module 4 in dash panel -EX49-	1043
1.55.1 10-pin connector -T10cq-	1043
1.56 Centre switch module 1 in dash panel -EX50-	1043
1.56.1 10-pin connector -T10cs-	1043
1.57 Centre switch module 2 in dash panel -EX51-	1044
1.57.1 10-pin connector -T10cr-	1044
1.58 Operating unit with manual release mechanism for right sliding door -EX64-	1045
1.58.1 4-pin connector -T4cr-	1045

1.59 Operating unit with manual release mechanism for left sliding door -EX65-	1046-1047
1.59.1 4-pin connector -T4ag-	1046-1047
832 - Connector views: parts with prefix F - 1	1048-1067
1. Connector views: parts with prefix F	1048-1067
1.1 Brake light switch -F-	1048
1.1.1 4-pin connector -T4ah-	1048
1.2 Oil pressure switch -F1-	1049
1.2.1 2-pin connector -T2cg-	1049
1.3 Reversing light switch -F4-	1050
1.3.1 2-pin connector -T2hv-	1050
1.4 Handbrake warning switch -F9-	1051
1.4.1 2-pin connector -T2cn-	1051
1.5 Brake fluid level warning contact -F34-	1052
1.5.1 2-pin connector -T2cl-	1052
1.6 Rear lid contact switch -F111-	1053
1.6.1 3-pin connector -T3ba-	1053
1.7 Driver vanity mirror contact switch -F147-	1054
1.7.1 2-pin connector -T2ch-	1054
1.8 Front passenger vanity mirror contact switch -F148-	1055
1.8.1 2-pin connector -T2ci-	1055
1.9 Rear left exterior door handle switch -F274-	1056
1.9.1 2-pin connector -T2cj-	1056
1.10 Rear right exterior door handle switch -F275-	1057
1.10.1 2-pin connector -T2ji-	1057
1.11 Rear left interior door handle switch -F278-	1058
1.11.1 2-pin connector -T2ck-	1058
1.12 Rear right interior door handle switch -F279-	1059
1.12.1 2-pin connector -T2jj-	1059
1.13 Front passenger side belt fastened contact -F304-	1060-1061
1.13.1 2-pin connector -T2hf-	1060
1.13.2 2-pin connector -T2hk-	1061
1.14 Contact strip in right sliding door -F352-	1062
1.14.1 8-pin connector -T8am-	1062
1.15 Contact strip in left sliding door -F353-	1063
1.15.1 8-pin connector -T8al-	1063
1.16 Vacuum switch for rear differential lock -F363-	1063
1.16.1 5-pin connector -T5ad-	1063
1.17 Oil pressure switch for reduced oil pressure -F378-	1064
1.17.1 2-pin connector -T2cm-	1064
1.18 Contact strip in left B-pillar -F571-	1065
1.18.1 8-pin connector -T8w-	1065
1.19 Contact strip in right B-pillar -F572-	1066-1067
1.19.1 8-pin connector -T8v-	1066-1067
833 - Connector views: parts with prefix G - 1	1068-1197
1. Connector views: parts with prefix G	1068-1197
1.1 Oil pressure sender -G10-	1072
1.1.1 3-pin connector -T3em-	1072
1.2 Ambient temperature sensor -G17-	1073
1.2.1 2-pin connector -T2hx-	1073
1.3 Tachograph -G24-	1073-1075
1.3.1 8-pin connector -T8a-	1073
1.3.2 8-pin connector -T8ai-	1074
1.3.3 8-pin connector -T8aj-	1075
1.3.4 8-pin connector -T8x-	1076
1.4 Engine speed sender -G28-	1076-1077
1.4.1 3-pin connector -T3bf-	1077
1.4.2 3-pin connector -T3ew-	1077
1.5 Charge pressure sender -G31-	1078-1079
1.5.1 4-pin connector -T4ap-	1078
1.5.2 3-pin connector -T3ex-	1079
1.6 Coolant shortage indicator sender -G32-	1080
1.6.1 2-pin connector -T2hy-	1080
1.7 Windscreen washer fluid level sender -G33-	1081
1.7.1 2-pin connector -T2cw-	1081
1.8 Front left brake pad wear sender -G34-	1081
1.8.1 2-pin connector -T2cx-	1081

1.9 Rear right brake pad wear sender -G37-	1082
1.9.1 2-pin connector -T2db-	1082
1.10 Hall sender -G40-	1083
1.10.1 3-pin connector -T3bh-	1083
1.11 Taximeter -G41-	1084
1.11.1 18-pin connector -T18c-	1084
1.12 Rear right speed sensor -G44-	1085
1.12.1 2-pin connector -T2de-	1085
1.13 Front right speed sensor -G45-	1086
1.13.1 2-pin connector -T2dg-	1086
1.14 Rear left speed sensor -G46-	1087
1.14.1 2-pin connector -T2dh-	1087
1.15 Front left speed sensor -G47-	1088
1.15.1 2-pin connector -T2di-	1088
1.16 Knock sensor 1 -G61-	1089
1.16.1 2-pin connector -T2dk-	1089
1.17 Coolant temperature sender -G62-	1090-1091
1.17.1 2-pin connector -T2dl-	1090
1.17.2 2-pin connector -T2sr-	1091
1.18 Water separator sender -G63-	1092
1.18.1 3-pin connector -T3bn-	1092
1.19 Knock sensor 2 -G66-	1093
1.19.1 2-pin connector -T2do-	1093
1.20 Air mass meter -G70-	1093
1.20.1 4-pin connector -T4al-	1093
1.21 Tachograph sender -G75-	1094
1.21.1 4-pin connector -T4bt-	1094
1.22 Rear left vehicle level sender -G76-	1095
1.22.1 4-pin connector -T4am-	1095
1.23 Rear right vehicle level sender -G77-	1096
1.23.1 4-pin connector -T4an-	1096
1.24 Front left vehicle level sender -G78-	1097
1.24.1 4-pin connector -T4ao-	1097
1.25 Fuel temperature sender -G81-	1098
1.25.1 2-pin connector -T2m-	1098
1.26 Radiator outlet coolant temperature sender -G83-	1099
1.26.1 2-pin connector -T2ia-	1099
1.27 Exhaust gas recirculation temperature sensor -G98-	1100
1.27.1 2-pin connector -T2su-	1100
1.28 Sunlight penetration photosensor -G107-	1101-1102
1.28.1 6-pin connector -T6az-	1101
1.28.2 6-pin connector -T6b-	1102
1.29 Water level sender -G120-	1103
1.29.1 2-pin connector -T2ru-	1103
1.30 Waste water level sender -G126-	1104
1.30.1 2-pin connector -T2rv-	1104
1.31 Seat occupied sensor on front passenger side -G128-	1104-1108
1.31.1 2-pin connector -T2aq-	1105
1.31.2 2-pin connector -T2xi-	1105
1.31.3 2-pin connector -T2hj-	1106
1.31.4 2-pin connector -T2hn-	1107
1.31.5 2-pin connector -T2hp-	1107
1.31.6 2-pin connector -T2hw-	1108
1.32 Rear vent temperature sender -G174-	1109
1.32.1 2-pin connector -T2cp-	1109
1.33 Side airbag crash sensor on driver side -G179-	1110
1.33.1 2-pin connector -T2cq-	1110
1.34 Side airbag crash sensor on front passenger side -G180-	1110
1.34.1 2-pin connector -T2cs-	1110
1.35 Rear left parking aid sender -G203-	1111
1.35.1 3-pin connector -T3cy-	1111
1.36 Rear centre left parking aid sender -G204-	1112
1.36.1 3-pin connector -T3cz-	1112
1.37 Rear centre right parking aid sender -G205-	1113
1.37.1 3-pin connector -T3da-	1113
1.38 Rear right parking aid sender -G206-	1114

1.38.1 3-pin connector -T3db-	1114
1.39 Rain sensor -G213-	1115
1.39.1 3-pin connector -T3bc-	1115
1.40 Exhaust gas temperature sender 1 -G235-	1116-1117
1.40.1 2-pin connector -T2ct-	1116
1.40.2 3-pin connector -T3bd-	1117
1.40.3 3-pin connector -T3eo-	1118
1.41 Fuel pressure sender -G247-	1118-1120
1.41.1 3-pin connector -T3be-	1119
1.41.2 3-pin connector -T3i-	1119
1.41.3 3-pin connector -T3ev-	1120
1.42 Ambient temperature sender 2 -G249-	1121
1.42.1 2-pin connector -T2co-	1121
1.43 Front right parking aid sender -G252-	1122
1.43.1 3-pin connector -T3dc-	1122
1.44 Front centre right parking aid sender -G253-	1122
1.44.1 3-pin connector -T3dd-	1122
1.45 Front centre left parking aid sender -G254-	1123
1.45.1 3-pin connector -T3de-	1123
1.46 Front left parking aid sender -G255-	1124
1.46.1 3-pin connector -T3df-	1124
1.47 Rear side airbag crash sensor on driver side -G256-	1125
1.47.1 2-pin connector -T2cu-	1125
1.48 Rear side airbag crash sensor on passenger side -G257-	1126
1.48.1 2-pin connector -T2cv-	1126
1.49 Left footwell vent temperature sender -G261-	1127
1.49.1 2-pin connector -T2iv-	1127
1.50 Right footwell vent temperature sender -G262-	1128
1.50.1 2-pin connector -T2iw-	1128
1.51 Oil level and oil temperature sender -G266-	1129-1130
1.51.1 3-pin connector -T3dg-	1129
1.51.2 3-pin connector -T3dh-	1130
1.52 Front right vehicle level sender -G289-	1131
1.52.1 4-pin connector -T4ai-	1131
1.53 Evaporator temperature sensor -G308-	1132
1.53.1 2-pin connector -T2ix-	1132
1.54 Front left body acceleration sender -G341-	1132
1.54.1 2-pin connector -T2cy-	1132
1.55 Front right body acceleration sender -G342-	1133
1.55.1 2-pin connector -T2cz-	1133
1.56 Rear body acceleration sender -G343-	1134
1.56.1 2-pin connector -T2da-	1134
1.57 Charge pressure sender 2 -G447-	1135-1136
1.57.1 3-pin connector -T3bi-	1135
1.57.2 3-pin connector -T3ey-	1136
1.58 Exhaust gas temperature sender 2 -G448-	1137
1.58.1 2-pin connector -T2df-	1137
1.58.2 2-pin connector -T2ss-	1138
1.59 Pressure sensor for seat occupied recognition -G452-	1138-1139
1.59.1 2-pin connector -T2hg-	1138
1.59.2 2-pin connector -T2xj-	1139
1.59.3 2-pin connector -T2hl-	1140
1.60 Clutch position sender -G476-	1140
1.60.1 5-pin connector -T5i-	1141
1.61 Sliding door sender unit -G477-	1141
1.61.1 16-pin connector -T16h-	1141
1.62 Right anti-trapping sensor -G480-	1142
1.62.1 2-pin connector -T2jl-	1142
1.63 Right electric sliding door sender unit -G481-	1143
1.63.1 16-pin connector -T16q-	1143
1.64 Exhaust gas temperature sender 3 -G495-	1144-1145
1.64.1 2-pin connector -T2dj-	1144
1.64.2 2-pin connector -T2st-	1145
1.65 Pressure differential sender -G505-	1146
1.65.1 3-pin connector -T3bj-	1146
1.65.2 3-pin connector -T3en-	1147

1.66 Mirror taximeter -G511-	1147-1148
1.66.1 6-pin connector -T6ce-	1147
1.66.2 10-pin connector -T10el-	1148
1.67 Variable intake manifold position sender -G513-	1149
1.67.1 3-pin connector -T3bk-	1149
1.68 Front left sender for park assist steering on left side of vehicle -G568-	1150
1.68.1 3-pin connector -T3di-	1150
1.69 Front right sender for park assist steering on right side of vehicle -G569-	1150
1.69.1 3-pin connector -T3dj-	1150
1.70 Anti-theft alarm sensor -G578-	1151
1.70.1 4-pin connector -T4aj-	1151
1.71 Position sender 2 for charge pressure positioner -G580-	1152-1153
1.71.1 3-pin connector -T3bl-	1152
1.71.2 3-pin connector -T3ep-	1153
1.72 Position sender for charge pressure positioner -G581-	1154
1.72.1 3-pin connector -T3bm-	1154
1.73 Interior monitoring sensor 2 -G592-	1155
1.73.1 4-pin connector -T4r-	1155
1.74 Vacuum sender -G608-	1155
1.74.1 3-pin connector -T3bg-	1155
1.75 Exhaust gas temperature sender 4 -G648-	1156
1.75.1 2-pin connector -T2dm-	1156
1.76 Anti-trapping sender -G673-	1157
1.76.1 2-pin connector -T2dp-	1157
1.77 Temperature sensor 2 for exhaust recirculation -G690-	1158-1159
1.77.1 2-pin connector -T2dr-	1158
1.77.2 2-pin connector -T2sq-	1159
1.78 Gearbox neutral position sender -G701-	1160
1.78.1 3-pin connector -T3dk-	1160
1.79 Rear left park assist steering sender -G716-	1161
1.79.1 3-pin connector -T3dl-	1161
1.80 Rear right park assist steering sender -G717-	1161
1.80.1 3-pin connector -T3dm-	1161
1.81 Coolant temperature sender 2 -G802-	1162
1.81.1 2-pin connector -T2ta-	1162
1.82 Pressure sender for refrigerant circuit -G805-	1163
1.82.1 3-pin connector -T3bb-	1163
1.83 Charge air temperature sender before charge air cooler -G810-	1164-1165
1.83.1 2-pin connector -T2dd-	1164
1.83.2 2-pin connector -T2sx-	1165
1.84 Charge air temperature sender after charge air cooler -G811-	1166
1.84.1 2-pin connector -T2dt-	1166
1.84.2 2-pin connector -T2sy-	1167
1.85 Coolant temperature sender 3 -G812-	1167-1168
1.85.1 2-pin connector -T2cr-	1167
1.85.2 2-pin connector -T2sw-	1168
1.86 Temperature sensor 3 for exhaust recirculation -G949-	1169
1.86.1 2-pin connector -T2dc-	1169
1.87 Front stop command light -G954-	1170
1.87.1 2-pin connector -T2by-	1170
1.88 Rear stop command light -G955-	1170
1.88.1 4-pin connector -T4at-	1170
1.89 Vent temperature sender, driver side -G983-	1171
1.89.1 2-pin connector -T2du-	1171
1.90 Vent temperature sender, front passenger side -G984-	1172
1.90.1 2-pin connector -T2iy-	1172
1.91 Inlet camshaft position sender -G1002-	1173
1.91.1 3-pin connector -T3eq-	1173
1.92 Crash sensor for side airbag in B-pillar, driver side -G1101-	1174
1.92.1 2-pin connector -T2xk-	1174
1.93 Crash sensor for side airbag in B-pillar, passenger side -G1102-	1175
1.93.1 2-pin connector -T2xl-	1175
1.94 Coolant temperature sender for charge air cooler -G1130-	1176
1.94.1 2-pin connector -T2sv-	1176
1.95 Fuel delivery unit -GX1-	1177-1178
1.95.1 5-pin connector -T5ae-	1177

1.95.2 4-pin connector -T4dx-	1178
1.95.3 3-pin connector -T3ez-	1179
1.96 Accelerator pedal module -GX2-	1179
1.96.1 6-pin connector -T6w-	1180
1.97 Throttle valve module -GX3-	1180-1181
1.97.1 5-pin connector -T5o-	1180
1.97.2 5-pin connector -T5an-	1181
1.98 Exhaust gas recirculation valve 1 -GX5-	1182
1.98.1 6-pin connector -T6x-	1182
1.98.2 6-pin connector -T6cb-	1183
1.99 Exhaust gas recirculation valve 2 -GX6-	1183
1.99.1 5-pin connector -T5ao-	1183
1.100 Lambda probe 1 before catalytic converter -GX10-	1184-1185
1.100.1 5-pin connector -T5m-	1184
1.100.2 6-pin connector -T6v-	1185
1.101 Delivery unit for reducing agent metering system -GX19-	1186
1.101.1 4-pin connector -T4ci-	1186
1.101.2 7-pin connector -T7e-	1187
1.102 Temperature and pressure sender for low-pressure fuel system -GX20-	1187-1188
1.102.1 4-pin connector -T4l-	1187
1.102.2 4-pin connector -T4dw-	1188
1.103 Control unit for NOx sender -GX30-	1189
1.103.1 5-pin connector -T5j-	1189
1.103.2 5-pin connector -T5k-	1190
1.104 Charge pressure control module -GX34-	1190
1.104.1 6-pin connector -T6bz-	1190
1.105 Air mass measurement module -GX35-	1191
1.105.1 3-pin connector -T3bo-	1191
1.106 Mixing valve for coolant regulation -GX40-	1192
1.106.1 5-pin connector -T5n-	1192
1.107 Control unit 2 for NOx sender -GX46-	1193
1.107.1 5-pin connector -T5ag-	1193
1.108 Exhaust gas recirculation valve 3 -GX48-	1194
1.108.1 6-pin connector -T6by-	1194
1.109 Control unit 3 for NOx sender -GX50-	1195
1.109.1 5-pin connector -T5l-	1195
1.110 Control unit 1 for particulate sensor -GX52-	1196-1197
1.110.1 4-pin connector -T4cc-	1196-1197
834 - Connector views: parts with prefix H to I - 1	1198-1203
1. Connector views: parts with prefix H to I	1198-1203
1.1 Horn or dual tone horn -H1-	1198
1.1.1 2-pin connector -T2dv-	1198
1.2 Bass horn -H7-	1199
1.2.1 2-pin connector -T2dz-	1199
1.3 Alarm horn -H12-	1199
1.3.1 3-pin connector -T3bp-	1199
1.4 Rear parking aid warning buzzer -H15-	1200
1.4.1 2-pin connector -T2dw-	1200
1.5 Front parking aid warning buzzer -H22-	1201
1.5.1 2-pin connector -T2dx-	1201
1.6 Rear lid warning buzzer -H32-	1202-1203
1.6.1 2-pin connector -T2dy-	1202-1203
835 - Connector views: parts with prefix J - 1	1204-1281
1. Connector views: parts with prefix J	1204-1281
1.1 Battery isolation relay -J7-	1206
1.1.1 2-pin connector -T2ea-	1206
1.2 ABS control unit -J104-	1206
1.2.1 38-pin connector -T38a-	1206
1.3 Fresh air blower control unit -J126-	1207
1.3.1 4-pin connector -T4aq-	1207
1.4 Automatic glow period control unit -J179-	1208
1.4.1 11-pin connector -T11a-	1208
1.5 Airbag control unit -J234-	1209-1210
1.5.1 90-pin connector -T90b-	1209-1210
1.6 Electronically controlled damping control unit -J250-	1211
1.6.1 47-pin connector -T47a-	1211

1.7 Trailer detector control unit -J345-	1212-1213
1.7.1 10-pin connector -T10dc-	1212
1.7.2 24-pin connector -T24a-	1213
1.7.3 6-pin connector -T6am-	1214
1.8 Auxiliary heater control unit -J364-	1214-1216
1.8.1 10-pin connector -T10ea-	1215
1.8.2 2-pin connector -T2in-	1215
1.8.3 6-pin connector -T6aw-	1216
1.9 Battery monitor control unit -J367-	1217
1.9.1 2-pin connector -T2gm-	1217
1.10 Driver door control unit -J386-	1218
1.10.1 24-pin connector -T24b-	1218
1.11 Front passenger door control unit -J387-	1218
1.11.1 24-pin connector -T24c-	1218
1.12 Rear fresh air blower control unit -J391-	1219
1.12.1 4-pin connector -T4ar-	1219
1.13 Adaptive cruise control unit -J428-	1220
1.13.1 7-pin connector -T7d-	1220
1.14 Headlight range control unit -J431-	1221
1.14.1 26-pin connector -T26a-	1221
1.15 Parking aid control unit -J446-	1222-1223
1.15.1 18-pin connector -T18a-	1222
1.15.2 26-pin connector -T26b-	1223
1.16 Multifunction steering wheel control unit -J453-	1224
1.16.1 5-pin connector -T5ac-	1224
1.17 All-wheel drive control unit -J492-	1225
1.17.1 8-pin connector -T8ar-	1225
1.18 Power steering control unit -J500-	1225-1226
1.18.1 2-pin connector -T2ib-	1225
1.18.2 3-pin connector -T3dw-	1226
1.19 Tyre Pressure Monitoring System control unit -J502-	1227
1.19.1 4-pin connector -T4as-	1227
1.20 Onboard supply control unit -J519-	1228-1229
1.20.1 46-pin connector -T46b-	1228
1.20.2 73-pin connector -T73a-	1228
1.20.3 73-pin connector -T73c-	1229
1.21 Data bus diagnostic interface -J533-	1230
1.21.1 20-pin connector -T20a-	1230
1.22 Fuel pump control unit -J538-	1231
1.22.1 6-pin connector -T6ci-	1231
1.22.2 6-pin connector -T6cc-	1231
1.23 Selector lever sensors control unit -J587-	1232
1.23.1 10-pin connector -T10cv-	1232
1.24 Rear lid control unit -J605-	1233-1234
1.24.1 10-pin connector -T10cw-	1233
1.24.2 32-pin connector -T32fa-	1234
1.25 Special vehicle control unit -J608-	1235-1237
1.25.1 12-pin connector -T12k-	1235
1.25.2 20-pin connector -T20d-	1236
1.25.3 40-pin connector -T40a-	1236
1.25.4 6-pin connector -T6y-	1237
1.26 Engine/motor control unit -J623-	1238-1240
1.26.1 60-pin connector -T60a-	1238
1.26.2 91-pin connector -T91a-	1239
1.26.3 94-pin connector -T94a-	1239
1.26.4 105-pin connector -T105a-	1240
1.27 Power latching control unit -J657-	1241
1.27.1 8-pin connector -T8aa-	1241
1.28 Display unit for front information display and operating unit control unit -J685-	1242-1243
1.28.1 12-pin connector -T12g-	1242
1.28.2 5-pin connector -T5a-	1242
1.28.3 5-pin connector -T5y-	1243
1.29 Refrigerator box -J698-	1244
1.29.1 6-pin connector -T6br-	1244
1.30 Mechatronic unit for dual clutch gearbox -J743-	1245
1.30.1 16-pin connector -T16n-	1245

1.31 Accident data memory -J754-	1245
1.31.1 32-pin connector -T32ey-	1245
1.32 Lane change assist control unit -J769-	1246
1.32.1 8-pin connector -T8y-	1246
1.33 Lane change assist control unit 2 -J770-	1247
1.33.1 8-pin connector -T8z-	1247
1.34 Reversing camera system control unit -J772-	1248
1.34.1 8-pin connector -T8ad-	1248
1.35 Heated front seats control unit -J774-	1249
1.35.1 15-pin connector -T15a-	1249
1.36 Control unit 1 for information electronics -J794-	1250-1258
1.36.1 12-pin connector -T12a-	1251
1.36.2 12-pin connector -T12l-	1251
1.36.3 12-pin connector -T12m-	1252
1.36.4 12-pin connector -T12n-	1253
1.36.5 2-pin connector -T2u-	1253
1.36.6 4-pin connector -T4bs-	1254
1.36.7 5-pin connector -T5ab-	1255
1.36.8 5-pin connector -T5b-	1255
1.36.9 5-pin connector -T5c-	1256
1.36.10 8-pin connector -T8ab-	1257
1.36.11 8-pin connector -T8ak-	1257
1.36.12 2-pin connector -T2gr-	1258
1.36.13 2-pin connector -T2gs-	1259
1.37 Driver seat adjustment control unit -J810-	1259-1261
1.37.1 10-pin connector -T10ec-	1260
1.37.2 12-pin connector -T12r-	1260
1.37.3 16-pin connector -T16t-	1261
1.37.4 32-pin connector -T32fd-	1262
1.38 Exhaust flap control unit -J883-	1262
1.38.1 5-pin connector -T5at-	1263
1.39 Control unit for reducing agent heater -J891-	1263-1264
1.39.1 4-pin connector -T4cd-	1263
1.39.2 5-pin connector -T5ai-	1264
1.39.3 11-pin connector -T11b-	1265
1.40 Control unit for ignition bypass -J905-	1265
1.40.1 10-pin connector -T10x-	1266
1.41 Rear driver side door control unit -J926- and rear passenger side door control unit -J927-	1266-1270
1.41.1 10-pin connector -T10dd-	1266
1.41.2 10-pin connector -T10de-	1267
1.41.3 10-pin connector -T10ed-	1268
1.41.4 10-pin connector -T10ee-	1269
1.41.5 16-pin connector -T16j-	1269
1.41.6 16-pin connector -T16k-	1270
1.42 Battery monitor control unit 2 -J934-	1271
1.42.1 2-pin connector -T2gn-	1271
1.43 Emergency call module control unit and communication unit -J949-	1272-1273
1.43.1 2-pin connector -T2gg-	1272
1.43.2 36-pin connector -T36a-	1272
1.43.3 4-pin connector -T4d-	1273
1.44 Two-way signal amplifier for mobile telephone/data services -J984-	1274-1275
1.44.1 2-pin connector -T2fd-	1274
1.44.2 2-pin connector -T2gh-	1275
1.44.3 4-pin connector -T4br-	1275
1.45 Rear driver side active door protection control unit -J1093- and rear passenger side active door protection control unit -J1094-	1276-1277
1.45.1 16-pin connector -T16f-	1276
1.45.2 16-pin connector -T16g-	1277
1.46 Rotating light control unit -J1114-	1278
1.46.1 9-pin connector -T9a-	1278
1.47 Battery monitor control unit 3 -J1116-	1279
1.47.1 2-pin connector -T2l-	1279
1.48 Interface control unit for telematics -J1221-	1279
1.48.1 12-pin connector -T12s-	1279
1.49 Control unit for external vehicle communication -J1262-	1280-1281
1.49.1 4-pin connector -T4bv-	1280-1281

836 - Connector views: parts with prefix K to M - 1	1282-1305
1. Connector views: parts with prefix K to M	1282-1305
1.1 Central locking SAFELOCK function warning lamp -K133-	1282-1283
1.1.1 2-pin connector -T2aw-	1282
1.1.2 2-pin connector -T2bq-	1283
1.2 Warning lamp for airbag deactivated on front passenger side -K145-	1284
1.2.1 4-pin connector -T4av-	1284
1.3 Additional interior light -K329-	1285
1.3.1 4-pin connector -T4e-	1285
1.4 Dash panel insert -KX2-	1285
1.4.1 18-pin connector -T18b-	1285
1.5 Left fog light bulb -L22-	1286
1.5.1 2-pin connector -T2ic-	1286
1.6 Right fog light bulb -L23-	1287
1.6.1 2-pin connector -T2id-	1287
1.7 Rear illumination bulb -L153-	1288
1.7.1 4-pin connector -T4aw-	1288
1.8 Additional interior light 2 -L340-	1289
1.8.1 4-pin connector -T4f-	1289
1.9 Left turn signal repeater bulb -M18-	1290
1.9.1 2-pin connector -T2ec-	1290
1.10 Right turn signal repeater bulb -M19-	1291
1.10.1 2-pin connector -T2ed-	1291
1.11 Left roof mounted turn signal bulb -M23-	1292-1293
1.11.1 2-pin connector -T2d-	1292
1.11.2 2-pin connector -T2ee-	1293
1.12 Right roof mounted turn signal bulb -M24-	1294
1.12.1 2-pin connector -T2e-	1294
1.12.2 2-pin connector -T2ef-	1295
1.13 High-level brake light bulb -M25-	1295-1296
1.13.1 2-pin connector -T2eb-	1295
1.13.2 2-pin connector -T2eg-	1296
1.13.3 2-pin connector -T2eh-	1297
1.14 High-level brake light bulb 2 -M102-	1297
1.14.1 2-pin connector -T2qw-	1298
1.15 Flashing light in rear lid -M130-	1298
1.15.1 4-pin connector -T4au-	1298
1.16 Front left headlight -MX1-	1299-1300
1.16.1 10-pin connector -T10eb-	1299
1.16.2 14-pin connector -T14s-	1300
1.17 Front right headlight -MX2-	1301
1.17.1 10-pin connector -T10cx-	1301
1.17.2 14-pin connector -T14m-	1302
1.18 Left tail light cluster -MX3-	1302-1303
1.18.1 6-pin connector -T6aa-	1302
1.18.2 6-pin connector -T6ab-	1303
1.19 Right tail light cluster -MX4-	1304-1305
1.19.1 6-pin connector -T6ac-	1304
1.19.2 6-pin connector -T6ad-	1305
837 - Connector views: parts with prefix N - 1	1306-1348
1. Connector views: parts with prefix N	1306-1348
1.1 Series resistor -N6-	1307
1.1.1 10-pin connector -T10b-	1307
1.2 Injector, cylinder 1 -N30-	1308
1.2.1 2-pin connector -T2em-	1308
1.2.2 3-pin connector -T3er-	1308
1.3 Injector, cylinder 2 -N31-	1309-1310
1.3.1 2-pin connector -T2en-	1309
1.3.2 3-pin connector -T3et-	1310
1.4 Injector, cylinder 3 -N32-	1311
1.4.1 2-pin connector -T2ep-	1311
1.4.2 3-pin connector -T3eu-	1312
1.5 Injector, cylinder 4 -N33-	1312-1313
1.5.1 2-pin connector -T2eq-	1312
1.5.2 3-pin connector -T3es-	1313
1.6 Charge pressure control solenoid valve -N75-	1314

1.6.1 2-pin connector -T2ez-	1314
1.7 Heater element for crankcase breather -N79-	1315
1.7.1 2-pin connector -T2fa-	1315
1.8 Coolant shut-off valve -N82-	1315
1.8.1 2-pin connector -T2ip-	1315
1.9 Airbag igniter on driver side -N95-	1316
1.9.1 2-pin connector -T2hb-	1316
1.10 Differential lock valve 1 -N125-	1317
1.10.1 2-pin connector -T2ie-	1317
1.11 Differential lock valve 2 -N126-	1318
1.11.1 2-pin connector -T2if-	1318
1.12 Airbag igniter 1 on front passenger side -N131-	1319
1.12.1 3-pin connector -T3bq-	1319
1.13 Driver seat belt tensioner igniter 1 -N153-	1320
1.13.1 3-pin connector -T3br-	1320
1.14 Front passenger seat belt tensioner igniter 1 -N154-	1321
1.14.1 3-pin connector -T3bs-	1321
1.15 Side airbag igniter on driver side -N199-	1322-1323
1.15.1 3-pin connector -T3ah-	1322
1.15.2 3-pin connector -T3cv-	1323
1.16 Side airbag igniter on front passenger side -N200-	1324
1.16.1 3-pin connector -T3ag-	1324
1.16.2 3-pin connector -T3cs-	1325
1.17 Driver side curtain airbag igniter -N251- and front passenger side curtain airbag igniter -N252-	1325-1326
1.17.1 3-pin connector -T3dn-	1325
1.17.2 3-pin connector -T3do-	1326
1.17.3 3-pin connector -T3dp-	1327
1.18 Front passenger side curtain airbag igniter -N252-	1327
1.19 Charge pressure control solenoid valve 2 -N274-	1328
1.19.1 2-pin connector -T2ei-	1328
1.20 Fuel pressure regulating valve -N276-	1328-1329
1.20.1 2-pin connector -T2ej-	1328
1.20.2 2-pin connector -T2so-	1329
1.21 Heater coolant shut-off valve -N279-	1330
1.21.1 2-pin connector -T2ek-	1330
1.22 Fuel metering valve -N290-	1331
1.22.1 2-pin connector -T2el-	1331
1.22.2 2-pin connector -T2sz-	1331
1.23 Intake manifold flap valve -N316-	1332
1.23.1 2-pin connector -T2eo-	1332
1.24 Front left shock absorber damping adjustment valve -N336-	1333
1.24.1 2-pin connector -T2er-	1333
1.25 Front right shock absorber damping adjustment valve -N337-	1334
1.25.1 2-pin connector -T2es-	1334
1.26 Rear left shock absorber damping adjustment valve -N338-	1335
1.26.1 2-pin connector -T2et-	1335
1.27 Rear right shock absorber damping adjustment valve -N339-	1336
1.27.1 2-pin connector -T2eu-	1336
1.28 Driver side curtain airbag rear igniter -N343-	1337-1338
1.28.1 3-pin connector -T3ct-	1337
1.28.2 3-pin connector -T3ac-	1338
1.29 Front passenger side curtain airbag rear igniter -N344-	1339
1.29.1 3-pin connector -T3ab-	1339
1.29.2 3-pin connector -T3bu-	1340
1.30 Ignition key withdrawal lock solenoid -N376-	1340
1.30.1 2-pin connector -T2he-	1340
1.31 Climatronic coolant shut-off valve -N422-	1341
1.31.1 2-pin connector -T2ew-	1341
1.32 Valve for oil pressure control -N428-	1342-1343
1.32.1 2-pin connector -T2ex-	1342
1.32.2 2-pin connector -T2sp-	1343
1.33 Injector for reducing agent -N474-	1344
1.33.1 2-pin connector -T2dq-	1344
1.33.2 2-pin connector -T2ey-	1345
1.34 Solenoid for coolant circuit -N492-	1345

1.34.1 2-pin connector -T2fb-	1345
1.35 Turbine changeover valve -N529-	1346
1.35.1 2-pin connector -T2ev-	1346
1.36 Injector 2 for reducing agent -N758-	1347-1348
1.36.1 2-pin connector -T2ih-	1347-1348
838 - Connector views: parts with prefix O to Q - 1	1349-1350
1. Connector views: parts with prefix O to Q	1349-1350
1.1 Glow plug 3 -QX3-	1349-1350
1.1.1 4-pin connector -T4ax-	1349
1.1.2 4-pin connector -T4dv-	1349-1350
839 - Connector views: parts with prefix R - 1	1351-1381
1. Connector views: parts with prefix R	1351-1381
1.1 Front left loudspeaker -R2-	1352
1.1.1 4-pin connector -T4az-	1352
1.2 Front right loudspeaker -R3-	1352
1.2.1 4-pin connector -T4ba-	1352
1.3 Rear left loudspeaker -R4-	1353
1.3.1 4-pin connector -T4cs-	1353
1.4 Rear right loudspeaker -R5-	1354
1.4.1 4-pin connector -T4bb-	1354
1.5 Two-way radio -R8-	1355-1357
1.5.1 17-pin connector -T17aw-	1355
1.5.2 2-pin connector -T2uc-	1356
1.5.3 2-pin connector -T2ud-	1357
1.5.4 2-pin connector -T2ue-	1357
1.6 Rear left treble loudspeaker -R14-	1358
1.6.1 2-pin connector -T2ff-	1358
1.7 Rear left bass loudspeaker -R15-	1359
1.7.1 2-pin connector -T2fh-	1359
1.8 Rear right treble loudspeaker -R16-	1360
1.8.1 2-pin connector -T2fi-	1360
1.9 Rear right bass loudspeaker -R17-	1361
1.9.1 2-pin connector -T2fj-	1361
1.10 Front left treble loudspeaker -R20-	1362
1.10.1 2-pin connector -T2fk-	1362
1.11 Front right treble loudspeaker -R22-	1363
1.11.1 2-pin connector -T2fm-	1363
1.12 Two-way radio loudspeaker -R25-	1364
1.12.1 2-pin connector -T2p-	1364
1.13 Remote control receiver for auxiliary heater -R64-	1365-1366
1.13.1 2-pin connector -T2gj-	1365
1.13.2 6-pin connector -T6af-	1366
1.14 Front left microphone -R140-	1367
1.14.1 2-pin connector -T2fg-	1367
1.15 Reversing camera -R189-	1368
1.15.1 2-pin connector -T2gi-	1368
1.15.2 4-pin connector -T4ay-	1368
1.16 Microphone 2 on driver side -R225-	1369-1370
1.16.1 2-pin connector -T2f-	1369
1.16.2 2-pin connector -T2xp-	1370
1.17 Front camera for driver assist systems -R242-	1371
1.17.1 12-pin connector -T12h-	1371
1.18 Two-way radio loudspeaker 2 -R261-	1372
1.18.1 2-pin connector -T2kf-	1372
1.19 Two-way radio loudspeaker 3 -R262-	1372
1.19.1 2-pin connector -T2kg-	1372
1.20 Storage compartment with interface for mobile telephone -R265-	1373-1374
1.20.1 2-pin connector -T2fe-	1373
1.20.2 6-pin connector -T6ae-	1374
1.21 Electric torch -R280-	1375
1.21.1 2-pin connector -T2bt-	1375
1.22 LTE aerial 1 -R297-	1376
1.22.1 2-pin connector -T2c-	1376
1.23 LTE aerial 2 -R306-	1376
1.23.1 2-pin connector -T2fc-	1376
1.24 Loudspeaker for emergency call module -R335-	1377

1.24.1 2-pin connector -T2fn-	1377
1.25 Two-way radio loudspeaker 4 -R369-	1378
1.25.1 2-pin connector -T2kh-	1378
1.26 Roof aerial -RX5-	1379-1381
1.26.1 2-pin connector -T2tz-	1379
1.26.2 2-pin connector -T2ua-	1380
1.26.3 2-pin connector -T2ub-	1381
840 - Connector views: parts with prefix S to U - 1	1382-1609
1. Connector views: parts with prefix S to U	1382-1609
1.1 Fuse holder C -SC-	1384
1.1.1 2-pin connector -T2fo-	1384
1.2 2-pin connector -T2-	1385-1389
1.2.1 2-pin connector -T2ai-	1385
1.2.2 2-pin connector -T2br-	1386
1.2.3 2-pin connector -T2bz-	1387
1.2.4 2-pin connector -T2g-	1387
1.2.5 2-pin connector -T2ki-	1388
1.2.6 2-pin connector -T2rm-	1389
1.2.7 2-pin connector -T2sb-	1389
1.3 8-pin connector -T8-	1390-1392
1.3.1 8-pin connector -T8q-	1390
1.3.2 8-pin connector -T8r-	1391
1.3.3 8-pin connector -T8s-	1392
1.3.4 8-pin connector -T8ax-	1392
1.4 10-pin connector -T10-	1393-1394
1.4.1 10-pin connector -T10ce-	1393
1.4.2 10-pin connector -T10cg-	1394
1.5 12-pin connector -T12-	1395
1.5.1 12-pin connector -T12e-	1395
1.5.2 12-pin connector -T12f-	1396
1.6 14-pin connector -T14-	1396
1.6.1 14-pin connector -T14t-	1396
1.7 Coupling point for fuel tank -TAK-	1397-1402
1.7.1 14-pin connector -T14a-	1397
1.7.2 14-pin connector -T14l-	1398
1.7.3 14-pin connector -T14r-	1399
1.7.4 1-pin connector -T1ni-	1400
1.7.5 1-pin connector -T1mn-	1400
1.7.6 14-pin connector -T14v-	1401
1.7.7 6-pin connector -T6ao-	1402
1.7.8 6-pin connector -T6f-	1402
1.8 Coupling point on left A-pillar -TAL-	1403-1408
1.8.1 10-pin connector -T10ae-	1403
1.8.2 10-pin connector -T10dg-	1404
1.8.3 17-pin connector -T17ao-	1405
1.8.4 17-pin connector -T17c-	1406
1.8.5 17-pin connector -T17d-	1406
1.8.6 17-pin connector -T17f-	1407
1.8.7 2-pin connector -T2bk-	1408
1.8.8 2-pin connector -T2r-	1408
1.9 Coupling point on left B-pillar, bottom -TBL-	1409-1410
1.9.1 2-pin connector -T2ab-	1409
1.9.2 2-pin connector -T2az-	1410
1.9.3 2-pin connector -T2xm-	1411
1.10 Coupling point on right B-pillar, bottom -TBR-	1411-1413
1.10.1 2-pin connector -T2wr-	1412
1.10.2 17-pin connector -T17ax-	1412
1.10.3 17-pin connector -T17ay-	1413
1.10.4 2-pin connector -T2wq-	1414
1.11 Coupling point on dash panel, centre -TCPM-	1414-1415
1.11.1 32-pin connector -T32eb-	1415
1.11.2 32-pin connector -T32fe-	1415
1.12 Coupling point on left D-pillar -TDL-	1416-1427
1.12.1 10-pin connector -T10ai-	1417
1.12.2 10-pin connector -T10aj-	1417
1.12.3 10-pin connector -T10dl-	1418

1.12.4 10-pin connector -T10du-	1419
1.12.5 12-pin connector -T12b-	1420
1.12.6 12-pin connector -T12p-	1420
1.12.7 17-pin connector -T17j-	1421
1.12.8 17-pin connector -T17k-	1422
1.12.9 2-pin connector -T2ad-	1422
1.12.10 2-pin connector -T2rp-	1423
1.12.11 2-pin connector -T2rr-	1424
1.12.12 4-pin connector -T4x-	1424
1.12.13 6-pin connector -T6d-	1425
1.12.14 6-pin connector -T6bx-	1426
1.12.15 8-pin connector -T8ao-	1426
1.12.16 8-pin connector -T8g-	1427
1.12.17 4-pin connector -T4du-	1428
1.13 Coupling point on right D-pillar -TDR-	1428-1432
1.13.1 17-pin connector -T17m-	1429
1.13.2 17-pin connector -T17n-	1429
1.13.3 2-pin connector -T2as-	1430
1.13.4 2-pin connector -T2qz-	1431
1.13.5 4-pin connector -T4n-	1431
1.13.6 4-pin connector -T4s-	1432
1.14 Coupling point for two-way radio in special vehicle -TFGSF-	1433
1.14.1 6-pin connector -T6i-	1433
1.15 Coupling point 2 for two-way radio in special vehicle -TFGSF2-	1434
1.15.1 10-pin connector -T10cf-	1434
1.16 Coupling point for roof -TH-	1434-1435
1.16.1 4-pin connector -T4do-	1434
1.16.2 4-pin connector -T4dp-	1435
1.17 Coupling point for rear lid -THK-	1436-1443
1.17.1 10-pin connector -T10ak-	1436
1.17.2 10-pin connector -T10dn-	1437
1.17.3 12-pin connector -T12c-	1438
1.17.4 12-pin connector -T12d-	1438
1.17.5 17-pin connector -T17as-	1439
1.17.6 17-pin connector -T17o-	1440
1.17.7 2-pin connector -T2ah-	1440
1.17.8 2-pin connector -T2qy-	1441
1.17.9 4-pin connector -T4q-	1442
1.17.10 4-pin connector -T4t-	1442
1.17.11 8-pin connector -T8h-	1443
1.18 Coupling point for roof, left -THL-	1444-1445
1.18.1 2-pin connector -T2ak-	1444
1.18.2 2-pin connector -T2al-	1445
1.18.3 3-pin connector -T3a-	1445
1.19 Coupling point for roof, centre -THM-	1446-1447
1.19.1 4-pin connector -T4dn-	1446
1.19.2 4-pin connector -T4o-	1447
1.20 Coupling point for roof, right -THR-	1448
1.20.1 2-pin connector -T2am-	1448
1.21 Coupling point in interior -TI-	1449
1.21.1 4-pin connector -T4ef-	1449
1.22 Coupling point in interior, left -TIL-	1449-1453
1.22.1 10-pin connector -T10ah-	1450
1.22.2 10-pin connector -T10ef-	1450
1.22.3 17-pin connector -T17av-	1451
1.22.4 17-pin connector -T17i-	1452
1.22.5 6-pin connector -T6bo-	1452
1.22.6 6-pin connector -T6bq-	1453
1.23 Coupling point in interior, right -TIR-	1454-1456
1.23.1 10-pin connector -T10ao-	1454
1.23.2 10-pin connector -T10ap-	1455
1.23.3 10-pin connector -T10dj-	1455
1.23.4 10-pin connector -T10dk-	1456
1.24 Coupling point in front left seat -TISVL-	1457-1460
1.24.1 2-pin connector -T2xc-	1457
1.24.2 2-pin connector -T2xa-	1458

1.24.3 2-pin connector -T2kz-	1458
1.24.4 2-pin connector -T2xh-	1459
1.24.5 4-pin connector -T4by-	1460
1.24.6 4-pin connector -T4dd-	1460
1.25 Coupling point in front right seat -TISVR-	1461-1464
1.25.1 2-pin connector -T2la-	1461
1.25.2 2-pin connector -T2xg-	1462
1.25.3 2-pin connector -T2xe-	1463
1.25.4 2-pin connector -T2xf-	1463
1.25.5 4-pin connector -T4dh-	1464
1.25.6 4-pin connector -T4di-	1465
1.26 Coupling point in engine compartment -TM-	1465-1483
1.26.1 10-pin connector -T10at-	1466
1.26.2 10-pin connector -T10au-	1467
1.26.3 10-pin connector -T10av-	1468
1.26.4 10-pin connector -T10aw-	1469
1.26.5 10-pin connector -T10ax-	1469
1.26.6 10-pin connector -T10ay-	1470
1.26.7 10-pin connector -T10az-	1471
1.26.8 10-pin connector -T10ba-	1471
1.26.9 10-pin connector -T10bb-	1472
1.26.10 10-pin connector -T10bc-	1473
1.26.11 10-pin connector -T10bd-	1473
1.26.12 10-pin connector -T10be-	1474
1.26.13 10-pin connector -T10bf-	1475
1.26.14 10-pin connector -T10bg-	1475
1.26.15 10-pin connector -T10bh-	1476
1.26.16 10-pin connector -T10bi-	1477
1.26.17 10-pin connector -T10bj-	1477
1.26.18 10-pin connector -T10bk-	1478
1.26.19 10-pin connector -T10bl-	1479
1.26.20 10-pin connector -T10di-	1479
1.26.21 10-pin connector -T10dr-	1480
1.26.22 10-pin connector -T10ds-	1481
1.26.23 17-pin connector -T17r-	1481
1.26.24 17-pin connector -T17s-	1482
1.26.25 17-pin connector -T17t-	1483
1.26.26 17-pin connector -T17u-	1483
1.27 Coupling point in engine compartment, left -TML-	1484-1485
1.27.1 14-pin connector -T14d-	1484
1.27.2 14-pin connector -T14f-	1485
1.28 Coupling point on engine, top -TMO-	1486
1.28.1 6-pin connector -T6c-	1486
1.28.2 6-pin connector -T6cd-	1487
1.29 Coupling point 1 for engine prewiring harness -TMOVO1-	1487-1488
1.29.1 14-pin connector -T14h-	1487
1.29.2 14-pin connector -T14u-	1488
1.30 Coupling point 2 for engine prewiring harness -TMOVO2-	1489
1.30.1 14-pin connector -T14g-	1489
1.30.2 14-pin connector -T14i-	1490
1.31 Coupling point in engine compartment, right -TMR-	1490-1494
1.31.1 14-pin connector -T14j-	1491
1.31.2 14-pin connector -T14k-	1491
1.31.3 14-pin connector -T14p-	1492
1.31.4 14-pin connector -T14q-	1493
1.31.5 8-pin connector -T8an-	1493
1.31.6 8-pin connector -T8i-	1494
1.31.7 2-pin connector -T2tk-	1495
1.32 Coupling point on engine, bottom left -TMUL-	1495-1500
1.32.1 3-pin connector -T3cr-	1496
1.32.2 3-pin connector -T3v-	1496
1.32.3 4-pin connector -T4bu-	1497
1.32.4 4-pin connector -T4bw-	1498
1.32.5 4-pin connector -T4cb-	1499
1.32.6 4-pin connector -T4u-	1499
1.32.7 4-pin connector -T4v-	1500

1.32.8 4-pin connector -T4w-	1501
1.33 Coupling point on engine, bottom right -TMUR-	1501-1502
1.33.1 5-pin connector -T5ah-	1502
1.33.2 5-pin connector -T5as-	1502
1.34 Coupling point for all-wheel drive -TSAA-	1503-1504
1.34.1 8-pin connector -T8ap-	1503
1.34.2 8-pin connector -T8aq-	1504
1.34.3 8-pin connector -T8av-	1505
1.35 Coupling point for front passenger seat backrest -TSB-	1505-1506
1.35.1 6-pin connector -T6ap-	1506
1.35.2 6-pin connector -T6bn-	1506
1.36 Coupling point for driver seat backrest -TSF-	1507-1508
1.36.1 4-pin connector -T4bx-	1507
1.36.2 4-pin connector -T4cw-	1508
1.37 Coupling point 1 for special vehicle, taxi -TSFT1-	1509
1.37.1 18-pin connector -T18d-	1509
1.38 Coupling point in left seat box -TSKVL-	1510-1539
1.38.1 10-pin connector -T10af-	1511
1.38.2 10-pin connector -T10bm-	1512
1.38.3 10-pin connector -T10bn-	1513
1.38.4 10-pin connector -T10bo-	1513
1.38.5 10-pin connector -T10bp-	1514
1.38.6 10-pin connector -T10bq-	1515
1.38.7 10-pin connector -T10br-	1515
1.38.8 10-pin connector -T10bs-	1516
1.38.9 10-pin connector -T10bt-	1517
1.38.10 10-pin connector -T10bu-	1517
1.38.11 10-pin connector -T10bv-	1518
1.38.12 10-pin connector -T10bw-	1519
1.38.13 10-pin connector -T10bx-	1519
1.38.14 10-pin connector -T10by-	1520
1.38.15 10-pin connector -T10cd-	1521
1.38.16 10-pin connector -T10dv-	1521
1.38.17 10-pin connector -T10dw-	1522
1.38.18 17-pin connector -T17aa-	1523
1.38.19 17-pin connector -T17ab-	1523
1.38.20 17-pin connector -T17ac-	1524
1.38.21 17-pin connector -T17ad-	1525
1.38.22 17-pin connector -T17ae-	1525
1.38.23 17-pin connector -T17af-	1526
1.38.24 17-pin connector -T17ag-	1527
1.38.25 17-pin connector -T17at-	1527
1.38.26 17-pin connector -T17v-	1528
1.38.27 17-pin connector -T17x-	1529
1.38.28 17-pin connector -T17y-	1529
1.38.29 17-pin connector -T17z-	1530
1.38.30 2-pin connector -T2ax-	1531
1.38.31 3-pin connector -T3cu-	1531
1.38.32 3-pin connector -T3j-	1532
1.38.33 3-pin connector -T3k-	1533
1.38.34 3-pin connector -T3u-	1533
1.38.35 3-pin connector -T3w-	1534
1.38.36 3-pin connector -T3x-	1535
1.38.37 3-pin connector -T3z-	1535
1.38.38 6-pin connector -T6g-	1536
1.38.39 8-pin connector -T8at-	1537
1.38.40 8-pin connector -T8j-	1537
1.38.41 6-pin connector -T6ay-	1538
1.38.42 17-pin connector -T17az-	1539
1.38.43 17-pin connector -T17ba-	1539
1.39 Coupling point in right seat box -TSKVR-	1540-1560
1.39.1 10-pin connector -T10an-	1541
1.39.2 10-pin connector -T10as-	1542
1.39.3 10-pin connector -T10bz-	1543
1.39.4 10-pin connector -T10ca-	1543
1.39.5 10-pin connector -T10cb-	1544

1.39.6 10-pin connector -T10cc-	1545
1.39.7 10-pin connector -T10dm-	1545
1.39.8 10-pin connector -T10dx-	1546
1.39.9 10-pin connector -T10dy-	1547
1.39.10 17-pin connector -T17ah-	1547
1.39.11 17-pin connector -T17ai-	1548
1.39.12 17-pin connector -T17au-	1549
1.39.13 17-pin connector -T17p-	1549
1.39.14 17-pin connector -T17q-	1550
1.39.15 17-pin connector -T17w-	1551
1.39.16 2-pin connector -T2aj-	1551
1.39.17 2-pin connector -T2at-	1552
1.39.18 2-pin connector -T2ba-	1553
1.39.19 3-pin connector -T3ad-	1553
1.39.20 3-pin connector -T3ae-	1554
1.39.21 3-pin connector -T3al-	1555
1.39.22 3-pin connector -T3g-	1555
1.39.23 3-pin connector -T3l-	1556
1.39.24 3-pin connector -T3m-	1557
1.39.25 3-pin connector -T3n-	1557
1.39.26 3-pin connector -T3t-	1558
1.39.27 6-pin connector -T6e-	1559
1.39.28 6-pin connector -T6h-	1559
1.39.29 8-pin connector -T8au-	1560
1.39.30 8-pin connector -T8l-	1561
1.40 Coupling point for front left seat -TSVL-	1561-1562
1.40.1 2-pin connector -T2au-	1562
1.40.2 2-pin connector -T2ky-	1562
1.41 Coupling point for front right seat -TSVR-	1563-1564
1.41.1 2-pin connector -T2av-	1563
1.41.2 2-pin connector -T2hq-	1564
1.42 Coupling point for rear left door -TTHL-	1565
1.42.1 8-pin connector -T8e-	1565
1.42.2 8-pin connector -T8n-	1566
1.43 Coupling point for rear right door -TTHR-	1566-1567
1.43.1 8-pin connector -T8f-	1566
1.43.2 8-pin connector -T8o-	1567
1.44 Coupling point for front left door -TTVL-	1568-1575
1.44.1 17-pin connector -T17aj-	1568
1.44.2 17-pin connector -T17ak-	1569
1.44.3 17-pin connector -T17an-	1570
1.44.4 17-pin connector -T17ap-	1570
1.44.5 2-pin connector -T2bl-	1571
1.44.6 2-pin connector -T2bm-	1572
1.44.7 2-pin connector -T2s-	1572
1.44.8 2-pin connector -T2t-	1573
1.44.9 3-pin connector -T3am-	1574
1.44.10 3-pin connector -T3an-	1574
1.44.11 3-pin connector -T3ao-	1575
1.45 Coupling point for front right door -TTVR-	1576-1585
1.45.1 17-pin connector -T17al-	1576
1.45.2 17-pin connector -T17am-	1577
1.45.3 17-pin connector -T17aq-	1578
1.45.4 17-pin connector -T17ar-	1578
1.45.5 2-pin connector -T2af-	1579
1.45.6 2-pin connector -T2bn-	1580
1.45.7 2-pin connector -T2bo-	1580
1.45.8 2-pin connector -T2bp-	1581
1.45.9 2-pin connector -T2h-	1582
1.45.10 2-pin connector -T2w-	1582
1.45.11 2-pin connector -T2x-	1583
1.45.12 3-pin connector -T3ap-	1584
1.45.13 3-pin connector -T3aq-	1584
1.45.14 3-pin connector -T3ar-	1585
1.46 Electrical terminal strip for external use -TV65-	1586
1.46.1 8-pin connector -T8p-	1586

1.47 Cigarette lighter -U1-	1587
1.47.1 3-pin connector -T3by-	1587
1.48 12 V socket -U5-	1587
1.48.1 3-pin connector -T3ce-	1587
1.49 DC/AC converter with socket, 12 V - 230 V -U13-	1588-1589
1.49.1 10-pin connector -T10n-	1588
1.49.2 3-pin connector -T3f-	1589
1.50 Interior socket 2, 230V, 110V -U17-	1590
1.50.1 10-pin connector -T10ab-	1590
1.51 12 V socket 2 -U18-	1591
1.51.1 2-pin connector -T2i-	1591
1.52 12 V socket 3 -U19-	1592
1.52.1 3-pin connector -T3cc-	1592
1.53 12 V socket 4 -U20-	1593
1.53.1 3-pin connector -T3cd-	1593
1.54 Charging station for hand-held 2-way radio -U24-	1594
1.54.1 2-pin connector -T2bv-	1594
1.55 12 V socket 5 -U26-	1595-1596
1.55.1 3-pin connector -T3at-	1595
1.55.2 3-pin connector -T3c-	1596
1.56 Diagnostic connection -U31-	1597
1.56.1 16-pin connector -T16i-	1597
1.57 12 V socket 6 -U33-	1598
1.57.1 3-pin connector -T3ca-	1598
1.57.2 3-pin connector -T3cab-	1598
1.58 USB charging socket 1 -U37-	1599
1.58.1 2-pin connector -T2n-	1599
1.59 USB charging socket 2 -U38-	1600
1.59.1 4-pin connector -T4dt-	1600
1.60 USB connection 1 -U41-	1601-1602
1.60.1 4-pin connector -T4be-	1601
1.60.2 5-pin connector -T5z-	1602
1.61 12 V socket for special vehicles -U83-	1603
1.61.1 3-pin connector -T3as-	1603
1.62 12 V socket 3 for special vehicles -U85-	1604
1.62.1 3-pin connector -T3ed-	1604
1.63 USB charging socket 1 for special vehicles -U91-	1604
1.63.1 4-pin connector -T4g-	1604
1.64 USB charging socket for seat row 3, left -U100-	1605
1.64.1 4-pin connector -T4b-	1605
1.65 12 V socket 7 -U117-	1606
1.65.1 3-pin connector -T3el-	1606
1.66 12 V socket 8 -U118-	1607-1609
1.66.1 3-pin connector -T3d-	1607
1.66.2 3-pin connector -T3ee-	1608-1609
841 - Connector views: parts with prefix V - 1	1610-1675
1. Connector views: parts with prefix V	1610-1675
1.1 Windscreen wiper motor -V-	1612
1.1.1 4-pin connector -T4bf-	1612
1.2 Roof ventilator -V3-	1613
1.2.1 2-pin connector -T2fq-	1613
1.3 Rear window wiper motor -V12-	1613-1614
1.3.1 2-pin connector -T2o-	1613
1.3.2 2-pin connector -T2q-	1614
1.3.3 4-pin connector -T4bg-	1615
1.4 Driver seat longitudinal adjustment motor -V28-	1615
1.4.1 4-pin connector -T4cg-	1616
1.5 Driver seat front height adjustment motor -V29-	1616
1.5.1 4-pin connector -T4cn-	1616
1.6 Driver seat rear height adjustment motor -V30-	1617
1.6.1 4-pin connector -T4cl-	1617
1.7 Front passenger seat longitudinal adjustment motor -V31-	1618
1.7.1 4-pin connector -T4ch-	1618
1.8 Front passenger seat front height adjustment motor -V32-	1619
1.8.1 4-pin connector -T4co-	1619
1.9 Front passenger seat rear height adjustment motor -V33-	1620

1.9.1 4-pin connector -T4cm-	1620
1.10 Coolant pump -V36-	1621
1.10.1 2-pin connector -T2rs-	1621
1.11 Driver seat backrest adjustment motor -V45-	1622
1.11.1 4-pin connector -T4cv-	1622
1.12 Front passenger seat backrest adjustment motor -V46-	1623
1.12.1 4-pin connector -T4de-	1623
1.13 Metering pump -V54-	1624
1.13.1 2-pin connector -T2ij-	1624
1.14 Circulation pump -V55-	1625
1.14.1 2-pin connector -T2ik-	1625
1.15 Windscreen and rear window washer pump -V59-	1626
1.15.1 2-pin connector -T2fr-	1626
1.16 Rear fresh air blower -V80-	1627
1.16.1 4-pin connector -T4cp-	1627
1.17 Rear left wing door window wiper motor -V92-	1628
1.17.1 5-pin connector -T5w-	1628
1.18 Rear right wing door window wiper motor -V93-	1629
1.18.1 4-pin connector -T4bh-	1629
1.19 Driver seat lumbar support longitudinal adjustment motor -V125-	1630
1.19.1 4-pin connector -T4cx-	1630
1.20 Front passenger seat lumbar support longitudinal adjustment motor -V126-	1631
1.20.1 4-pin connector -T4dg-	1631
1.21 Driver seat lumbar support height adjustment motor -V129-	1632
1.21.1 4-pin connector -T4cy-	1632
1.22 Front passenger seat lumbar support height adjustment motor -V130-	1633
1.22.1 4-pin connector -T4df-	1633
1.23 Rear lid release motor -V139-	1634
1.23.1 2-pin connector -T2fp-	1634
1.24 Charge air cooling pump -V188-	1635
1.24.1 3-pin connector -T3ch-	1635
1.25 Rear left power latching motor -V307-	1636
1.25.1 6-pin connector -T6z-	1636
1.26 Rear right power latching motor -V308-	1637
1.26.1 6-pin connector -T6bg-	1637
1.27 Metering pump 2 -V386-	1638
1.27.1 2-pin connector -T2ii-	1638
1.28 Pump for exhaust gas recirculation cooler -V400-	1639-1640
1.28.1 3-pin connector -T3dq-	1639
1.28.2 3-pin connector -T3dr-	1640
1.29 Hydraulic pump motor -V401-	1641
1.29.1 2-pin connector -T2ae-	1641
1.30 Auxiliary pump for heating -V488-	1642
1.30.1 3-pin connector -T3cg-	1642
1.31 Front left lumbar support adjustment motor -V491-	1642
1.31.1 4-pin connector -T4ce-	1642
1.32 Front right lumbar support adjustment motor -V492-	1643
1.32.1 4-pin connector -T4cf-	1643
1.33 Front left lumbar support height adjustment motor -V554-	1644
1.33.1 4-pin connector -T4cj-	1644
1.34 Front right lumbar support height adjustment motor -V555-	1645
1.34.1 4-pin connector -T4ck-	1645
1.35 Power latching for rear lid -VX16-	1646
1.35.1 3-pin connector -T3cf-	1646
1.36 Driver door lock unit -VX21- and front passenger door lock unit -VX22-	1647-1648
1.36.1 6-pin connector -T6s-	1647
1.36.2 8-pin connector -T8u-	1648
1.37 Rear left door lock unit -VX23-	1649
1.37.1 6-pin connector -T6t-	1649
1.38 Rear right door lock unit -VX24-	1650
1.38.1 6-pin connector -T6u-	1650
1.39 Temperature flap -VX27-	1650
1.39.1 6-pin connector -T6be-	1650
1.40 Air distribution flap -VX33-	1651-1652
1.40.1 6-pin connector -T6ba-	1651
1.40.2 6-pin connector -T6bf-	1652

1.41 Front left temperature flap -VX34-	1653
1.41.1 6-pin connector -T6bc-	1653
1.42 Front right temperature flap -VX35-	1654
1.42.1 6-pin connector -T6bd-	1654
1.43 Footwell flap -VX40-	1654
1.43.1 6-pin connector -T6bu-	1654
1.44 Defroster flap -VX47-	1655
1.44.1 6-pin connector -T6bs-	1655
1.45 Air recirculation flap -VX52-	1656
1.45.1 6-pin connector -T6bb-	1656
1.46 Radiator fan -VX57-	1657-1658
1.46.1 4-pin connector -T4bi-	1657
1.46.2 4-pin connector -T4bj-	1658
1.47 Left exterior mirror -VX66-	1659-1661
1.47.1 12-pin connector -T12i-	1659
1.47.2 2-pin connector -T2gk-	1660
1.47.3 2-pin connector -T2go-	1660
1.47.4 2-pin connector -T2tm-	1661
1.48 Right exterior mirror -VX67-	1662-1664
1.48.1 12-pin connector -T12j-	1662
1.48.2 2-pin connector -T2gl-	1663
1.48.3 2-pin connector -T2jv-	1663
1.48.4 2-pin connector -T2ju-	1664
1.49 Rear lid drive unit -VX69-	1665
1.49.1 6-pin connector -T6aj-	1665
1.50 Rear lid drive unit 2 -VX77-	1666
1.50.1 6-pin connector -T6ak-	1666
1.51 Air conditioner compressor -VX81-	1666-1667
1.51.1 2-pin connector -T2ig-	1666
1.51.2 2-pin connector -T2io-	1667
1.52 Reducing agent tank -VX85-	1668
1.52.1 5-pin connector -T5af-	1668
1.52.2 5-pin connector -T5ap-	1669
1.53 Rear temperature flap -VX95-	1669
1.53.1 6-pin connector -T6ah-	1669
1.54 Fresh air and air recirculation flap -VX96-	1670
1.54.1 6-pin connector -T6bt-	1670
1.55 Rear air distribution flap -VX104-	1671
1.55.1 6-pin connector -T6ag-	1671
1.56 Rear left sliding door lock unit -VX107-	1672
1.56.1 5-pin connector -T5g-	1672
1.57 Rear right sliding door lock unit -VX108-	1673
1.57.1 5-pin connector -T5h-	1673
1.58 Rear air distribution flap 2 -VX456-	1674-1675
1.58.1 6-pin connector -T6ai-	1674-1675
842 - Connector views: parts with prefix W to Z - 1	1676-1740
1. Connector views: parts with prefix W to Z	1676-1740
1.1 Glove compartment light -W6-	1678
1.1.1 2-pin connector -T2fy-	1678
1.2 Centre interior light -W7-	1678
1.2.1 4-pin connector -T4bp-	1679
1.3 Left footwell light -W9-	1679
1.3.1 2-pin connector -T2fz-	1679
1.4 Right footwell light -W10-	1680
1.4.1 2-pin connector -T2fs-	1680
1.5 Rear left reading light -W11-	1681
1.5.1 3-pin connector -T3ds-	1681
1.6 Rear right reading light -W12-	1682
1.6.1 3-pin connector -T3dt-	1682
1.7 Front passenger side illuminated vanity mirror -W14-	1683
1.7.1 2-pin connector -T2ft-	1683
1.8 Left interior light -W16-	1684
1.8.1 4-pin connector -T4bk-	1684
1.9 Right interior light -W17-	1685
1.9.1 4-pin connector -T4bl-	1685
1.10 Left luggage compartment light -W18-	1686-1687

1.10.1 2-pin connector -T2fu-	1686
1.10.2 2-pin connector -T2rq-	1687
1.11 Driver side illuminated vanity mirror -W20-	1688
1.11.1 2-pin connector -T2fv-	1688
1.12 Reading light behind driver seat -W22-	1689
1.12.1 3-pin connector -T3au-	1689
1.13 Reading light for pull-out table -W24-	1689
1.13.1 3-pin connector -T3av-	1689
1.14 Right luggage compartment light -W35-	1690
1.14.1 2-pin connector -T2fw-	1690
1.15 Left centre reading light -W39-	1691
1.15.1 3-pin connector -T3ci-	1691
1.16 Right centre reading light -W40-	1692
1.16.1 3-pin connector -T3cj-	1692
1.17 Rear interior light -W43-	1693
1.17.1 4-pin connector -T4bm-	1693
1.18 Rear left footwell light -W45-	1694
1.18.1 2-pin connector -T2rc-	1694
1.19 Rear right footwell light -W46-	1695
1.19.1 2-pin connector -T2rd-	1695
1.20 Rear left interior light -W47-	1696
1.20.1 4-pin connector -T4bn-	1696
1.21 Rear right interior light -W48-	1697
1.21.1 4-pin connector -T4bo-	1697
1.22 Rear lid light -W51-	1698
1.22.1 3-pin connector -T3ay-	1698
1.23 Right step light -W54-	1699-1701
1.23.1 2-pin connector -T2fx-	1699-1701
1.24 Step light -W55-	1702-1704
1.24.1 2-pin connector -T2xn-	1702-1704
1.25 Kitchenette light 1 -W57-	1705
1.25.1 2-pin connector -T2rz-	1705
1.26 Kitchenette light 2 -W58-	1706
1.26.1 2-pin connector -T2rw-	1706
1.27 Kitchenette light 3 -W59-	1707
1.27.1 2-pin connector -T2rx-	1707
1.28 Surround lighting 1 in rear lid -W61-	1708-1709
1.28.1 2-pin connector -T2rk-	1708-1709
1.29 Surround lighting 2 in rear lid -W62-	1710-1711
1.29.1 2-pin connector -T2rl-	1710-1711
1.30 Interior light -W64-	1712
1.30.1 2-pin connector -T2rh-	1712
1.31 Front left reading light -W65-	1713
1.31.1 2-pin connector -T2ri-	1713
1.32 Front right reading light -W66-	1714
1.32.1 2-pin connector -T2rj-	1714
1.33 Rear driver side entry light -W83-	1715
1.33.1 3-pin connector -T3cq-	1715
1.34 Rear passenger side entry light -W84-	1716
1.34.1 3-pin connector -T3cp-	1716
1.35 Left reading light for seat row 3 -W94-	1717
1.35.1 3-pin connector -T3aw-	1717
1.36 Right reading light for seat row 3 -W95-	1718
1.36.1 3-pin connector -T3ax-	1718
1.37 Rear lid light 2 -W101-	1719
1.37.1 3-pin connector -T3h-	1719
1.38 Cupboard light -W120-	1720
1.38.1 2-pin connector -T2rn-	1720
1.39 Kitchenette light 4 -W121-	1721
1.39.1 2-pin connector -T2ry-	1721
1.40 Kitchen background lighting -W122-	1722
1.40.1 2-pin connector -T2sj-	1722
1.41 Front interior light -WX1-	1723
1.41.1 6-pin connector -T6al-	1723
1.42 Rear interior light -WX2-	1724
1.42.1 3-pin connector -T3co-	1724

1.43 Rear interior light 2 -WX4-	1725
1.43.1 3-pin connector -T3dv-	1725
1.44 Rear interior light 3 -WX5-	1726
1.44.1 3-pin connector -T3du-	1726
1.45 Rear interior light 4 -WX6-	1727
1.45.1 5-pin connector -T5e-	1727
1.46 Number plate light -X-	1728
1.46.1 2-pin connector -T2ga-	1728
1.47 Left number plate light -X4-	1729
1.47.1 2-pin connector -T2gb-	1729
1.48 Right number plate light -X5-	1730
1.48.1 2-pin connector -T2gc-	1730
1.49 Automatic anti-dazzle interior mirror -Y7-	1731
1.49.1 8-pin connector -T8ah-	1731
1.50 Heated windscreen -Z2-	1732-1734
1.50.1 1-pin connector -T1vn-	1732
1.50.2 1-pin connector -T1wm-	1733
1.50.3 1-pin connector -T1wu-	1734
1.50.4 1-pin connector -T1xa-	1734
1.51 Left washer jet heater element -Z20-	1735
1.51.1 2-pin connector -T2gd-	1735
1.52 Right washer jet heater element -Z21-	1736
1.52.1 2-pin connector -T2ge-	1736
1.53 Windscreen heater for lane departure warning -Z67-	1737
1.53.1 2-pin connector -T2gf-	1737
1.54 Heater for reducing agent line (heater circuit 2) -Z104-	1738-1739
1.54.1 2-pin connector -T2im-	1738
1.54.2 2-pin connector -T2uu-	1739
1.55 Heater 2 for reducing agent tank (heater circuit 3) -Z167-	1740
1.55.1 2-pin connector -T2uv-	1740