



Contents

00 - Technical data	1
1 Repair notes	1
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
91 - Radio, telephone, navigation	2
1 Fitting locations	2
1.1 Overview of fitting locations – components/control units in front section of vehicle	2
1.2 Overview of fitting locations – components/control units in middle section of vehicle	2
1.3 Overview of fitting locations – components/control units in rear section of vehicle	4
2 Components/control units	6
2.1 Removing and installing display unit for front information display and operating unit control unit J685	6
2.2 Removing and installing control unit 1 for information electronics J794	7
2.3 Removing and installing rear bass loudspeakers R15/R17	8
2.4 Removing and installing front bass loudspeakers [R21]/[R23]	9
2.5 Removing and installing front treble loudspeakers [R20]/[R22]	10
2.6 Removing and installing front mid-range loudspeaker [R103]/[R104]	11
2.7 Removing and installing effect loudspeakers [R209]/[R210]	11
2.8 Removing and installing subwoofer R211	12
2.9 Removing and installing digital sound package amplifier R184	13
2.10 Removing and installing centre loudspeaker R208	14
2.11 Removing and installing LTE aerial 1 R297	15
2.12 Removing and installing internet access control unit J666	16
2.13 Removing and installing aerial module	16
2.14 Removing and installing telephone bracket R126	17
2.15 Removing and installing two-way signal amplifier for mobile telephone/data services J984 ..	18
2.16 Removing and installing multifunction buttons in steering wheel [E440]/[E441]	18
2.17 Removing and installing USB connection 1 U41	20
2.18 Removing and installing USB charging socket	21
2.19 Removing and installing emergency call module control unit and communication unit J949 ..	22
2.20 Removing and installing emergency battery, telematics A16	23
2.21 Removing and installing loudspeaker for emergency call module R335	24
2.22 Removing and installing LTE aerial 2 R306	24
3 Multifunction steering wheel	26
3.1 Assembly overview – multifunction steering wheel	26