



Contents

00 - Technical data	1
1 Electrical components	1
1.1 Access to diagnoses	1
68 - Interior equipment	2
1 Safety information and repair notes	2
1.1 Safety information	2
1.2 Repair instructions	2
2 Compartments/covers	3
2.1 Assembly overview - dash panel cover (driver side)	3
2.2 Assembly overview - steering column trim	3
2.3 Assembly overview - glove compartment	4
2.4 Removing and installing dash panel cover on driver side	6
2.5 Removing and installing upper steering column trim	7
2.6 Removing and installing lower steering column trim	8
2.7 Removing and installing glove compartment	9
2.8 Removing and installing glove compartment opener	11
2.9 Removing and installing glove compartment cover	12
2.10 Removing and installing restrictor in glove compartment	13
2.11 Glove compartment, service position	14
2.12 Removing and installing footwell cover (driver side)	14
2.13 Removing and installing footwell cover on front passenger side	15
2.14 Removing and installing cover for driver assist systems	15
3 Equipment	17
3.1 Assembly overview – net partition	17
3.2 Assembly overview – sun visors	17
3.3 Assembly overview - multifunction table	18
3.4 Assembly overview – bed frame/rack	20
3.5 Removing and installing mounting for net partition	21
3.6 Removing and installing net partition bracket	22
3.7 Removing and installing sun visor	23
3.8 Removing and installing sun visor centre mount	25
3.9 Removing and installing roof grab handle	25
3.10 Removing and installing grab handle bracket	26
3.11 Removing and installing multifunction table	27
3.12 Repairing multifunction table	27
3.13 Removing and installing bed frame/rack	34
3.14 Repairing bed frame	34
4 Centre console	37
4.1 Assembly overview - centre console	37
4.2 Removing and installing front centre console storage compartment	38
4.3 Removing and installing centre console	38
5 Front centre armrest	40
5.1 Assembly overview ? front centre armrest	40
5.2 Removing and installing front centre armrest	40
6 Interior mirror	42
6.1 Assembly overview – interior mirror	42
6.2 Removing and installing interior mirror	42
69 - Passenger protection	45
1 Safety information and repair notes	45
1.1 Safety information	45



1.2	Repair instructions	45
2	Seat belts	46
2.1	Assembly overview – front three-point seat belt	46
2.2	Assembly overview – rear outer three-point seat belt	48
2.3	Assembly overview – rear centre three-point seat belt	49
2.4	Assembly overview – front belt buckle	50
2.5	Assembly overview – rear belt buckle	51
2.6	Removing and installing front three-point seat belt [NX10]/[NX11]	53
2.7	Removing and installing rear three-point seat belt	56
2.8	Removing and installing front belt guide	60
2.9	Removing and installing belt height adjuster	61
2.10	Removing and installing front belt buckle	62
2.11	Removing and installing rear belt buckle	63
3	Airbag control unit	65
3.1	Assembly overview – airbag control unit	65
3.2	Removing and installing airbag control unit [J234]	65
4	Front airbag, driver side	68
4.1	Assembly overview – front airbag, driver side	68
4.2	Removing and installing airbag unit with airbag igniter on driver side [N95]	68
4.3	Renewing connector on airbag	71
5	Front passenger airbag	73
5.1	Assembly overview – front passenger airbag	73
5.2	Removing and installing front passenger airbag unit with igniter	73
5.3	Removing and installing key-operated switch to deactivate airbag on front passenger side [E224]	75
6	Side airbags	77
6.1	Assembly overview ? front side airbag, outer side	77
6.2	Assembly overview - front inner side airbag	77
6.3	Removing and installing front side airbag, outer side	78
6.4	Removing and installing front inner side airbag	80
7	Curtain airbags	83
7.1	Assembly overview – curtain airbag	83
7.2	Removing and installing curtain airbag with igniter	83
8	Airbag crash sensors	88
8.1	Assembly overview - crash sensors for airbags	88
8.2	Removing and installing crash sensor for front airbag [G190]	90
8.3	Removing and installing front side airbag crash sensor [G179/G180]	91
8.4	Removing and installing rear side airbag crash sensor [G256/G257]	93
8.5	Removing and installing crash sensor for side airbag in B-pillar [G1101/G1102]	94
9	Seat occupied recognition	97
9.1	Removing and installing front seat occupied sensor [G1067]/[G128]	97
9.2	Removing and installing battery in control unit for wireless connection of seat occupied sensors	97
9.3	Removing and installing rear seat occupied sensor [G1116], [G1117], [G1118], [G1119], [G1120]	98
9.4	Removing and installing control unit for wireless connection of seat occupied sensors	100
70	Trim, insulation	102
1	Safety information and repair notes	102
1.1	Safety information	102
1.2	Repair instructions	102
2	Front door trims	103
2.1	Assembly overview – front door trim	103
2.2	Removing and installing trim	104
2.3	Removing and installing front door trim	104



2.4	Removing and installing mirror cover trim	107
2.5	Removing and installing button/switch trim	107
3	Rear door trims	109
3.1	Assembly overview – rear door trim	109
3.2	Removing and installing trim	109
3.3	Removing and installing interior door handle	110
3.4	Removing and installing rear door trim	111
3.5	Removing and installing window frame trim	112
4	Dash panel	114
4.1	Assembly overview - dash panel	114
4.2	Removing and installing dash panel end cover	116
4.3	Removing and installing dash panel trim	118
4.4	Removing and installing cover for MMI screen	119
4.5	Removing and installing loudspeaker trim	120
4.6	Removing and installing dash panel	120
4.7	Removing and installing cover for dash panel/head-up display	124
4.8	Removing and installing loudspeaker mounting	124
4.9	Removing and installing outer dash panel vents	125
4.10	Removing and installing trim for dash panel insert	126
4.11	Removing and installing centre vent	127
4.12	Removing and installing side defroster vent	128
4.13	Removing and installing centre dash panel cover	128
4.14	Removing and installing dash panel storage compartment	130
5	Central tube for dash panel	132
5.1	Assembly overview – dash panel cross member	132
5.2	Removing and installing dash panel cross member	133
5.3	Removing and installing crash bar	137
6	Interior trims	138
6.1	Assembly overview – A-pillar trim	138
6.2	Assembly overview – B-pillar trim	138
6.3	Assembly overview – C-pillar trim	139
6.4	Assembly overview – side trim	140
6.5	Assembly overview – foot rest and floor covering	142
6.6	Removing and installing front sill panel moulding	144
6.7	Removing and installing rear sill panel moulding	146
6.8	Removing and installing upper A-pillar trim	147
6.9	Removing and installing lower A-pillar trim	149
6.10	Removing and installing A-pillar gap cover	150
6.11	Removing and installing upper B-pillar trim	150
6.12	Removing and installing lower B-pillar trim	154
6.13	Removing and installing C-pillar trim	156
6.14	Removing and installing D-pillar trim	157
6.15	Removing and installing side trim	158
6.16	Removing and installing floor covering	161
6.17	Removing and installing foot rest	163
7	Luggage compartment trims	165
7.1	Assembly overview – lower rear lid trim	165
7.2	Removing and installing lower rear lid trim	165
7.3	Removing and installing lock carrier trim	166
7.4	Removing and installing fastening rings	167
8	Roof trims	169
8.1	Assembly overview – moulded headliner	169
8.2	Removing and installing roof end strip	172
8.3	Removing and installing moulded headliner	173



72 - Seat frames	189
1 Safety information and repair notes	189
1.1 Safety information	189
1.2 Repair instructions	189
2 Front seats	190
2.1 Assembly overview – front seat	190
2.2 Assembly overview – front backrest	194
2.3 Assembly overview – seat pan	196
2.4 Assembly overview – head restraint	199
2.5 Assembly overview ? seat height adjustment	200
2.6 Assembly overview - lumbar support	201
2.7 Assembly overview - seat depth adjuster	202
2.8 Assembly overview ? seat rake adjustment	203
2.9 Assembly overview – folding table	204
2.10 Assembly overview – fire extinguisher	205
2.11 Removing and installing front seat	206
2.12 Removing and installing seat height adjustment handle	211
2.13 Removing and installing seat rake adjustment motor [V243]/[V244]	211
2.14 Removing and installing seat height adjuster	212
2.15 Removing and installing front backrest	214
2.16 Removing and installing head restraint	216
2.17 Removing and installing head restraint guide	217
2.18 Removing and installing lumbar support adjustment switch [E176]/[E177]	217
2.19 Removing and installing backrest adjuster	218
2.20 Removing and installing backrest cover panel	219
2.21 Removing and installing lumbar support adjustment motor V125/V126/V129/V130	220
2.22 Removing and installing seat depth adjuster	221
2.23 Removing and installing seat trim bracket	224
2.24 Removing and installing seat adjustment control unit	224
2.25 Removing and installing seat adjustment operating unit [E470]/[E471]	225
2.26 Removing and installing operating unit for memory settings [E464]/[E465]	226
2.27 Removing and installing seat trim	226
2.28 Removing and installing inner seat trim	227
2.29 Removing and installing outer seat trim	228
2.30 Removing and installing seat longitudinal adjustment motor [V28]/[V31]	229
2.31 Removing and installing fire extinguisher holder	230
2.32 Removing and installing folding table	231
3 Rear seats	232
3.1 Assembly overview – individual seats	232
3.2 Assembly overview - locking mechanism	235
3.3 Assembly overview - head restraint and head restraint guide	236
3.4 Assembly overview - rear seat backrest	237
3.5 Assembly overview – seat rails	239
3.6 Removing and installing individual seats	241
3.7 Removing and installing head restraint	242
3.8 Removing and installing head restraint guide	242
3.9 Removing and installing trim for locking mechanism	243
3.10 Removing and installing locking mechanism for rear seat backrest, holder	243
3.11 Removing and installing centre armrest	244
3.12 Removing and installing back panel trim	246
3.13 Removing and installing seat trim	250
3.14 Removing and installing seat rails	254
74 - Seat - padding, covers	261
1 Safety information and repair notes	261



1.1	Safety information	261
1.2	Repair instructions	261
2	Front seat covers and padding	262
2.1	Assembly overview – seat pan cover and padding	262
2.2	Assembly overview – backrest cover and padding	262
2.3	Assembly overview – seat heating element	263
2.4	Assembly overview – backrest heating element	264
2.5	Removing and installing seat pan cover and padding	265
2.6	Separating seat pan cover from seat pan padding	267
2.7	Separating backrest cover from backrest padding	268
2.8	Removing and installing seat heating element [ZX11]/[ZX13]	270
2.9	Removing and installing backrest heating element [Z116]/[Z117]	272
3	Rear seat covers and padding	274
3.1	Assembly overview - cover and padding	274
3.2	Assembly overview – seat heating element	274
3.3	Assembly overview – backrest heating element	275
3.4	Removing and installing cover and padding of rear seat pan	276
3.5	Removing and installing cover and padding of rear seat backrest	277
3.6	Separating cover and padding of rear seat pan	278
3.7	Separating cover and padding for rear seat backrest	279
3.8	Removing and installing seat heating element	280
3.9	Removing and installing backrest heating element	282