



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in the vicinity of high-voltage components	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working on vehicles with a start/stop system	2
1.4 Safety precautions when using testing and measuring instruments during a road test	2
1.5 Safety precautions when working on the cooling system	3
2 Repair notes	4
2.1 General repair notes	4
2.2 Contact corrosion	4
2.3 Routing and attachment of lines	4
2.4 Bolts and nuts	5
2.5 Bonding surfaces for self-adhesive components	5
50 - Body - front	6
1 Lock carrier	6
1.1 Assembly overview – lock carrier	6
1.2 Removing and installing lock carrier support	8
1.3 Removing and installing lock carrier	10
1.4 Removing and installing subframe cross brace	13
1.5 Setting service position and returning to normal position	14
2 Wing	18
2.1 Assembly overview – wing	18
2.2 Removing and installing wing	18
2.3 Removing and installing wing bracket	20
2.4 Removing and installing front cover for wing	21
2.5 Removing and installing closure plate	21
3 Bulkhead	23
3.1 Assembly overview – bulkhead	23
3.2 Assembly overview – plenum chamber cover	23
3.3 Removing and installing bulkhead	24
3.4 Removing and installing plenum chamber cover	25
3.5 Removing and installing side plenum chamber cover	26
55 - Bonnet, rear lid	28
1 Bonnet	28
1.1 Assembly overview – bonnet	28
1.2 Assembly overview – Bowden cable	29
1.3 Removing and installing bonnet	30
1.4 Adjusting bonnet	31
1.5 Adjusting hinges	32
1.6 Adjusting striker pin	33
1.7 Setting adjusting buffers	34
1.8 Adjusting bonnet lock	34
1.9 Removing and installing rear lid lock	35
1.10 Removing and installing bonnet lock release lever	36
1.11 Removing and installing striker pin	37
1.12 Removing and installing hinge	37
1.13 Removing and installing insulation	38
1.14 Removing and installing gas strut	38
1.15 Releasing gas from gas strut	39
1.16 Removing and installing Bowden cable	40



2	Rear lid	43
2.1	Assembly overview – rear lid	43
2.2	Assembly overview – electrically operated rear lid	45
2.3	Removing and installing rear lid	46
2.4	Adjusting rear lid	48
2.5	Removing and installing rear lid lock	50
2.6	Adjusting striker pin	51
2.7	Removing and installing rear lid lock with power latching system	51
2.8	Removing and installing actuating mechanism	52
2.9	Removing and installing hinge	53
2.10	Removing and installing striker pin	54
2.11	Removing and installing rear lid seal	55
2.12	Removing and installing gas strut	56
2.13	Preparing gas strut for disposal	57
2.14	Removing and installing motor for rear lid V444/V445	58
2.15	Removing and installing mounting for drive unit	60
2.16	Removing and installing rear lid control unit J605	61
2.17	Removing and installing bracket for rear lid control unit J605	61
2.18	Removing and installing rear lid power opening sender G750/G760	62
2.19	Removing and installing power latching for rear lid VX16	62
2.20	Removing and installing Bowden cable for power latching system	63
2.21	Removing and installing rear lid power opening control unit J938	65
2.22	Removing and installing adjusting buffer	66
3	Tank flap unit	68
3.1	Assembly overview – tank flap unit	68
3.2	Removing and installing tank flap unit	68
3.3	Removing and installing fuel tank flap	69
4	Charging flap unit	70
4.1	Assembly overview – charging flap unit	70
4.2	Removing and installing charging flap unit	70
4.3	Removing and installing charging flap	71
4.4	Removing and installing LED module for charging socket 1 L263	72
57	Front doors, door components, central locking	73
1	Door	73
1.1	Assembly overview – door	73
1.2	Assembly overview - door seals	74
1.3	Removing and installing inner door seal	75
1.4	Removing and installing outer door seal	76
1.5	Removing and installing door	78
1.6	Adjusting door	80
1.7	Adjusting striker pin	81
1.8	Removing and installing door hinge	82
1.9	Removing and installing door arrester	84
2	Door components	86
2.1	Assembly overview – window regulator	86
2.2	Assembly overview - door handle and door lock	87
2.3	Assembly overview - window guides and window slot seals	88
2.4	Removing and installing driver side window regulator motor V147/front passenger side window regulator motor V148	89
2.5	Removing and installing window regulator	90
2.6	Removing and installing inner door cover	92
2.7	Removing and installing striker pin	93
2.8	Removing and installing door handle	94
2.9	Removing and installing mounting bracket	95



2.10	Removing and installing driver door lock unit VX21/front passenger door lock unit VX22	97
2.11	Removing and installing window channel	98
2.12	Removing and installing window slot inner seal	99
2.13	Removing and installing outer window slot seal	100
2.14	Removing and installing lock cylinder	101
2.15	Removing and installing operating cable for exterior door handle	101
2.16	Removing and installing operating cable for interior door handle	102
3	Central locking	103
3.1	Removing and installing driver door control unit J386 and front passenger door control unit J387	103
3.2	Removing and installing tank filler flap locking motor V155	104
3.3	Removing and installing ignition key battery	104
3.4	Removing and installing actuator for high-voltage charging flap lock 1 F496	104
58	Rear doors, door components	105
1	Sliding door	105
1.1	Assembly overview – sliding door	105
1.2	Assembly overview - door seals	106
1.3	Assembly overview - attachments	107
1.4	Assembly overview - door components	109
1.5	Assembly overview - door handle and door lock	111
1.6	Removing and installing sliding door	112
1.7	Adjusting sliding door	114
1.8	Removing and installing closure plate	118
1.9	Removing and installing inner door seal	118
1.10	Removing and installing sliding door seal	119
1.11	Removing and installing door arrester	123
1.12	Removing and installing guide rail	123
1.13	Removing and installing guide rail cover	125
1.14	Removing and installing lower roller guide	125
1.15	Removing and installing centre roller guide	126
1.16	Removing and installing upper roller guide	127
1.17	Removing and installing door lock	128
1.18	Removing and installing striker pin	128
1.19	Removing and installing catch plate	129
1.20	Removing and installing arrester	130
1.21	Removing and installing locking pin	131
1.22	Removing and installing door handle	131
1.23	Removing and installing mounting bracket	134
1.24	Removing and installing operating cable for exterior door handle	134
1.25	Removing and installing operating cable for interior door handle	135
1.26	Removing and installing sliding door control unit	136
1.27	Removing and installing sliding door opening motor V293	137
1.28	Removing and installing power latching motor	137
1.29	Removing and installing lock unit with remote control	138
1.30	Resetting lock unit with remote control after crash	140
60	Sunroof	142
1	Sliding sunroof	142
1.1	Assembly overview - glass panel	142
1.2	Removing and installing front glass panel	143
1.3	Removing and installing rear glass panel	148
63	Bumpers	153
1	Bumper, front	153
1.1	Assembly overview – bumper cover	153



1.2	Assembly overview – bumper carrier	154
1.3	Assembly overview - attachments	155
1.4	Removing and installing bumper cover	156
1.5	Removing and installing bumper carrier	158
1.6	Installing holder for parking aid sender	159
1.7	Installing holder for park assist steering sender	161
1.8	Removing and installing bumper cover mounting	164
1.9	Removing and installing centre air intake grille	164
1.10	Removing and installing radar sensor cover	166
1.11	Removing and installing towing eye cap	166
1.12	Removing and installing spoiler strip	166
1.13	Removing and installing air duct	167
2	Bumper, rear	170
2.1	Assembly overview – bumper cover	170
2.2	Assembly overview – bumper carrier	171
2.3	Assembly overview - attachments	172
2.4	Removing and installing bumper cover	173
2.5	Removing and installing bumper carrier	175
2.6	Removing and installing reflector	175
2.7	Repairing bumper cover	176
2.8	Installing holder for parking aid sender	178
2.9	Installing holder for park assist steering sender	180
2.10	Removing and installing forced ventilation for passenger compartment	182
2.11	Checking forced ventilation for passenger compartment	182
2.12	Removing and installing bumper cover mounting	183
2.13	Removing and installing towing eye cap	185
64	- Glazing	186
1	Repair notes	186
1.1	Minimum drying times for bonded windows	186
1.2	Installation instructions for bonded windows	186
1.3	Preparing old undamaged windows for installing	189
1.4	Preparing new windows for installation	190
1.5	Preparing body flange for installing	191
1.6	Cleaning off excess adhesive	192
2	Windscreen	193
2.1	Assembly overview – windscreen	193
2.2	Removing and installing windscreen	193
2.3	Removing broken windscreen	198
3	Rear windscreen	199
3.1	Assembly overview – rear window	199
3.2	Removing and installing rear window	199
3.3	Removing broken rear window	203
4	Side windows	206
4.1	Assembly overview - front side window	206
4.2	Assembly overview - rear side window	206
4.3	Removing and installing front side window	207
4.4	Removing and installing rear side window	210
4.5	Removing damaged rear side window	212
5	Door windows	213
5.1	Assembly overview - front door window	213
5.2	Assembly overview - rear door window	213
5.3	Removing and installing front door window	214
5.4	Removing and installing rear door window	215
5.5	Removing and installing sliding window	218



66 - Exterior equipment	219
1 Radiator grille and front trim	219
1.1 Assembly overview – radiator grille	219
1.2 Removing and installing radiator grille	220
1.3 Removing and installing front trim	221
2 Spoiler	222
2.1 Assembly overview - spoilers	222
2.2 Removing and installing spoiler trim	222
2.3 Removing and installing side spoiler	223
3 Mouldings, trims, extensions	226
3.1 Assembly overview - trim strips	226
3.2 Assembly overview - trim panel for B-pillar	226
3.3 Removing and installing trim panel for B-pillar on door	227
4 Noise insulation	229
4.1 Assembly overview - noise insulation	229
4.2 Removing and installing noise insulation	229
5 Underbody cladding	232
5.1 Assembly overview – underbody cladding	232
5.2 Removing and installing underbody cladding, centre	244
5.3 Removing and installing underbody cladding, rear centre	246
5.4 Removing and installing rear underbody cladding	249
5.5 Removing and installing skid plate for high-voltage battery	252
6 Exterior mirror	253
6.1 Assembly overview – exterior mirror	253
6.2 Removing and installing driver side exterior mirror VX4/passenger side exterior mirror VX5	255
6.3 Removing and installing heated exterior mirror on driver side Z4/heated exterior mirror on passenger side Z5	255
6.4 Removing and installing driver side mirror adjustment motor V149/front passenger side mirror adjustment motor V150	257
6.5 Removing and installing upper mirror cover	257
6.6 Removing and installing lower mirror cover	258
7 Wheel housing liner	259
7.1 Assembly overview – front wheel housing liner	259
7.2 Assembly overview – rear wheel housing liner	259
7.3 Removing and installing front wheel housing liner	260
7.4 Removing and installing rear wheel housing liner	261
8 Lettering and badges	263
8.1 Assembly overview – lettering and badges	263
8.2 Dimensions - lettering and badges on rear	264
8.3 General notes on renewing lettering and badges	267
8.4 Removing and installing front badges	269
8.5 Removing and installing badges at rear	269
9 Towing bracket	271
9.1 Assembly overview – towing bracket	271
9.2 Removing and installing towing bracket	271
9.3 Removing and installing hinged tow attachment ball head motor	272
10 Spare wheel bracket	273
10.1 Assembly overview - spare wheel bracket	273
10.2 Removing and installing spare wheel bracket	273
11 Mudflap	275
11.1 Assembly overview – mudflap	275
11.2 Removing and installing mudflap	276



12	Heat shields	279
12.1	Overview of fitting locations - heat shields	279
12.2	Removing and installing front heat shield	280
12.3	Removing and installing centre heat shield	281
12.4	Removing and installing rear heat shield	282