



Contents

52 - General information, Body	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Basic information on body repairs	2
2.1 General notes on body repairs	2
2.2 Original joint	2
2.3 New parts	2
2.4 Separating cuts	3
2.5 Body - subparts and part sections	3
2.6 Removing remaining material	3
2.7 Replacement joining techniques in repair work - steel	3
2.8 Replacement joining techniques in repair work - aluminium	4
3 Explanation of symbols	5
3.1 Symbols relating to procedures for separating components	5
3.2 Symbols relating to welding, brazing and soldering	5
3.3 Symbols for rivets	5
3.4 Symbols relating to preparations	6
3.5 Symbols for corrosion protection	6
4 Overview of materials used	7
4.1 Galvanised body parts	7
4.2 Deep-drawn steel	7
4.3 High-strength and ultra-high-strength steel	7
4.4 Ultra-high-strength, hot-formed steel panels	8
4.5 Aluminium	8
4.6 Multi-material mix	8
5 Joining and separating procedures	9
5.1 Drilling	9
5.2 Saw-cutting	9
5.3 Grinding	9
5.4 Milling	9
5.5 Separating bonded joints	10
5.6 Pulling out rivets which are only accessible from one side	10
5.7 Resistance spot welding	10
5.8 Plug welding, shielding gas	11
5.9 Continuous seam and stepped seam welding - shielding gas	12
5.10 MIG brazing	12
5.11 Aluminium welding	12
5.12 Solid rivet	13
5.13 Pop rivet	14
5.14 Incorrect riveting	15
5.15 Punched rivets	16
5.16 Overview of riveting attachments	17
5.17 Flow-drill screws	17
5.18 Making a flow-drill screw connection, pre-drilled hole in upper part	18
5.19 Making a flow-drill screw connection, no pre-drilled hole in upper part	18
5.20 Making a flow-drill screw connection, exchanging upper and lower parts	18
5.21 Renewing friction-element-welded joints	19
6 Surface repair	20
6.1 Dent removal techniques for steel panels	20
6.2 Dent removal by pushing - no damage to paintwork structure	20
6.3 Dent removal from outside by pulling	20



6.4	Dent removal techniques for aluminium panels	20
6.5	Definition of true-to-contour surface and handover to paint shop	21
6.6	Thread repairs	21
7	Corrosion protection	22
7.1	Corrosion protection for attachments and welded components	22
7.2	Cavity sealing	22
8	Noise insulation	23
8.1	Removing and installing insulation for inner side of outer door panel	23
9	Plastic repairs	25
9.1	Introduction	25
9.2	Distinction of types of plastic	25
9.3	Processing instructions - genuine products	30
9.4	Preparing plastic repair	32
9.5	Repairing deformations	34
9.6	Bonding on plastic attachments	36
9.7	Welding plastic attachments	42
10	General notes – windows	51
10.1	Removing broken window	51
10.2	Window repair	51
11	Glass repairs	52
11.1	Introduction	52
11.2	Preparing glass repair	55
11.3	Carrying out glass repair	56
12	Using adhesives	64
12.1	General notes on the use of adhesives	64
12.2	Minimum drying times for bonded windows	65
12.3	Preparing old undamaged windows for installing	65
12.4	Preparing new windows for installation	66
12.5	Preparing body flange for installing	67
12.6	Cleaning off excess adhesive	70
12.7	Installation instructions for bonded windows	71
13	Self-adhesive components	73
13.1	Specifications for self-adhesive components	73
14	Noise	75
14.1	Overview of fitting locations – vibration damper film	75
14.2	Overview of fitting locations – noise insulation	75
14.3	Locating noises	76
14.4	Locating noises using audio recordings	78
14.5	Checklist - locating noises	80
15	Preparing for disposal	84
15.1	Preparing gas strut for disposal	84
15.2	Preparing covered gas strut for disposal	84
15.3	Preparing rear lid drive unit VX69/rear lid drive unit 2 VX77 for disposal	85
16	Leaks	87
16.1	Causes of water ingress	87
16.2	Locating water ingress	91
16.3	Checklist - locating water ingress	92