



Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of heater and air conditioning unit	1
2 General information	3
2.1 Type plates	3
3 Technical data	4
3.1 Refrigerant capacities, vehicles without hybrid drive	4
3.2 Refrigerant capacities, vehicles with hybrid drive	4
3.3 Refrigerant oil capacities, vehicles without hybrid drive	4
3.4 Refrigerant oil capacities, vehicles with hybrid drive	4
3.5 Oil distribution	5
4 Electrical components	6
4.1 Access to diagnoses	6
87 - Air conditioning system	7
1 Safety information and repair notes	7
1.1 Safety information	7
1.2 Repair instructions	7
2 Overview of fitting locations - air conditioning system	8
2.1 Overview of fitting locations – components outside passenger compartment	8
2.2 Overview of fitting locations - components in front passenger compartment	12
3 Refrigerant circuit	15
3.1 Assembly overview – refrigerant lines	15
3.2 Removing and installing pressure sender for refrigerant circuit [G805]	20
3.3 Removing and installing condenser	21
3.4 Removing and installing desiccant bag/desiccant cartridge	23
3.5 Removing and installing evacuating and charging valve (low-pressure and high-pressure sides)	25
3.6 Starting up air conditioner after charging refrigerant circuit	26
3.7 Cleaning refrigerant circuit	27
3.8 Removing and installing expansion valve	29
3.9 Removing and installing refrigerant line from air conditioner compressor to condenser	31
3.10 Removing and installing refrigerant line from evaporator to air conditioner compressor	33
3.11 Removing and installing refrigerant line from condenser to evaporator	35
3.12 Removing and installing refrigerant line to rear heater and air conditioning unit	40
3.13 Removing and installing refrigerant shut-off valve for heater and air conditioning unit [N541]	48
4 Air conditioner compressor	51
4.1 Assembly overview - air conditioner compressor	51
4.2 Detaching and attaching air conditioner compressor at bracket	55
4.3 Removing and installing air conditioner compressor	58
4.4 Checking high-pressure safety valve on air conditioner compressor	63
4.5 Removing and installing air conditioner compressor regulating valve [N280]	63
5 Control motors	65
5.1 Assembly overview – front control motors	65
5.2 Removing and installing air distribution flap control motor [VX33]	67
5.3 Removing and installing control motor for front left temperature flap [VX34]	69
5.4 Removing and installing control motor for front right temperature flap [VX35]	70
5.5 Removing and installing control motor for fresh air and air recirculation flap [VX96]	71
5.6 Removing and installing control motor for defroster flap [VX47]	73
5.7 Removing and installing air distribution flap actuator	74
5.8 Removing and installing fresh air/air recirculation, air flow flap actuator	76



5.9	Removing and installing rear temperature flap control motor VX95	77
6	Front heater and air conditioning unit	79
6.1	Assembly overview - heater and air conditioning unit	79
6.2	Assembly overview - evaporator housing	83
6.3	Removing and installing evaporator	84
6.4	Removing and installing heater and air conditioning unit	86
6.5	Removing and installing dust and pollen filter	89
6.6	Removing and installing fresh air blower [V2]	92
6.7	Removing and installing auxiliary air heater element [Z35] with auxiliary air heater control unit [J604]	95
6.8	Removing and installing fresh air blower control unit [J126]	96
6.9	Removing and installing heat exchanger	97
6.10	Removing and installing coolant pipes on heat exchanger	103
6.11	Removing and installing evaporator temperature sensor [G308]	105
6.12	Checking condensation drain	106
6.13	Removing and installing air distribution housing	106
7	Rear heater and air conditioning unit	108
7.1	Assembly overview - heater and air conditioning unit	108
7.2	Removing and installing evaporator	111
7.3	Removing and installing heater and air conditioning unit	113
7.4	Removing and installing rear fresh air blower V80	115
7.5	Removing and installing rear fresh air blower control unit J391	116
7.6	Removing and installing heat exchanger	116
7.7	Removing and installing control motors	118
8	Air duct	119
8.1	Assembly overview – air ducts and air distribution in passenger compartment	119
8.2	Removing and installing driver side footwell vents	121
8.3	Removing and installing front passenger side footwell vents	122
8.4	Removing and installing rear footwell vent	124
8.5	Removing and installing fresh air intake	124
8.6	Removing and installing air intake duct	126
8.7	Removing and installing air ducts	126
8.8	Removing and installing air duct for defroster vent	127
8.9	Removing and installing air duct for centre dash panel vent	128
8.10	Removing and installing front air duct for dash panel	128
9	Coolant circuit	131
9.1	Connection diagram - high-voltage heater	131
9.2	Assembly overview - high-voltage heater (PTC)	133
9.3	Removing and installing high-voltage heater (PTC) ZX17/high-voltage heater (PTC) control unit J848	134
9.4	Removing and installing coolant valve for high-voltage battery N688	137
9.5	Removing and installing coolant pump for high-voltage battery [V590]	138
10	Operating and display unit	140
10.1	Overview of fitting locations – operating and display unit	140
10.2	Overview - operating and display unit	140
10.3	Removing and installing front operating and display unit	141
10.4	Removing and installing rear operating and display unit [E265]	141
11	Other controlling and regulating components	143
11.1	Removing and installing air quality sensor [G238]	143
11.2	Removing and installing ambient temperature sensor [G17]	143
11.3	Removing and installing humidity sender for air conditioning system [G260]	144
11.4	Removing and installing left vent temperature sender [G150]	144
11.5	Removing and installing right vent temperature sender [G151]	145
11.6	Removing and installing footwell vent temperature sender [G192]	146
11.7	Removing and installing vehicle interior temperature sensor [G1090]	147



11.8 Removing and installing heater and air conditioning system control unit [J979] 148