



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 General safety provisions	5
1.3 Safety measures when working on vehicles with start/stop system	6
1.4 Safety precautions when using testers and measuring instruments during a road test	6
1.5 Safety precautions when tow-starting or towing	6
2 Identification	7
2.1 Gearbox identification	7
3 Repair notes	8
3.1 General information	8
3.2 Rules for cleanliness	9
3.3 General repair instructions	9
3.4 Safety functions of gearbox control unit	10
4 Technical data	12
4.1 Allocation gearbox - engine	12
4.2 Capacities	12
30 - Clutch	13
1 Clutch	13
1.1 Assembly overview - dual clutch	13
1.2 Renewing input shaft seal	13
2 Clutch mechanism	15
2.1 Removing and installing clutch engagement	15
34 - Controls, housing	18
1 Mechatronic unit	18
1.1 Assembly overview - mechatronic unit	18
1.2 Removing and installing sump	19
1.3 Removing and installing mechatronic unit	23
2 Selector mechanism	28
2.1 Assembly overview - selector mechanism	28
2.2 Manual release from position P	28
2.3 Removing and installing selector mechanism	30
2.4 Checking selector mechanism	36
2.5 Adjusting selector lever cable	38
2.6 Renewing selector shaft seal	39
3 Removing and installing gearbox	46
3.1 Removing gearbox	46
3.2 Installing gearbox	46
3.3 Specified torques for gearbox	47
4 Assembly mountings	48
4.1 Assembly overview - assembly mountings	48
5 Transporting gearbox	49
5.1 Transporting gearbox	49
6 Gear oil circuit	51
6.1 Assembly overview - gear oil circuit	51
6.2 Removing and installing gear oil cooler	51
6.3 Removing and installing gear oil filter	53
7 Gear oil	55
7.1 Assembly overview – oil drain and inspection plugs	55



7.2	Checking gear oil level	55
7.3	Draining and filling gear oil	60
7.4	Filling with gear oil after mechatronic unit has been renewed	65
8	Dismantling and assembling gearbox	69
8.1	System overview - gearbox	69
8.2	Assembly overview - gearbox	69
8.3	Removing and installing cap	70
35 - Gears, shafts		73
1	Dismantling and assembling gears and shafts	73
39 - Final drive - differential		74
1	Seals	74
1.1	Overview of fitting locations - oil seals	74
1.2	Renewing left seal	74