



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair notes</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 General information	6
3.3 General repair instructions	6
3.4 Foreign bodies in engine	7
3.5 Contact corrosion	7
3.6 Routing and attachment of lines	7
3.7 Fitting radiators and condensers	7
3.8 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing engine</b>	<b>9</b>
1.1 Removing engine	9
1.2 Supporting engine and gearbox using scissor-type assembly platform VAS 6131 B	15
1.3 Separating engine and gearbox	21
1.4 Securing engine on engine and gearbox support	22
1.5 Installing engine	24
<b>2 Assembly mountings</b>	<b>29</b>
2.1 Assembly overview – assembly mountings	29
2.2 Removing and installing engine mounting	31
2.3 Removing and installing gearbox mounting	32
2.4 Removing and installing pendulum support	33
2.5 Supporting engine in installation position	34
2.6 Adjusting assembly mountings	39
2.7 Checking adjustment of assembly mountings	41
<b>3 Engine cover panel</b>	<b>42</b>
3.1 Removing and installing engine cover	42
<b>13 - Crankshaft group</b>	<b>43</b>
<b>1 Cylinder block (pulley end)</b>	<b>43</b>
1.1 Assembly overview - poly V-belt drive	43
1.2 Removing and installing poly-V belt	45
1.3 Removing and installing tensioner for poly V-belt	47
1.4 Removing and installing vibration damper	47
1.5 Removing and installing engine support	50
1.6 Renewing crankshaft oil seal for pulley end	53
<b>2 Cylinder block, gearbox end</b>	<b>57</b>
2.1 Assembly overview - cylinder block, gearbox end	57
2.2 Removing and installing flywheel	60
2.3 Removing and installing sealing flange on gearbox side	63
<b>3 Crankshaft</b>	<b>76</b>
3.1 Renewing needle bearing in crankshaft	76
3.2 Crankshaft dimensions	78



3.3	Measuring axial clearance of crankshaft	78
<b>4</b>	<b>Pistons and conrods</b>	<b>80</b>
4.1	Assembly overview - pistons and conrods	80
4.2	Removing and installing pistons	82
4.3	Checking pistons and cylinder bores	84
4.4	Separating new conrod	86
4.5	Checking radial clearance of conrods	86
4.6	Removing and installing oil spray jets	87
4.7	Setting piston to TDC position	88
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>91</b>
<b>1</b>	<b>Cylinder head</b>	<b>91</b>
1.1	Assembly overview - cylinder head	91
1.2	Assembly overview - camshaft housing	93
1.3	Removing and installing cylinder head	96
1.4	Removing and installing camshaft housing	100
1.5	Checking compression	105
<b>2</b>	<b>Toothed belt drive</b>	<b>108</b>
2.1	Assembly overview - toothed belt cover	108
2.2	Assembly overview - toothed belt	109
2.3	Assembly overview - valve timing tool	112
2.4	Removing and installing toothed belt guard	112
2.5	Removing and installing toothed belt	113
2.6	Checking valve timing	120
2.7	Adjusting valve timing	123
2.8	Removing toothed belt from camshaft	134
<b>3</b>	<b>Valve gear</b>	<b>139</b>
3.1	Assembly overview - valve gear	139
3.2	Removing and installing camshaft oil seal	142
3.3	Removing and installing camshaft adjuster	154
3.4	Removing and installing cam actuators	166
3.5	Removing and installing inlet camshaft control valve 1 N727	168
3.6	Removing and installing exhaust camshaft control valve 1 N318	169
3.7	Removing and installing valve stem oil seals	170
3.8	Removing and installing holder for oil seal	185
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>189</b>
4.1	Checking valve guides	189
4.2	Checking valves	190
4.3	Valve dimensions	190
<b>17</b>	<b>Lubrication</b>	<b>191</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>191</b>
1.1	Assembly overview - sump/oil pump	191
1.2	Engine oil:	196
1.3	Removing and installing sump	196
1.4	Removing and installing oil pump	201
1.5	Removing and installing oil level and oil temperature sender G266	203
<b>2</b>	<b>Engine oil cooler</b>	<b>205</b>
2.1	Assembly overview - engine oil cooler	205
2.2	Removing and installing engine oil cooler	205
<b>3</b>	<b>Crankcase ventilation</b>	<b>207</b>
3.1	Assembly overview - crankcase breather system	207
3.2	Removing and installing oil separator	209
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>213</b>
4.1	Assembly overview - oil pressure switches/oil pressure control	213



4.2	Removing and installing oil pressure sender G10	213
4.3	Checking oil pressure and oil pressure switch	215
4.4	Removing and installing oil filter housing	215
4.5	Removing and installing oil pressure regulating valve N428	216
<b>19</b>	<b>- Cooling</b>	<b>218</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>218</b>
1.1	Connection diagram - coolant hoses	218
1.2	Checking cooling system for leaks	220
1.3	Draining and adding coolant	224
1.4	Checking coolant level and topping up	234
1.5	Removing and installing coolant expansion tank	235
1.6	Assembly overview – coolant expansion tank	238
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>239</b>
2.1	Assembly overview - coolant pump, thermostat	239
2.2	Assembly overview – electric coolant pump	241
2.3	Assembly overview – coolant temperature sender	241
2.4	Removing and installing electric coolant pump	242
2.5	Removing and installing coolant pump	245
2.6	Removing and installing toothed belt pulley for coolant pump	250
2.7	Removing and installing coolant temperature sender G62	254
2.8	Removing and installing radiator outlet coolant temperature sender G83	256
2.9	Removing and installing engine outlet coolant temperature sender G82	257
2.10	Removing and installing engine temperature regulation module GX33	259
2.11	Checking coolant pump	263
<b>3</b>	<b>Coolant pipes</b>	<b>269</b>
3.1	Assembly overview - coolant pipes	269
3.2	Removing and installing coolant pipes	271
<b>4</b>	<b>Radiator, radiator fan</b>	<b>280</b>
4.1	Assembly overview - radiator/radiator fan	280
4.2	Assembly overview – radiator cowl and radiator fan	282
4.3	Removing and installing radiator	284
4.4	Removing and installing water radiator for charge air cooling circuit	287
4.5	Removing and installing radiator cowl	290
4.6	Removing and installing radiator fan	291
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>294</b>
<b>1</b>	<b>Turbocharger</b>	<b>294</b>
1.1	Assembly overview - turbocharger	294
1.2	Removing and installing turbocharger	297
1.3	Removing and installing connection for turbocharger	303
1.4	Removing and installing charge pressure control module GX34	305
<b>2</b>	<b>Charge air system</b>	<b>308</b>
2.1	Assembly overview - charge air system	308
2.2	Removing and installing charge air cooler	311
2.3	Removing and installing charge pressure sender GX26	314
2.4	Checking charge air system for leaks	315
2.5	Removing and installing air intake pipe	319
2.6	Checking charge air cooler for leaks	326
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>332</b>
<b>1</b>	<b>Injection system</b>	<b>332</b>
1.1	Overview of fitting locations - injection system	332
<b>2</b>	<b>Air filter</b>	<b>340</b>
2.1	Assembly overview - air filter housing	340



2.2	Removing and installing air filter housing	342
2.3	Removing and installing air guide on lock carrier	344
2.4	Removing and installing air filter housing bracket	345
<b>3</b>	<b>Intake manifold</b>	<b>346</b>
3.1	Assembly overview – intake manifold	346
3.2	Removing and installing intake manifold	349
3.3	Removing and installing throttle valve module GX3	355
3.4	Cleaning throttle valve module GX3	357
<b>4</b>	<b>Injectors</b>	<b>359</b>
4.1	Assembly overview - fuel rail with injectors	359
4.2	Removing and installing fuel rail	361
4.3	Removing and installing injectors	362
4.4	Cleaning injectors	370
<b>5</b>	<b>Senders and sensors</b>	<b>372</b>
5.1	Removing and installing intake manifold sender GX9	372
5.2	Removing and installing fuel pressure sender G247	373
5.3	Checking fuel pressure sender G247	375
5.4	Removing and installing exhaust gas pressure sensor 1 G450	379
5.5	Removing and installing pressure differential sender for particulate filter G1037	380
<b>6</b>	<b>High-pressure pump</b>	<b>382</b>
6.1	Assembly overview – high-pressure pump	382
6.2	Removing and installing high-pressure pump	383
6.3	Removing and installing high-pressure pipe	385
<b>7</b>	<b>Lambda probe</b>	<b>387</b>
7.1	Assembly overview – lambda probe	387
7.2	Removing and installing lambda probe	388
<b>8</b>	<b>Engine/motor control unit</b>	<b>392</b>
8.1	Removing and installing engine control unit J623	392
<b>26 - Exhaust system</b>		<b>400</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>400</b>
1.1	Assembly overview – silencers	400
1.2	Removing and installing silencer	401
1.3	Separating exhaust pipes from silencers	404
1.4	Aligning exhaust system free of stress	404
1.5	Checking exhaust system for leaks	405
1.6	Installation position of clamp	405
<b>2</b>	<b>Emission control</b>	<b>407</b>
2.1	Assembly overview – emission control	407
2.2	Assembly overview – bracket and pipes for pressure differential sender for particulate filter G1037	410
2.3	Removing and installing catalytic converter	412
2.4	Removing and installing particulate filter	415
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>416</b>
3.1	Assembly overview – exhaust gas temperature regulation	416
3.2	Removing and installing parts of exhaust gas temperature regulation	417
<b>28 - Ignition system</b>		<b>420</b>
<b>1</b>	<b>Ignition system</b>	<b>420</b>
1.1	Assembly overview – ignition system	420
1.2	Removing and installing ignition coils with output stage	422
1.3	Removing and installing knock sensor 1 G61	426
1.4	Removing and installing engine speed sender G28	427
1.5	Removing and installing inlet camshaft position sender G1002	429
1.6	Removing and installing exhaust camshaft position sender G1003	430