



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 Engine/motor identification	2
2.2 Engine data	2
<b>3 Technical data</b>	<b>3</b>
3.1 Test and adjustment values	3
<b>4 Electrical components</b>	<b>7</b>
4.1 Access to diagnoses	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Safety information and repair notes</b>	<b>8</b>
1.1 Safety information	8
1.2 Repair instructions	8
<b>2 Removing and installing engine</b>	<b>9</b>
2.1 Removing motor	9
2.2 Separating engine and gearbox, dual-clutch gearbox	17
2.3 Securing engine on engine and gearbox support	19
2.4 Installing motor	22
<b>3 Assembly mountings</b>	<b>26</b>
3.1 Assembly overview – assembly mountings	26
3.2 Removing and installing engine mounting	29
3.3 Removing and installing gearbox mounting	30
3.4 Removing and installing pendulum support	32
3.5 Supporting engine in installation position	32
3.6 Checking and adjusting assembly mountings	35
<b>4 Engine cover panel</b>	<b>38</b>
4.1 Removing and installing engine cover panel	38
<b>13 - Crankshaft group</b>	<b>39</b>
<b>1 Safety information and repair notes</b>	<b>39</b>
1.1 Safety information	39
1.2 Repair instructions	39
<b>2 Cylinder block (pulley end)</b>	<b>40</b>
2.1 Assembly overview - cylinder block (pulley end)	40
2.2 Removing and installing poly-V belt	42
2.3 Removing and installing tensioner for poly V-belt	43
2.4 Removing and installing vibration damper	44
2.5 Renewing seal for vibration damper	50
2.6 Removing and installing bracket for ancillaries	52
2.7 Removing and installing engine support	54
<b>3 Cylinder block, gearbox end</b>	<b>57</b>
3.1 Assembly overview - cylinder block, gearbox end	57
3.2 Removing and installing flywheel	58
3.3 Removing and installing sealing flange on gearbox side	62
<b>4 Crankshaft</b>	<b>66</b>
4.1 Assembly overview - crankshaft	66
4.2 Allocation of main bearing shells	68
4.3 Renewing needle bearing in crankshaft	69



4.4	Measuring axial clearance of crankshaft	71
4.5	Measuring radial clearance of crankshaft	71
4.6	Removing and installing crankshaft	72
4.7	Removing and installing sender wheel	74
<b>5</b>	<b>Balancer shaft</b>	<b>76</b>
5.1	Assembly overview - balance shaft	76
5.2	Removing and installing balance shaft	76
<b>6</b>	<b>Pistons and conrods</b>	<b>85</b>
6.1	Assembly overview - pistons and conrods	85
6.2	Removing and installing pistons	86
6.3	Removing and installing oil spray jets	91
6.4	Checking pistons and cylinder bores	93
6.5	Separating new conrod	95
6.6	Checking radial clearance of conrods	96
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>98</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>98</b>
1.1	Safety information	98
1.2	Repair instructions	98
<b>2</b>	<b>Cylinder head</b>	<b>99</b>
2.1	Assembly overview - cylinder head	99
2.2	Assembly overview – vacuum pump, 2.0 l petrol engine	101
2.3	Removing and installing cylinder head	102
2.4	Removing and installing vacuum pump, 2.0 l petrol engine	110
2.5	Checking compression	111
2.6	Checking cylinder head for distortion	112
<b>3</b>	<b>Cover for timing chain</b>	<b>114</b>
3.1	Assembly overview - cover for timing chain	114
3.2	Removing and installing timing chain cover	116
<b>4</b>	<b>Chain drive</b>	<b>122</b>
4.1	Assembly overview - camshaft timing chains	122
4.2	Assembly overview - drive chain for balance shaft	123
4.3	Removing and installing camshaft timing chain	125
4.4	Removing and installing bearing saddle	135
4.5	Check timing chain	139
4.6	Removing and installing drive chain for balance shaft	140
<b>5</b>	<b>Valve gear</b>	<b>145</b>
5.1	Assembly overview – valve gear	145
5.2	Removing and installing camshaft	147
5.3	Installing ball for sliding piece	156
5.4	Removing and installing cam actuators	157
5.5	Removing and installing camshaft control valves [N205]/[N318]	158
5.6	Removing and installing valve stem oil seals	159
5.7	Removing and installing control valve	169
5.8	Checking control valve	170
<b>6</b>	<b>Inlet and exhaust valves</b>	<b>172</b>
6.1	Checking valve guides	172
6.2	Checking valves	172
<b>17</b>	<b>Lubrication</b>	<b>174</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>174</b>
1.1	Safety information	174
1.2	Repair instructions	174
<b>2</b>	<b>Sump, oil pump</b>	<b>175</b>



2.1	Assembly overview - sump/oil pump	175
2.2	Engine oil:	177
2.3	Removing and installing lower part of sump	177
2.4	Removing and installing upper part of sump	181
2.5	Removing and installing oil pump	185
2.6	Removing and installing oil level and oil temperature sender [G266]	187
<b>3</b>	<b>Engine oil cooler</b>	<b>189</b>
3.1	Assembly overview - engine oil cooler	189
3.2	Removing and installing engine oil cooler	189
<b>4</b>	<b>Crankcase ventilation</b>	<b>191</b>
4.1	Assembly overview - crankcase breather system	191
4.2	Removing and installing oil separator	192
4.3	Removing and installing crankcase pressure sensor [G1068]	193
<b>5</b>	<b>Oil filter, oil pressure switch</b>	<b>194</b>
5.1	Assembly overview - oil filter	194
5.2	Assembly overview - oil pressure switches/oil pressure control	194
5.3	Removing and installing oil pressure switch [F22]	195
5.4	Removing and installing oil pressure switch for reduced oil pressure [F378]	196
5.5	Removing and installing stage 2 oil pressure switch [F446]	197
5.6	Removing and installing oil pressure regulating valve [N428]	198
5.7	Removing and installing piston cooling jet control valve [N522]	198
5.8	Checking oil pressure	199
<b>6</b>	<b>Oil circuit</b>	<b>202</b>
6.1	Removing and installing oil return line for turbocharger	202
6.2	Removing and installing oil supply line	203
<b>19 - Cooling</b>		<b>205</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>205</b>
1.1	Safety information	205
1.2	Repair instructions	205
<b>2</b>	<b>Cooling system/coolant</b>	<b>206</b>
2.1	Assembly overview - coolant expansion tank	206
2.2	Connection diagram - coolant hoses	206
2.3	Checking cooling system for leaks	208
2.4	Checking filling quality of cooling system	211
2.5	Removing and installing coolant expansion tank	213
2.6	Draining coolant	215
2.7	Filling cooling system	217
2.8	Checking coolant level and topping up	219
<b>3</b>	<b>Coolant pump, regulation of cooling system</b>	<b>221</b>
3.1	Assembly overview - coolant pump, thermostat	221
3.2	Assembly overview - electric coolant pump	223
3.3	Assembly overview - coolant valves	224
3.4	Assembly overview - coolant temperature sender	225
3.5	Removing and installing electric coolant pump	226
3.6	Removing and installing coolant pump	228
3.7	Removing and installing toothed belt for coolant pump	229
3.8	Removing and installing actuator for engine temperature regulation [N493]	231
3.9	Removing and installing coolant temperature sender [G62]	233
3.10	Removing and installing radiator outlet coolant temperature sender [G83]	234
3.11	Removing and installing coolant valves	235
<b>4</b>	<b>Coolant pipes</b>	<b>237</b>
4.1	Assembly overview - coolant pipes	237
4.2	Removing and installing coolant pipes	239



<b>5</b>	<b>Radiator, radiator fan</b> .....	<b>243</b>
5.1	Assembly overview - radiator .....	243
5.2	Assembly overview - auxiliary radiator .....	243
5.3	Assembly overview - radiator cowl and radiator fan .....	244
5.4	Removing and installing radiator .....	245
5.5	Removing and installing auxiliary radiator .....	248
5.6	Removing and installing radiator cowl .....	249
5.7	Removing and installing radiator fan .....	252
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>254</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>254</b>
1.1	Safety information .....	254
1.2	Repair instructions .....	254
<b>2</b>	<b>Turbocharger</b> .....	<b>255</b>
2.1	Assembly overview – turbocharger .....	255
2.2	Removing and installing turbocharger .....	259
2.3	Removing and installing charge pressure control module [GX34] .....	265
<b>3</b>	<b>Charge air system</b> .....	<b>268</b>
3.1	Assembly overview – charge air system .....	268
3.2	Removing and installing charge air cooler .....	269
3.3	Removing and installing charge pressure sender [GX26] .....	270
3.4	Checking charge air system for leaks .....	271
3.5	Removing and installing air intake pipe .....	273
3.6	Removing and installing turbocharger air recirculation valve [N249] .....	275
3.7	Charge air hose connections .....	276
<b>24</b>	<b>- Mixture preparation - injection</b> .....	<b>278</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>278</b>
1.1	Safety information .....	278
1.2	Repair instructions .....	278
<b>2</b>	<b>Injection system</b> .....	<b>279</b>
2.1	Overview of fitting locations - injection system .....	279
<b>3</b>	<b>Injectors</b> .....	<b>286</b>
3.1	Assembly overview - fuel rail with injectors .....	286
3.2	Removing and installing fuel rail .....	287
3.3	Removing and installing injectors .....	288
3.4	Cleaning injectors .....	291
3.5	Renewing seals on injectors .....	292
<b>4</b>	<b>Air filter</b> .....	<b>296</b>
4.1	Assembly overview – air filter housing .....	296
4.2	Removing and installing air duct on lock carrier .....	298
4.3	Removing and installing air filter housing .....	299
<b>5</b>	<b>Intake manifold</b> .....	<b>302</b>
5.1	Assembly overview - intake manifold .....	302
5.2	Removing and installing intake manifold .....	304
5.3	Removing and installing throttle valve module [GX3] .....	307
5.4	Cleaning throttle valve module [GX3] .....	308
5.5	Removing and installing intake manifold flap valve [N316] .....	309
5.6	Checking intake manifold change-over .....	310
<b>6</b>	<b>Senders and sensors</b> .....	<b>312</b>
6.1	Removing and installing intake manifold pressure sender [GX9] .....	312
6.2	Removing and installing fuel pressure sender [G247] .....	312
6.3	Checking fuel pressure sender G247 .....	313
6.4	Removing and installing intake manifold flap potentiometer [G336] .....	315



<b>7</b>	<b>Engine/motor control unit</b> .....	<b>317</b>
7.1	Assembly overview - engine/motor control unit .....	317
7.2	Removing and installing motor control unit [J623] .....	317
<b>8</b>	<b>High-pressure pump</b> .....	<b>322</b>
8.1	Assembly overview - high-pressure pump .....	322
8.2	Removing and installing high-pressure pump .....	323
8.3	Removing and installing high-pressure pipe .....	325
<b>9</b>	<b>Lambda probe</b> .....	<b>327</b>
9.1	Assembly overview – lambda probe .....	327
9.2	Removing and installing lambda probe .....	327
<b>10</b>	<b>Vacuum system</b> .....	<b>331</b>
10.1	Connection diagram – vacuum system .....	331
<b>26 - Exhaust system</b> .....		<b>332</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>332</b>
1.1	Safety information .....	332
1.2	Repair instructions .....	332
<b>2</b>	<b>Exhaust pipes and silencers</b> .....	<b>333</b>
2.1	Assembly overview – silencers .....	333
2.2	Separating exhaust pipes from silencers .....	333
2.3	Removing and installing front silencer .....	334
2.4	Removing and installing centre silencer .....	335
2.5	Removing and installing rear silencer .....	335
2.6	Aligning exhaust system free of stress .....	336
2.7	Checking exhaust system for leaks .....	337
2.8	Installation position of clamp .....	337
<b>3</b>	<b>Emission control</b> .....	<b>339</b>
3.1	Assembly overview – emission control .....	339
3.2	Assembly overview – bracket and pipes for pressure differential sender for particulate filter .....	340
3.3	Removing and installing bracket for catalytic converter/front exhaust pipe .....	342
3.4	Removing and installing catalytic converter .....	345
3.5	Removing and installing pressure differential sender for particulate filter [G1037] .....	350
<b>4</b>	<b>Exhaust gas temperature regulation</b> .....	<b>352</b>
4.1	Assembly overview – exhaust gas temperature regulation .....	352
4.2	Removing and installing exhaust gas temperature sender .....	352
<b>5</b>	<b>Secondary air system</b> .....	<b>355</b>
5.1	Assembly overview - secondary air system .....	355
5.2	Removing and installing secondary air pump motor V101 .....	355
5.3	Removing and installing secondary air inlet valve N112 .....	358
<b>28 - Ignition system</b> .....		<b>360</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>360</b>
1.1	Safety information .....	360
1.2	Repair instructions .....	360
<b>2</b>	<b>Ignition system</b> .....	<b>361</b>
2.1	Assembly overview - ignition system .....	361
2.2	Removing and installing ignition coil with output stage .....	363
2.3	Removing and installing knock sensor 1 [G61] .....	366
2.4	Removing and installing Hall sender .....	367
2.5	Removing and installing engine speed sender [G28] .....	368