



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Engine identification	2
2.2 Engine data	2
3 Technical data	3
3.1 Test and adjustment values	3
4 Electrical components	7
4.1 Access to diagnoses	7
10 - Removing and installing engine	9
1 Safety information and repair notes	9
1.1 Safety information	9
1.2 Repair instructions	9
2 Removing and installing engine	10
2.1 Removing engine	10
2.2 Separating engine and gearbox, vehicles with dual clutch gearbox	18
2.3 Securing engine on engine and gearbox support	20
2.4 Installing motor	23
3 Assembly mountings	28
3.1 Assembly overview – assembly mountings	28
3.2 Removing and installing engine mounting	30
3.3 Removing and installing gearbox mounting	32
3.4 Removing and installing pendulum support	33
3.5 Supporting engine in installation position	34
3.6 Checking and adjusting assembly mountings	38
4 Engine cover panel	41
4.1 Removing and installing engine cover	41
13 - Crankshaft group	42
1 Safety information and repair notes	42
1.1 Safety information	42
1.2 Repair instructions	42
2 Cylinder block, pulley end	43
2.1 Assembly overview – cylinder block, pulley end	43
2.2 Assembly overview – sealing flange, pulley end	45
2.3 Removing and installing poly-V belt	46
2.4 Removing and installing poly V-belt tensioner	48
2.5 Removing and installing vibration damper	48
2.6 Removing and installing bracket for ancillaries	50
2.7 Removing and installing engine support	51
2.8 Removing and installing sealing flange, pulley end	52
2.9 Renewing caps in cylinder block, pulley end	54
3 Cylinder block, gearbox end	56
3.1 Assembly overview – cylinder block, gearbox end	56
3.2 Removing and installing flywheel	58
3.3 Removing and installing sealing flange on gearbox side	61
3.4 Renewing caps in cylinder block (gearbox end)	70
3.5 Removing and installing intermediate plate	71
3.6 Removing and installing intermediate plate	71



4	Crankshaft	73
4.1	Assembly overview - crankshaft	73
4.2	Renewing needle bearing in crankshaft	75
4.3	Measuring axial clearance of crankshaft	76
4.4	Measuring radial clearance of crankshaft	77
4.5	Removing and installing crankshaft	78
5	Pistons and conrods	80
5.1	Assembly overview – pistons and conrods	80
5.2	Removing and installing pistons	82
5.3	Measuring piston projection at TDC	86
5.4	Checking pistons and cylinder bores	87
5.5	Separating new conrod	88
5.6	Checking radial clearance of conrods	89
15	- Cylinder head, valve gear	91
1	Safety information and repair notes	91
1.1	Safety information	91
1.2	Repair instructions	91
2	Cylinder head	92
2.1	Assembly overview – cylinder head	92
2.2	Assembly overview - cylinder head cover	93
2.3	Removing and installing cylinder head	95
2.4	Removing and installing cylinder head cover	103
2.5	Removing and installing injector seals	105
2.6	Removing and installing camshaft housing	106
2.7	Checking compression	112
2.8	Checking cylinder head for distortion	113
3	Toothed belt drive	115
3.1	Assembly overview – toothed belt cover	115
3.2	Assembly overview – toothed belt	115
3.3	Removing and installing toothed belt guard	117
3.4	Removing and installing toothed belt	121
3.5	Checking valve timing	127
3.6	Adjusting valve timing	132
3.7	Removing toothed belt from camshaft	133
4	Valve gear	140
4.1	Assembly overview – valve gear	140
4.2	Measuring axial play of camshaft	142
4.3	Removing and installing camshaft oil seal	142
4.4	Checking hydraulic compensation elements	144
4.5	Removing and installing valve stem oil seals	145
5	Inlet and exhaust valves	156
5.1	Checking valve guides	156
5.2	Checking valves	156
17	- Lubrication	158
1	Safety information and repair notes	158
1.1	Safety information	158
1.2	Repair instructions	158
2	Sump, oil pump	159
2.1	Assembly overview – sump/oil pump	159
2.2	Engine oil:	161
2.3	Removing and installing upper part of sump	162
2.4	Removing and installing lower part of sump	167
2.5	Removing and installing oil pump	172



2.6	Removing and installing oil level and oil temperature sender [G266]	172
3	Engine oil cooler	174
3.1	Removing and installing engine oil cooler	174
4	Oil filter, oil pressure switch	175
4.1	Assembly overview - oil filter housing, oil pressure switch	175
4.2	Assembly overview - oil pressure switches/oil pressure control	177
4.3	Removing and installing oil pressure sender [G10]	178
4.4	Checking oil pressure	179
4.5	Checking oil pressure sender [G10]	180
4.6	Removing and installing oil filter housing	180
4.7	Removing and installing oil pressure regulating valve [N428]	182
4.8	Removing and installing piston cooling jet control valve [N522]	183
5	Oil circuit	184
5.1	Removing and installing oil return line for turbocharger	184
5.2	Removing and installing oil supply line	185
19	Cooling	187
1	Safety information and repair notes	187
1.1	Safety information	187
1.2	Repair instructions	187
2	Cooling system/coolant	188
2.1	Connection diagram - coolant hoses	188
2.2	Assembly overview - coolant expansion tank	193
2.3	Checking cooling system for leaks	193
2.4	Checking filling quality of cooling system	196
2.5	Removing and installing coolant expansion tank	199
2.6	Flushing cooling system	201
2.7	Draining coolant	215
2.8	Filling cooling system	217
2.9	Checking coolant level and topping up	222
2.10	Renewing cap	224
3	Coolant pump, regulation of cooling system	225
3.1	Assembly overview – coolant pump/thermostat	225
3.2	Assembly overview – electric coolant pump	226
3.3	Assembly overview – coolant temperature sender	228
3.4	Removing and installing electric coolant pump	229
3.5	Removing and installing coolant pump	236
3.6	Removing and installing coolant distributor	237
3.7	Removing and installing coolant regulating valve [N515]	239
3.8	Removing and installing coolant temperature sender [G62]	240
3.9	Removing and installing engine outlet coolant temperature sender [G82]	242
3.10	Removing and installing coolant temperature sender for charge air cooler [G1130]	243
4	Coolant pipes	245
4.1	Assembly overview – coolant pipes	245
4.2	Removing and installing coolant pipes	245
4.3	Removing and installing upper coolant pipes	250
5	Radiator, radiator fan	252
5.1	Assembly overview – radiator, with separate charge air cooler	252
5.2	Assembly overview – radiator cowl and radiator fan	254
5.3	Removing and installing radiator, vehicles with separate charge air cooler	254
5.4	Removing and installing cooler for charge air cooling circuit	256
5.5	Removing and installing radiator cowl	259
5.6	Removing and installing radiator fan VX57	260
21	Turbocharging/supercharging	262



1	Safety information and repair notes	262
1.1	Safety information	262
1.2	Repair instructions	262
2	Turbocharger	263
2.1	Assembly overview – turbocharger	263
2.2	Removing and installing turbocharger	266
2.3	Removing and installing charge pressure positioner V465	268
2.4	Removing and installing connection for turbocharger	272
3	Charge air system	274
3.1	Assembly overview – charge air system	274
3.2	Removing and installing charge pressure sender [GX26]	274
3.3	Checking charge air system for leaks	274
3.4	Checking charge air cooler for leaks	277
3.5	Removing and installing air intake pipe	280
3.6	Charge air hose connections	282
23	Mixture preparation - injection	283
1	Safety information and repair notes	283
1.1	Safety information	283
1.2	Repair instructions	283
2	Injection system	284
2.1	Schematic overview - fuel system	284
2.2	Overview of fitting locations - injection system	285
2.3	Filling/bleeding fuel system	295
2.4	Checking fuel system for leaks	296
3	Injectors/high-pressure reservoir (rail)	297
3.1	Assembly overview – injectors	297
3.2	Assembly overview - fuel rail	297
3.3	Adapting correction values for injectors	299
3.4	Testing injectors	300
3.5	Checking return flow rate of injectors with engine running	300
3.6	Checking return flow rate of injectors at starter speed	302
3.7	Checking open injectors	304
3.8	Removing and installing injectors	306
3.9	Removing and installing high-pressure lines	310
3.10	Removing and installing fuel rail	315
4	Air filter	318
4.1	Assembly overview – air filter housing	318
4.2	Removing and installing air filter housing	320
4.3	Removing and installing air duct on lock carrier	323
5	Intake manifold	325
5.1	Assembly overview – intake manifold	325
5.2	Removing and installing intake manifold	329
5.3	Removing and installing throttle valve module [GX3]	333
6	Senders and sensors	336
6.1	Removing and installing fuel pressure regulating valve [N276]	336
6.2	Checking fuel pressure regulating valve N276	338
6.3	Removing and installing fuel pressure sender [G247]	338
6.4	Removing and installing air mass measurement module [GX35]	340
6.5	Removing and installing pressure differential sender G505	341
6.6	Removing and installing NOx sender [G295]	343
6.7	Removing and installing NOx sender 2 G687	345
6.8	Removing and installing NOx sender 3 G932	346
6.9	Removing and installing charge air temperature sender before charge air cooler [G810]	347



6.10	Removing and installing charge air temperature sender after charge air cooler [G811]	348
6.11	Removing and installing particulate sensor G784	349
6.12	Removing and installing temperature and pressure sender for low-pressure fuel system [GX20]	350
7	Engine/motor control unit	351
7.1	Assembly overview – motor control unit	351
7.2	Removing and installing motor control unit [J623]	351
8	High-pressure pump	356
8.1	Assembly overview – high-pressure pump	356
8.2	Removing and installing high-pressure pump	356
9	Lambda probe	360
9.1	Assembly overview – lambda probe	360
9.2	Removing and installing lambda probe	360
26	Exhaust system	363
1	Safety information and repair notes	363
1.1	Safety information	363
1.2	Repair instructions	363
2	Exhaust pipes and silencers	364
2.1	Assembly overview – silencers	364
2.2	Assembly overview – ammonia trap	366
2.3	Separating exhaust pipes from silencers	366
2.4	Removing and installing ammonia trap	367
2.5	Removing and installing exhaust tailpipe	369
2.6	Aligning exhaust system free of stress	370
2.7	Checking exhaust system for leaks	370
2.8	Installation position of clamp	371
3	Emission control	372
3.1	Assembly overview – emission control	372
3.2	Removing and installing emission control module	375
3.3	Removing and installing exhaust flap control unit [J883]	381
4	SCR system (selective catalytic reduction)	384
4.1	Assembly overview – reducing agent tank	384
4.2	Assembly overview - reducing agent supply line	385
4.3	Assembly overview - delivery module for reducing agent	387
4.4	Assembly overview – injector for reducing agent [N474]	389
4.5	Assembly overview – injector 2 for reducing agent [N758]	390
4.6	Removing and installing reducing agent tank	391
4.7	Removing and installing delivery module for reducing agent	394
4.8	Removing and installing injector for reduction agent [N474]	396
4.9	Removing and installing injector 2 for reducing agent [N758]	398
4.10	Removing and installing control unit for reducing-agent heater [J891]	399
4.11	Draining reducing agent tank	400
4.12	Removing and installing front section of reducing agent supply line	403
4.13	Removing and installing rear section of reducing agent supply line	405
4.14	Removing and installing filler pipe for reducing agent tank	406
4.15	Disconnecting reducing agent supply line	408
5	Exhaust gas temperature regulation	413
5.1	Specified torque actual dimension	413
5.2	Assembly overview – exhaust gas temperature regulation	413
5.3	Removing and installing exhaust gas temperature sender 1 [G235]	414
5.4	Removing and installing exhaust gas temperature sender 2 [G448]	416
5.5	Removing and installing exhaust gas temperature sender 3 [G495]	417
5.6	Removing and installing exhaust gas temperature sender 4 [G648]	419
6	Exhaust gas recirculation	422



6.1	Assembly overview – exhaust gas recirculation	422
6.2	Removing and installing exhaust gas recirculation cooler	424
6.3	Removing and installing exhaust gas recirculation valve 1 [GX5]	426
6.4	Removing and installing exhaust gas recirculation valve 2 [GX6]	427
6.5	Removing and installing exhaust gas recirculation temperature sensor [G98]/[G690]	428
6.6	Checking exhaust gas recirculation cooler for leaks	430
28	- Ignition system	435
1	Safety information and repair notes	435
1.1	Safety information	435
1.2	Repair instructions	435
2	Glow plug system	436
2.1	Assembly overview – glow plug system	436
2.2	Removing and installing glow plug	437
2.3	Removing and installing automatic glow period control unit [J179]	440
2.4	Removing and installing Hall sender [G40]	441
2.5	Removing and installing engine speed sender [G28]	441