



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 General information</b>	<b>4</b>
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	4
<b>4 Repair notes</b>	<b>5</b>
4.1 Routing and attachment of lines	5
4.2 General repair instructions	5
<b>20 - Fuel supply system</b>	<b>6</b>
<b>1 Procedure in event of misfuelling</b>	<b>6</b>
1.1 Procedure in event of misfuelling	6
<b>2 Fuel</b>	<b>8</b>
2.1 Assembly overview - fuel tank	8
2.2 Removing and installing fuel tank	10
2.3 Emptying fuel tank	15
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>21</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	21
3.2 Removing and installing fuel delivery unit, fuel gauge sender	23
3.3 Removing and installing fuel gauge sender G	29
<b>4 Plug-in connectors</b>	<b>30</b>
4.1 Separating plug-in connectors	30
<b>5 Fuel filter</b>	<b>36</b>
5.1 Removing and installing fuel filter	36
<b>6 Activated charcoal filter system</b>	<b>37</b>
6.1 Connection diagram – activated charcoal filter system	37
6.2 Assembly overview – activated charcoal filter system	38
6.3 Removing and installing activated charcoal filter	39
6.4 Checking fuel tank breather	41
<b>7 Accelerator pedal</b>	<b>50</b>
7.1 Assembly overview - accelerator module	50
7.2 Removing and installing accelerator pedal module GX2	50
<b>8 Fuel pump</b>	<b>52</b>
8.1 Checking fuel system pressurisation pump G6	52
8.2 Removing and installing fuel pump control unit J538	57