



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on SCR system	2
2 Identification	4
2.1 Engine number/engine data	4
3 General information	5
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	5
4 Repair notes	6
4.1 Rules for cleanliness	6
4.2 Foreign bodies in engine	6
4.3 Contact corrosion	6
4.4 Routing and attachment of lines	7
4.5 Fitting radiators and condensers	7
4.6 Assessing quality of diesel fuel	7
20 - Fuel supply system	9
1 Procedure in event of misfuelling	9
1.1 Procedure in event of misfuelling	9
2 Fuel	17
2.1 Assembly overview - fuel tank	17
2.2 Removing and installing fuel tank	19
2.3 Emptying fuel tank	23
2.4 Removing and installing misfuelling prevention device	28
2.5 Deactivating misfuelling prevention device	33
3 Fuel delivery unit, fuel gauge sender	34
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	34
3.2 Removing and installing fuel delivery unit, fuel gauge sender	37
3.3 Removing and installing fuel gauge sender G	39
4 Plug-in connectors	41
4.1 Separating plug-in connectors	41
5 Fuel filter	48
5.1 Assembly overview – fuel filter	48
5.2 Removing and installing fuel filter	49
5.3 Fuel hoses in the engine compartment	53
6 Accelerator pedal	55
6.1 Assembly overview - accelerator module	55
6.2 Removing and installing accelerator pedal module GX2	55
7 Fuel pump	57
7.1 Checking fuel system pressurisation pump G6	57
7.2 Removing and installing fuel pump control unit J538	77
8 Senders and sensors	81
8.1 Removing and installing water separator sender G63	81