



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety measures when working on vehicles with start/stop system	2
1.4 Safety notes and safety precautions when working on vehicles with a high-voltage system	2
1.5 Safety precautions when working in the vicinity of high-voltage components	3
2 Identification	4
2.1 Engine number/engine data	4
3 General information	5
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	5
4 Repair instructions	6
4.1 Routing and attachment of lines	6
4.2 General repair instructions	6
20 - Fuel supply system	7
1 Procedure in event of misfuelling	7
1.1 Procedure in event of misfuelling	7
2 Fuel	9
2.1 Assembly overview - fuel tank	9
2.2 Removing and installing fuel tank	11
2.3 Emptying fuel tank	16
2.4 Assembly overview - fuel tank shut-off valve N288	20
2.5 Removing and installing tank shut-off valve N288	21
3 Fuel delivery unit, fuel gauge sender	24
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	24
3.2 Removing and installing fuel delivery unit, fuel gauge sender	26
3.3 Removing and installing fuel gauge sender G	31
4 Plug-in connectors	33
4.1 Separating plug-in connectors	33
5 Activated charcoal filter system	39
5.1 Connection diagram – activated charcoal filter system	39
5.2 Assembly overview – activated charcoal filter system	41
5.3 Assembly overview - activated charcoal filter air flushing pump V700	41
5.4 Removing and installing activated charcoal filter	42
5.5 Checking fuel tank breather	45
5.6 Removing and installing activated charcoal filter air flushing pump V700	52
5.7 Removing and installing pressure sensor for activated charcoal filter air flushing GX44	54
5.8 Removing and installing activated charcoal filter solenoid valve 1 N80	54
6 Accelerator pedal	56
6.1 Assembly overview - accelerator module	56
6.2 Removing and installing accelerator pedal module GX2	56
7 Fuel pump	58
7.1 Checking fuel system pressurisation pump G6	58
7.2 Removing and installing fuel pump control unit J538	63
8 Senders and sensors	66
8.1 Removing and installing tank pressure sensor G400	66