



Contents

00 - Technical data	1
1 Evaluating accident vehicles	1
1.1 Check list for evaluating running gear on accident vehicles	1
2 General information	3
2.1 General information	3
3 Repair notes	4
3.1 General repair instructions	4
3.2 Steering rack	4
3.3 Gaskets and seals	4
3.4 Nuts and bolts	5
3.5 Electrical components	5
3.6 Raising wheel suspension to unladen position	5
3.7 Repairing front wheel suspension	8
3.8 Repairing damaged threads in longitudinal member	8
40 - Front suspension	9
1 Front axle	9
1.1 Overview - front axle	9
1.2 Overview of front axle from model year 2011	10
2 Subframe	11
2.1 Assembly overview - subframe, made of aluminium	11
2.2 Assembly overview - subframe, made of steel	15
2.3 Fixing position of subframe	19
2.4 Locating subframe from model year 2011	20
2.5 Lowering subframe from model year 2011	22
2.6 Removing and installing subframe without steering rack	25
2.7 Removing and installing subframe without steering rack from model year 2011	27
2.8 Removing and installing subframe with electromechanical steering rack	30
2.9 Removing and installing subframe with hydraulic steering rack	36
2.10 Repairing subframe	42
2.11 Removing and installing anti-roll bar	57
2.12 Removing and installing anti-roll bar from model year 2011	62
2.13 Removing and installing coupling rod	64
3 Lower suspension link, swivel joint	66
3.1 Checking swivel joint	66
3.2 Removing and installing swivel joint	66
3.3 Removing and installing suspension link with mounting bracket	69
3.4 Removing and installing suspension link from model year 2011	73
3.5 Renewing front bonded rubber bush for suspension link	75
3.6 Renewing mounting bracket with suspension link bush	77
3.7 Renewing rear bonded rubber bush for suspension link from model year 2011	79
4 Wheel bearing	82
4.1 Assembly overview - wheel bearing	82
4.2 Removing and installing wheel bearing unit	83
4.3 Removing and installing wheel bearing housing	86
5 Suspension strut	91
5.1 Assembly overview - suspension strut	91
5.2 Removing and installing suspension strut	92
5.3 Repairing suspension strut	97
6 Drive shaft	100
6.1 Assembly overview - drive shaft	100
6.2 Removing and installing drive shaft with constant velocity joint »VL100« and »VL107«	106



6.3	Repairing drive shafts »VL100« and »VL107«	109
6.4	Removing and installing drive shafts with triple roller joint AAR3300i	125
6.5	Dismantling and assembling drive shaft with triple roller joint AAR3300i	128
6.6	Checking outer constant velocity joint	134
6.7	Loosening and tightening threaded connections of drive shaft	135
42	- Rear suspension	140
1	Rear axle	140
1.1	Assembly overview - rear wheel suspension	140
1.2	Removing and installing rear axle shaft, four-wheel drive	147
1.3	Rear axle tuning, four-wheel drive	148
2	Axle beam	149
2.1	Removing and installing axle assembly	149
2.2	Removing and installing axle beam, four-wheel drive	151
2.3	Renewing bonded rubber bush for axle beam	154
3	Anti-roll bar	157
3.1	Removing and installing anti-roll bar	157
3.2	Removing and installing coupling rod	158
4	Suspension strut, shock absorber, spring	160
4.1	Removing and installing shock absorbers	160
4.2	Removing and installing spring	164
4.3	Renewing bonded rubber bush for leaf spring	166
4.4	Removing and installing shackle	168
5	Wheel bearing assembly, trailing arm	169
5.1	Removing and installing wheel hub with wheel bearing	169
5.2	Removing and installing wheel hub with wheel bearing, four-wheel drive	171
44	- Wheels, tyres, vehicle geometry	173
1	Tyre Pressure Monitoring System	173
1.1	System description – Tyre Pressure Monitoring System	173
1.2	Tyre Pressure Monitoring System (TPMS)	174
1.3	Tyre pressure sensor	175
2	Wheel alignment	178
2.1	General information	178
2.2	Vehicle data sticker	187
3	Wheels, tyres	188
3.1	Models with breakdown set	188
3.2	Removing wheels	188
3.3	Protecting wheel centring seat against corrosion	189
3.4	Fitting wheels	190
3.5	Fitting tyre	190
48	- Steering	191
1	Steering wheel	191
1.1	Assembly overview - steering wheel	191
1.2	Removing and installing steering wheel	191
1.3	Removing and installing steering wheel, as of model year 2011	194
2	Steering column	196
2.1	Assembly overview - steering column	196
2.2	Assembly overview - steering column, as of model year 2008	198
2.3	Assembly overview - steering column, right-hand drive, as of model year 2008	199
2.4	Removing and installing steering column	199
2.5	Removing and installing steering column, as of model year 2008	204
2.6	Removing and installing steering column, right-hand drive from model year 2011	209
2.7	Handling and transporting steering column	214



2.8	Checking steering column for damage	215
2.9	Basic setting of steering angle sender G85	215
2.10	Removing and installing mounting bracket with strut	215
3	Sensors	218
3.1	Removing and installing steering angle sender G85	218
4	Hydraulic power steering	221
4.1	Assembly overview - hydraulic steering rack	221
4.2	Assembly overview - vane pump	223
4.3	Repairing hydraulic steering rack	224
4.4	Removing and installing hydraulic steering rack	227
4.5	Bleeding the power steering system	233
4.6	Checking delivery pressure of vane pump	234
4.7	Removing and installing vane pump	237
4.8	Checking hydraulic fluid level of power steering	241
4.9	Check steering for leaks	241
4.10	Removing and installing bellows	241
4.11	Removing and installing track rod	244
5	Electromechanical steering rack	249
5.1	Distinguishing features (2nd and 3rd generation)	249
5.2	Assembly overview - electromechanical steering rack, 2nd generation	250
5.3	Assembly overview - electromechanical steering rack, 2nd generation, RHD vehicles	251
5.4	Assembly overview - electromechanical steering rack, 3rd generation, as of model year 2009	252
5.5	Assembly overview - electromechanical steering rack, right-hand drive (3rd generation), as of model year 2009	253
5.6	Removing and installing steering rack, 2nd generation	254
5.7	Removing and installing steering rack, 2nd generation, RHD vehicles	260
5.8	Removing and installing steering rack, 3rd generation, as of model year 2009	269
5.9	Removing and installing steering rack, 3rd generation, RHD vehicles, as of model year 2009	274
5.10	Removing and installing bellows	281
5.11	Removing and installing track rod	283