



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	2
1.2 Special instructions for belt tensioners	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.4 Checking seat belts	4
1.5 Safety instructions for airbag	7
1.6 Special instructions for curtain airbag modules	8
1.7 Renewing airbag unit after an accident	8
1.8 Deactivating the airbag	9
1.9 Checking child seat anchors (ISOFIX) after an accident	9
68 - Interior equipment	10
1 Storage compartments, covers	10
1.1 Removing and installing upper centre dash panel storage compartment	10
1.2 Removing and installing centre storage tray	11
1.3 Removing and installing footwell trim	13
1.4 Removing and installing dash panel centre trim	14
1.5 Removing and installing dash panel end trims	15
1.6 Removing and installing steering column trim	16
1.7 Roof gallery storage compartment	18
1.8 Removing and installing cover on driver side	21
1.9 Removing and installing lower front passenger side compartment	23
1.10 Removing and installing glove compartment	25
1.11 Removing and installing cap for exterior mirror	26
1.12 Removing and installing handbrake lever handle	28
1.13 Coat hook and strap	29
1.14 Net pocket (roof)	31
1.15 Removing and installing net partition fitting eyes	35
1.16 Removing and installing loudspeaker trim	36
1.17 Removing and installing loudspeaker trim (front door trim panel)	37
2 Equipment	39
2.1 Assembly overview - partition panel	39
2.2 Removing and installing partition panel	40
2.3 Removing and installing sun visors	43
2.4 Removing and installing roof grab handles	45
3 Centre console	47
3.1 Removing and installing front section of centre console, panel van	47
3.2 Removing and installing front section of centre console, Kombi	51
3.3 Removing and installing centre console, panel van	54
3.4 Removing and installing centre console, Kombi	56
4 Front centre armrest	64
4.1 Removing and installing centre armrest, Kombi	64
4.2 Removing and installing storage compartment lid, Kombi	69
5 On inside	70
5.1 Assembly overview - interior mirror »with rain sensor, automatic anti-dazzle«	70
5.2 Removing and installing manual anti-dazzle interior mirror	71
5.3 Repairing interior mirror retaining plate	71
5.4 Removing and installing interior mirror »with rain sensor, automatic anti-dazzle«	73
5.5 Removing and installing rain and light sensor G397	75
5.6 Repairing retaining plate for »rain sensor, automatic anti-dazzle«	76



69 - Passenger protection	79
1 Seat belts	79
1.1 Assembly overview - front seat belts	79
1.2 Assembly overview - seat belts for outer seats, 1st row	81
1.3 Assembly overview - seat belt for centre seat, 1st row	82
1.4 Assembly overview - seat belt, 2nd row	83
1.5 Assembly overview - seat belt, 2nd row, Maxi	84
1.6 Removing and installing front seat belts	84
1.7 Removing and installing front belt height adjuster	86
1.8 Removing and installing front belt buckle	88
1.9 Removing and installing seat belts for outer seats, 1st row	91
1.10 Removing and installing seat belt for middle seat, 1st row	93
1.11 Belt buckles, 1st row	95
1.12 Removing and installing seat belt, 2nd row	98
1.13 Removing and installing seat belt, 2nd row, Maxi	100
1.14 Removing and installing belt buckle for 2nd row	102
2 Airbag system	104
2.1 Overview of fitting locations - airbag system	104
3 Airbag control unit	105
3.1 Assembly overview - airbag control unit	105
3.2 Removing and installing airbag control unit J234	105
4 Driver side airbag	109
4.1 Removing and installing airbag unit on driver side, vehicles manufactured up to 2007	109
4.2 Removing and installing airbag unit on driver side (multifunction), vehicles manufactured as of 2007	115
4.3 Removing and installing airbag unit on driver side, vehicles manufactured as of 2010	118
4.4 Removing and installing airbag unit on driver side (multifunction), vehicles manufactured as of 2010	122
4.5 Removing and installing steering wheel	126
4.6 Removing and installing return spring with slip ring	126
5 Airbag unit on front passenger side	127
5.1 Removing and installing airbag unit on front passenger side	127
6 Side airbag	133
6.1 Side airbag, driver/front passenger	133
7 Airbag crash sensors	139
7.1 Removing and installing crash sensors	139
70 - Trim, insulation	141
1 Front door trims	141
1.1 Removing and installing front door trim	141
2 Rear door trim	150
2.1 Assembly overview - sliding door trim	150
2.2 Assembly overview - insulation, sliding door	151
2.3 Removing and installing sliding door trim, panel van, basic equipment version	151
2.4 Removing and installing sliding door trim, panel van, comfort equipment version	152
2.5 Removing and installing sliding door trim, Shuttle	154
3 Dash panel	156
3.1 Removing and installing dash panel	156
4 Central tube for dash panel	162
4.1 Assembly overview - central tube for dash panel up to 06.07	162
4.2 Assembly overview - central tube for dash panel from 06.07	163
4.3 Removing and installing central tube for dash panel up to 06.07	163
4.4 Removing and installing central tube for dash panel from 06.07	165



5	Interior trims	169
5.1	Assembly overview - upper B-pillar trim, panel van	170
5.2	Assembly overview - upper B-pillar trim, Kombi	171
5.3	Assembly overview - upper C-pillar trim	172
5.4	Assembly overview - upper C-pillar trim, Maxi	173
5.5	Assembly overview - storage compartment, C-pillar	174
5.6	Assembly overview - D-pillar trim	175
5.7	Assembly overview - D-pillar trim, Maxi	176
5.8	Assembly overview - foot rest bracket	177
5.9	Assembly overview - storage compartment lid	178
5.10	Removing and installing front sill panel mouldings	178
5.11	Rear sill panel mouldings	181
5.12	Removing and installing upper A-pillar trim	186
5.13	Removing and installing centre A-pillar trim	188
5.14	Removing and installing upper B-pillar trim, panel van	190
5.15	Removing and installing upper B-pillar trim, Kombi	193
5.16	Removing and installing lower B-pillar trim, panel van	196
5.17	Removing and installing lower B-pillar trim, Kombi	199
5.18	Removing and installing upper C-pillar trim	201
5.19	Removing and installing upper C-pillar trim, Maxi	203
5.20	Removing and installing storage compartment, C-pillar trim	205
5.21	Removing and installing window frame trim, B-pillar and C-pillar	206
5.22	Removing and installing window frame trim, B-pillar and C-pillar, Maxi	207
5.23	Removing and installing window frame trim, C-pillar and D-pillar, Maxi	209
5.24	Removing and installing D-pillar trim	210
5.25	Removing and installing D-pillar trim, Maxi	212
5.26	Removing and installing foot rest cover	214
5.27	Removing and installing front floor covering	215
5.28	Floor covering in middle on Kombi (comfort equipment version) and panel van (basic equipment version)	217
5.29	Removing and installing rear floor covering	218
5.30	Removing and installing storage compartment frame	221
6	Luggage compartment trim	224
6.1	Assembly overview - rear lid trim	224
6.2	Assembly overview - luggage compartment cover	225
6.3	Assembly overview - moulded trim	227
6.4	Assembly overview - reinforcement for moulded trim, Maxi	229
6.5	Removing and installing rear wing door trim	230
6.6	Removing and installing rear lid trim	230
6.7	Removing and installing lock carrier cover	232
6.8	Removing and installing luggage compartment cover side support	235
6.9	Removing and installing rear side panel trim	237
6.10	Rear side panel trim, Maxi	243
6.11	Removing and installing moulded trim	246
7	Roof trims	251
7.1	Removing and installing moulded headliner, panel van	251
7.2	Removing and installing roof trim	252
7.3	Removing and installing moulded headlining	256
8	Insulation	261
8.1	Assembly overview - clutch pedal and brake pedal insulation	261
8.2	Assembly overview - cover for universal joint on steering column	264
8.3	Assembly overview - plenum chamber bulkhead insulation	265
8.4	Assembly overview - plenum chamber insulation	266
8.5	Assembly overview - mounting plate insulation	267
8.6	Assembly overview - inner plenum chamber bulkhead insulation	268



8.7	Assembly overview - insulation of centre console, A-pillar, dash panel	269
8.8	Assembly overview - wheel housing insulation	270
72 - Seat frames		272
1	Front seat	272
1.1	Assembly overview - lumbar support	272
1.2	Assembly overview – folding front passenger seat	274
1.3	Removing and installing front seat	275
1.4	Removing and installing seat frame adapter	280
1.5	Removing and installing seat trim (without height adjustment)	282
1.6	Removing and installing seat trim (with height adjustment)	284
1.7	Removing and installing drawer mounting	285
1.8	Removing and installing backrest frame	287
1.9	Removing and installing adjustment wheel for lumbar support	290
1.10	Removing and installing lumbar support	290
1.11	Removing and installing backrest cover panel	292
1.12	Removing and installing backrest lock Bowden cable	294
1.13	Removing head restraint guides	295
2	Seats, 1st row	297
2.1	Removing and installing seats in 1st row	297
2.2	Removing and installing backrest fittings trim	300
2.3	Removing and installing covers for securing strips	301
2.4	Removing and installing securing plates and securing strips	304
2.5	Removing and installing backrests	307
3	Seats, 2nd row	310
3.1	Assembly overview - securing bolts for bench seat	310
3.2	Removing and installing seats for 2nd row, bench seat	311
3.3	Removing and installing backrest of bench seat in 2nd row	312
74 - Seat - padding, covers		315
1	Front seat covers and padding	315
1.1	Assembly overview - seat heating element	315
1.2	Assembly overview - backrest heater element	316
1.3	Removing and installing front seat cushion cover and padding	316
1.4	Removing and installing front seat backrest cover and padding	321
1.5	Removing and installing seat heating element	326
1.6	Removing and installing backrest heating element	327
2	1st row seat covers and padding	329
2.1	Removing and installing backrest covers and padding	329
2.2	Removing and installing seat covers and padding	331
3	Second row seat covers and padding	335
3.1	Removing and installing rear seat cushion covers and padding	335
3.2	Removing and installing backrest cover and padding	338