



Contents

00 - Technical data	1
1 Technical data	1
1.1 Assembly allocation and capacities	1
1.2 Gear ratio	1
2 General repair instructions	2
2.1 Oil	2
2.2 Axle beam	2
2.3 Gaskets and seals	2
2.4 Nuts and bolts	2
3 Genuine parts	4
39 - Final drive - differential	5
1 Connecting vehicle diagnostic tester and selecting function	5
2 Propshaft	6
2.1 Assembly overview - propshaft	6
2.2 Removing and installing propshaft	7
2.3 Renewing bellows for rear propshaft	11
3 Renewing oil seal for propshaft flange of rear final drive (rear axle housing installed)	15
3.1 Removing	16
3.2 Installing	17
4 All-wheel drive coupling	19
4.1 Checking function of all-wheel drive coupling	19
4.2 Electrical/electronic components and fitting locations	19
4.3 Assembly overview - all-wheel drive control unit J492	20
4.4 Removing and installing four-wheel drive control unit J492	21
4.5 Removing and installing all-wheel drive coupling pump V181	24
4.6 Assembly overview - all-wheel drive coupling	27
4.7 Removing and installing all-wheel drive coupling	28
4.8 Assembly overview - dismantling and assembling all-wheel drive coupling	31
5 Rear final drive	33
5.1 Assembly overview - rear final drive	33
6 Replacing oil seals for rear axle shafts	35
7 Checking oil level in rear final drive or adding oil	40
8 Checking or replenishing oil level of all-wheel drive coupling	41
8.1 Checking oil level in all-wheel drive coupling	41
8.2 Replenishing oil in all-wheel drive coupling	42