



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	3
2.1 Gearbox identification	3
3 Technical data	4
3.1 Allocation gearbox - engine, gear ratios and capacities	4
3.2 Calculating overall gear ratio "i"	7
4 Overview - power transmission	8
4.1 Overview - power transmission - front-wheel drive	8
5 Repair notes	10
5.1 Gearbox	10
5.2 Gaskets and seals	10
5.3 Locking devices	11
5.4 Sealant	11
5.5 Nuts and bolts	11
5.6 Bearings	11
5.7 Shims	11
5.8 Synchro-rings	12
5.9 Gear wheels	12
5.10 Synchromeshed gears	12
5.11 Clutch	12
30 - Clutch	13
1 Clutch operation	13
1.1 Assembly overview - pedal cluster	13
1.2 Assembly overview - clutch hydraulics	15
1.3 Assembly overview - clutch release mechanism	17
1.4 Removing and installing clutch pedal	18
1.5 Removing and installing over-centre spring	21
1.6 Removing and installing mounting bracket	23
1.7 Removing and installing clutch master cylinder	28
1.8 Removing and installing clutch slave cylinder	30
1.9 Removing and installing clutch position sender G476	32
1.10 Bleeding clutch mechanism	33
2 Clutch	34
2.1 Assembly overview - clutch	34
2.2 Determining make of clutch	35
2.3 Removing and installing clutch	36
34 - Controls, housing	43
1 Selector mechanism	43
1.1 Installation position - selector mechanism	43
1.2 Assembly overview - gear knob and cover	44
1.3 Assembly overview - Gear lever and selector housing	45
1.4 Assembly overview - Selector cables	47
1.5 Assembly overview - selector unit	49
1.6 Removing and installing gear knob	50
1.7 Removing and installing selector mechanism	52
1.8 Adjusting selector mechanism	54
1.9 Repairing selector unit	58



2	Removing and installing gearbox	60
2.1	Specified torques for gearbox	60
2.2	Removing gearbox	60
2.3	Removing gearbox, as of 08.2010►	66
2.4	Installing gearbox	73
3	Assembly mountings	79
3.1	Assembly overview - assembly mountings	79
4	Transporting gearbox	81
5	Dismantling and assembling gearbox	82
5.1	Schematic overview - gearbox	82
5.2	Assembly overview - cover for gearbox housing and 5th gear	83
5.3	Assembly overview - gearbox housing and selector mechanism	84
5.4	Assembly overview - input shaft, output shafts, differential, selector rods	86
5.5	Assembly overview - selector forks	87
5.6	Repairing selector forks	88
5.7	Dismantling and assembling gearbox	92
5.8	Removing and installing gearbox housing cover and 5th gear	105
6	Gearbox housing, clutch housing	116
6.1	Assembly overview - gearbox housing	116
6.2	Assembly overview - clutch housing	118
6.3	Repairing gearbox housing	119
6.4	Repairing clutch housing	127
7	Securing to engine and gearbox support	133
8	Gear oil	134
8.1	Checking gear oil level	134
8.2	Draining and filling gear oil	134
35 - Gears, shafts		137
1	Input shaft	137
1.1	Assembly overview - input shaft	137
1.2	Dismantling and assembling input shaft	140
1.3	Adjusting input shaft	146
2	Output shaft	152
2.1	Assembly overview - output shaft	152
2.2	Dismantling and assembling output shaft	155
2.3	Adjusting output shaft	166
3	Reverse shaft	170
3.1	Assembly overview - reverse shaft	170
3.2	Dismantling and assembling reverse shaft	172
39 - Final drive - differential		175
1	Oil seals	175
1.1	Overview of fitting locations - seals	175
1.2	Renewing left seal	176
1.3	Renewing right oil seal	178
1.4	Renewing input shaft seal	183
2	Differential	186
2.1	Assembly overview - differential	186
2.2	Dismantling and assembling differential	188
2.3	Adjusting differential	194
3	Adjustment overview	198