



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the mechatronic unit	2
1.5 Safety precautions when tow-starting or towing	4
2 Identification	5
2.1 Gearbox identification	5
3 Repair notes	6
3.1 General information	6
3.2 General repair instructions	6
3.3 Gaskets and seals	8
3.4 Nuts and bolts	9
3.5 Electrical components	9
4 Technical data	10
4.1 Capacities	10
4.2 Allocation gearbox - engine	10
4.3 Calculation of gear ratios	12
5 Overview - power transmission	13
5.1 Overview - power transmission - front-wheel drive	13
30 - Clutch	14
1 Clutch	14
1.1 Assembly overview - dual clutch	14
1.2 Removing dual clutch	18
1.3 Adjusting position of clutch engagement bearings "K 1" and "K 2"	28
1.4 Installing dual clutch	53
1.5 Renewing input shaft seal	66
1.6 Renewing oil seal for inner input shaft	68
34 - Controls, housing	71
1 Mechatronic unit	71
1.1 Assembly overview - mechatronic unit	71
1.2 Removing and installing mechatronic unit	72
1.3 Setting mechatronic unit to removal position by hand	87
1.4 Renewing control unit for mechatronic unit for dual clutch gearbox J743	90
2 Selector mechanism	95
2.1 Assembly overview - selector mechanism	95
2.2 Assembly overview - selector mechanism	96
2.3 Checking and adjusting selector lever cable	97
2.4 Emergency release from position P	100
2.5 Removing and installing selector lever handle	101
2.6 Moving push-button in the handle to installation position	102
2.7 Removing and installing selector mechanism	103
2.8 Checking selector mechanism	106
2.9 Renewing selector shaft seal	107
3 Removing and installing gearbox	108
3.1 Removing gearbox	108
3.2 Installing gearbox	115
3.3 Specified torques for gearbox	118
4 Transporting gearbox	120



5	Dismantling and assembling gearbox	123
6	Securing to engine and gearbox support	124
7	Gear oil	126
7.1	Draining and filling gear oil	126
7.2	Draining and filling hydraulic fluid for mechatronic unit	128
35 - Gears, shafts		132
1	Dismantling and assembling gears and shafts	132
2	Parking lock	133
2.1	Removing and installing parking lock	133
39 - Final drive - front differential		135
1	Oil seals	135
1.1	Overview of fitting locations - seals	135
1.2	Renewing left seal	135
1.3	Renewing right oil seal	139