



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Safety information</b>	1
1.1   Safety precautions when working on the cooling system	1
1.2   Safety regulations for working on fuel supply	2
1.3   Releasing high pressure in fuel system	2
1.4   Safety precautions when working on charge air system	3
1.5   Safety precautions when working on ignition system	3
1.6   Safety regulations for working on fuel supply	4
2 <b>Identification</b>	6
2.1   Engine number/engine data	6
3 <b>General information</b>	7
3.1   General notes on injection	7
4 <b>Repair instructions</b>	8
4.1   Rules for cleanliness when working on fuel supply system/injection system	8
<b>10 - Removing and installing engine</b>	<b>9</b>
1 <b>Removing and installing engine</b>	9
1.1   Removing engine	9
1.2   Securing engine on engine and gearbox support	16
1.3   Installing engine	16
2 <b>Assembly mountings</b>	20
2.1   Assembly overview - assembly mountings	20
<b>13 - Crankshaft group</b>	<b>21</b>
1 <b>Cylinder block (pulley end)</b>	21
1.1   Assembly overview - poly V-belt drive	21
1.2   Removing and installing poly V-belt, vehicles with air conditioner	22
1.3   Removing and installing poly V-belt, vehicles without air conditioner	23
1.4   Removing and installing top ancillary bracket	24
1.5   Removing and installing bottom ancillary bracket	25
1.6   Renewing crankshaft oil seal - belt pulley end	26
1.7   Removing and installing belt pulley	29
2 <b>Cylinder block, gearbox end</b>	33
2.1   Assembly overview - cylinder block, gearbox end	33
2.2   Removing and installing sealing flange on gearbox side	34
3 <b>Crankshaft</b>	43
3.1   Renewing needle bearing in crankshaft	43
3.2   Crankshaft dimensions	44
4 <b>Pistons and conrods</b>	45
4.1   Assembly overview - pistons and conrods	45
4.2   Checking pistons and cylinder bores	46
4.3   Separating new conrod	47
4.4   Piston and cylinder dimensions	48
<b>15 - Cylinder head, valve gear</b>	<b>49</b>
1 <b>Cylinder head</b>	49
1.1   Assembly overview - cylinder head	49
1.2   Removing and installing cylinder head cover with camshaft	51
1.3   Removing and installing cylinder head	60
1.4   Checking compression	66
2 <b>Cover for timing chain</b>	68
2.1   Removing and installing top valve timing housing	68



2.2	Removing and installing bottom valve timing housing .....	71
<b>3</b>	<b>Chain drive .....</b>	<b>74</b>
3.1	Assembly overview - timing chain .....	74
3.2	Checking timing chain .....	77
3.3	Removing and installing timing chain .....	80
3.4	Removing and installing timing chain and chain drive for oil pump .....	87
3.5	Checking valve timing .....	90
3.6	Adjusting valve timing .....	93
<b>4</b>	<b>Valve gear .....</b>	<b>101</b>
4.1	Assembly overview - valve gear .....	101
4.2	Measuring axial play of camshaft .....	102
4.3	Removing and installing valve stem seals .....	103
<b>5</b>	<b>Inlet and exhaust valves .....</b>	<b>105</b>
5.1	Reworking valve seats .....	105
5.2	Checking valve guides .....	106
5.3	Valve dimensions .....	107
<b>17 - Lubrication</b>	<b>108</b>	
1	Sump, oil pump .....	108
1.1	Assembly overview - sump/oil pump .....	108
1.2	Engine oil: .....	111
1.3	Removing and installing oil sump .....	111
1.4	Removing and installing oil pump .....	115
<b>2</b>	<b>Engine oil cooler .....</b>	<b>118</b>
2.1	Removing and installing engine oil cooler .....	118
<b>3</b>	<b>Crankcase ventilation .....</b>	<b>120</b>
3.1	Assembly overview - crankcase breather system .....	120
3.2	Removing and installing oil separator .....	121
<b>4</b>	<b>Oil filter, oil pressure switch .....</b>	<b>123</b>
4.1	Checking oil pressure and oil pressure switch .....	123
4.2	Removing and installing non-return valve .....	124
<b>19 - Cooling</b>	<b>126</b>	
1	<b>Cooling system/coolant .....</b>	<b>126</b>
1.1	Connection diagram - coolant hoses .....	126
1.2	Draining and adding coolant .....	127
1.3	Checking cooling system for leaks .....	132
<b>2</b>	<b>Coolant pump, regulation of cooling system .....</b>	<b>134</b>
2.1	Assembly overview - thermostat .....	134
2.2	Removing and installing coolant pump .....	134
2.3	Removing and installing coolant circulation pump V50 .....	136
<b>3</b>	<b>Radiator, radiator fan .....</b>	<b>139</b>
3.1	Assembly overview - radiator/ radiator fan V7 .....	139
3.2	Removing and installing radiator .....	141
3.3	Removing and installing radiator fan V7 .....	143
<b>21 - Turbocharging/supercharging</b>	<b>145</b>	
1	<b>Exhaust turbocharger .....</b>	<b>145</b>
1.1	Assembly overview - turbocharger .....	145
1.2	Removing and installing turbocharger .....	147
1.3	Removing and installing charge pressure positioner V465 .....	150
<b>2</b>	<b>Charge air system .....</b>	<b>153</b>
2.1	Assembly overview - charge air system .....	153
2.2	Removing and installing charge air cooler .....	154



<b>24 - Mixture preparation - injection</b>	<b>157</b>
1 <b>Injectors</b>	157
1.1 Removing and installing injectors	157
1.2 Renewing seals on injectors	159
2 <b>Air filter</b>	163
2.1 Assembly overview - air filter	163
2.2 Removing and installing air filter	163
3 <b>Intake manifold</b>	165
3.1 Assembly overview - intake manifold, part I	165
3.2 Assembly overview - intake manifold, part II	166
3.3 Removing and installing intake manifold	167
3.4 Removing and installing throttle valve module J338	168
3.5 Cleaning throttle valve module J338	171
4 <b>Senders and sensors</b>	172
4.1 Checking fuel pressure sender G247	172
4.2 Checking fuel pressure regulator and holding pressure	174
5 <b>Engine (motor) control unit</b>	178
5.1 Removing and installing engine (motor) control unit J623	178
5.2 Removing and installing anti-theft engine control unit J623	179
6 <b>High-pressure pump</b>	181
6.1 Assembly overview - high-pressure pump	181
6.2 Removing and installing high-pressure pump	182
<b>26 - Exhaust system</b>	<b>185</b>
1 <b>Exhaust pipes and silencers</b>	185
1.1 Assembly overview - silencers	185
1.2 Separating exhaust pipes from silencers	186
1.3 Installation position of clamp	187
2 <b>Exhaust gas cleaning</b>	189
2.1 Assembly overview - emission control	189
2.2 Assembly overview- emission control, vehicles as of week 22/2011	191
<b>28 - Ignition system</b>	<b>193</b>
1 <b>Ignition system</b>	193
1.1 Assembly overview - ignition system	193
1.2 Test data, spark plugs	194
1.3 Removing and installing engine speed sender G28	195