



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Engine number/engine data | 1 |
| 2 Safety information | 2 |
| 2.1 Safety precautions when working on the cooling system | 2 |
| 2.2 Safety regulations for working on fuel supply | 3 |
| 2.3 Safety precautions when working on ignition system | 4 |
| 2.4 Safety precautions when using testers and measuring instruments during a road test | 4 |
| 2.5 Safety precautions when working on injection system | 4 |
| 3 Technical data | 6 |
| 3.1 Technical data - injection system | 6 |
| 4 Repair instructions | 7 |
| 4.1 Rules for cleanliness when working on fuel supply system/injection system | 7 |
| 4.2 General notes on ignition system | 7 |
| 4.3 General notes on injection | 7 |
| 4.4 Foreign objects in engine | 8 |
| 10 - Removing and installing engine | 9 |
| 1 Removing and installing engine | 9 |
| 1.1 Removing engine | 9 |
| 1.2 Securing engine on engine and gearbox support | 13 |
| 1.3 Installing engine | 14 |
| 2 Assembly mountings | 16 |
| 2.1 Overview - assembly mountings | 16 |
| 13 - Crankshaft group | 18 |
| 1 Cylinder block (pulley end) | 18 |
| 1.1 Assembly overview - poly V-belt drive | 18 |
| 1.2 Assembly overview - cylinder block | 22 |
| 1.3 Removing and installing poly-V belt | 23 |
| 1.4 Renewing crankshaft oil seal - belt pulley end | 25 |
| 1.5 Removing and installing sealing flange on pulley end | 27 |
| 2 Cylinder block, gearbox end | 31 |
| 2.1 Assembly overview - cylinder block, gearbox end | 31 |
| 2.2 Removing and installing sealing flange on gearbox side | 32 |
| 3 Crankshaft | 34 |
| 3.1 Assembly overview - crankshaft | 34 |
| 3.2 Allocation of main bearing shells | 35 |
| 3.3 Removing and installing sender wheel | 36 |
| 3.4 Crankshaft dimensions | 36 |
| 4 Pistons and conrods | 37 |
| 4.1 Assembly overview - pistons and conrods | 37 |
| 4.2 Bearing shells - installation position | 38 |
| 4.3 Checking pistons and cylinder bores | 38 |
| 4.4 Piston and cylinder dimensions | 40 |
| 15 - Cylinder head, valve gear | 41 |
| 1 Cylinder head | 41 |
| 1.1 Assembly overview - cylinder head | 41 |
| 1.2 Removing and installing cylinder head | 43 |
| 1.3 Checking compression | 48 |
| 2 Toothed belt drive | 51 |



| | | |
|---|---|------------|
| 2.1 | Assembly overview - toothed belt drive | 51 |
| 2.2 | Removing and installing toothed belt | 53 |
| 2.3 | Checking semi-automatic toothed belt tensioner | 59 |
| 2.4 | Removing and installing toothed belt guard | 59 |
| 3 | Valve gear | 60 |
| 3.1 | Assembly overview - valve gear | 60 |
| 3.2 | Removing and installing camshaft oil seal | 62 |
| 3.3 | Removing and installing camshaft | 64 |
| 3.4 | Measuring axial play of camshaft | 69 |
| 3.5 | Removing and installing valve stem seals | 69 |
| 3.6 | Checking hydraulic compensation elements | 71 |
| 4 | Inlet and exhaust valves | 73 |
| 4.1 | Reworking valve seats | 73 |
| 4.2 | Checking valve guides | 74 |
| 4.3 | Valve dimensions | 75 |
| 17 - Lubrication | | 76 |
| 1 | Sump, oil pump | 76 |
| 1.1 | Assembly overview - sump/oil pump | 76 |
| 1.2 | Removing and installing oil sump | 79 |
| 1.3 | Removing and installing oil pump | 81 |
| 1.4 | Engine oil: | 81 |
| 2 | Oil filter, oil pressure switch | 83 |
| 2.1 | Assembly overview - oil filter/oil pressure switch | 83 |
| 2.2 | Checking oil pressure and oil pressure switch | 85 |
| 2.3 | Measuring oil consumption | 86 |
| 19 - Cooling | | 88 |
| 1 | Cooling system/coolant | 88 |
| 1.1 | Connection diagram - coolant hoses | 88 |
| 1.2 | Draining and adding coolant | 89 |
| 1.3 | Checking cooling system for leaks | 96 |
| 2 | Coolant pump, regulation of cooling system | 98 |
| 2.1 | Assembly overview - coolant pump, thermostat | 98 |
| 2.2 | Removing and installing coolant pump | 99 |
| 2.3 | Removing and installing thermostat | 101 |
| 3 | Radiator, radiator fan | 103 |
| 3.1 | Assembly overview - radiator/radiator fan | 103 |
| 3.2 | Removing and installing radiator | 104 |
| 3.3 | Removing and installing radiator fan V7 and radiator fan 2 V177 | 106 |
| 24 - Mixture preparation - injection | | 108 |
| 1 | Injection system | 108 |
| 1.1 | Bleeding fuel system | 108 |
| 2 | Injectors | 111 |
| 2.1 | Assembly overview - fuel rail with injectors | 111 |
| 2.2 | Removing and installing injectors | 111 |
| 2.3 | Checking injectors | 112 |
| 3 | Senders and sensors | 117 |
| 3.1 | Checking fuel pressure regulator and holding pressure | 117 |
| 3.2 | Checking fuel pressure regulator and holding pressure | 119 |
| 4 | Intake manifold | 122 |
| 4.1 | Assembly overview - intake manifold | 122 |
| 4.2 | Assembly overview - intake manifold | 124 |



| | | |
|-----------|---|------------|
| 4.3 | Removing and installing lower part of intake manifold | 125 |
| 4.4 | Removing and installing lower part of intake manifold | 127 |
| 4.5 | Removing and installing intake manifold | 129 |
| 4.6 | Removing and installing intake manifold | 133 |
| 4.7 | Checking intake manifold change-over | 136 |
| 5 | Air filter | 138 |
| 5.1 | Assembly overview - air filter housing | 138 |
| 6 | Engine (motor) control unit | 139 |
| 6.1 | Removing and installing engine control unit J623 | 139 |
| 6.2 | Removing and installing anti-theft engine control unit J623 | 140 |
| 26 | - Exhaust system | 142 |
| 1 | Exhaust pipes and silencers | 142 |
| 1.1 | Assembly overview - silencers | 142 |
| 1.2 | Separating exhaust pipes from silencers | 142 |
| 1.3 | Installation position of clamp | 144 |
| 1.4 | Check exhaust system for leaks | 144 |
| 1.5 | Aligning exhaust system free of stress | 144 |
| 2 | Exhaust gas cleaning | 146 |
| 2.1 | Assembly overview - emission control | 146 |
| 2.2 | Removing and installing front exhaust pipe with catalytic converter | 147 |
| 3 | Exhaust gas recirculation | 149 |
| 3.1 | Assembly overview - exhaust gas recirculation | 149 |
| 4 | Secondary air system | 151 |
| 4.1 | Assembly overview - secondary air system | 151 |
| 4.2 | Assembly overview - secondary air system | 152 |
| 4.3 | Function of secondary air system | 153 |
| 4.4 | Checking combination valve | 153 |
| 5 | Exhaust manifold | 155 |
| 5.1 | Removing and installing exhaust manifold | 155 |
| 28 | - Ignition system | 157 |
| 1 | Ignition system | 157 |
| 1.1 | Assembly overview - ignition system | 157 |
| 1.2 | Test data, spark plugs | 158 |